

注意事项

使用本零件表时，请注意以下事项。

1. 订购零件时，请使用本零件表检查确认零件的数量和零件的名称。
2. 需要修理时，请参照本零件表中的插图。
3. 本零件表适用于R15-5 Eco车型。
4. 本零件表如有变更，恕不另行通知。

NOTICE

 
This Parts List is for the following purposes.

1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
2. When making repairs, refer to the illustrations in this Parts List.
3. This Parts List is applicable to the R15-5 Eco model.
4. This Parts List is subject to change without notice.

使用说明
INSTRUCTION

①
K002

阀体部件(动臂)
SPOOL SECTION (BOOM)

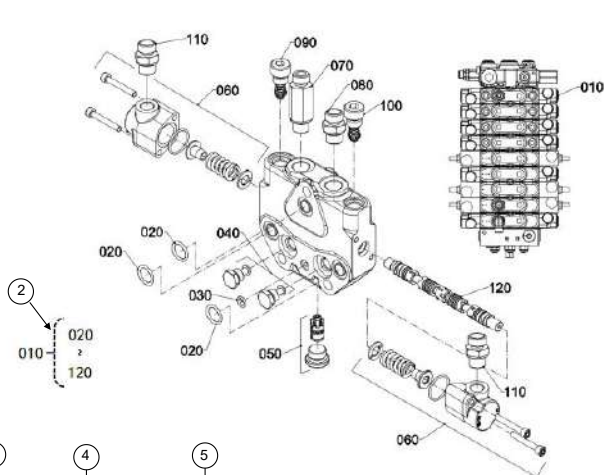

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY./S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1001030020-002		动臂联阀体部件	ASSY VALVE BOOM	1		
020	LP1001030020-014		密封	SEAL	3		
030	LP1001030020-015		密封	SEAL	1		
040	LP1001030020-016		单向阀部件	CHECK VALVE	2		
050	LP1001030020-017		补偿阀部件	COMPENSATING VALVE	1		
060	LP1001030020-018		端盖部件	END COVER	2		


- ① 图号-----代表与每一组名称相对应的数字。
- ② 组件-----供一个装配用的组件可以通过一组虚线识别。
- ③ 序号 (REF. No.) -----参考数字是指在图解说明中特定的零部件由特定的数字代表。在图解中一个零部件的代号可以通过参考零部件目录上的同的参考数字而识别出来。
- ④ 存货编码-----每个零部件独一无二的识别代码, 用于代表该部件。
- ⑤ 零件号-----零部件的规格型号或者该零部件的零件号。
- ⑥ 互换性-----表示由于设计上的变化部件的可互换型。
- 例 ≠ -----表示新老零部件之间不可以替换。
- 例 ← -----表示一个新部件可以替换一个老部件, 相反则不行。
- 例 → -----表示一个老部件可以替换一个新部件, 相反则不行。
- ⑦ 备注-----补充信息, 如油管方向等。
- 例 Z-Z · 14H-0-----表示油管接头两头都是直头, 油管规格是14H, 无特别说明。
- 例 Z-W90 · 14H-0-----表示油管接头一直一弯, 油管规格是14H, 无特别说明。
- 例 W90-W90 · 14H-Y-----表示油管接头两头都是90° 弯头, 油管规格是14H, 弯头方向是一上一右。
- 例 W90-W90 · 22H-F-----表示油管接头两头都是90° 弯头, 油管规格是22H, F表示两个弯头方向相反, T表示两个弯头方向相同。

- ① Fig.No.-----Represents No. corresponding to each group name.
- ② Components-----The components of an assembly are identified by a bracket of dotted lines.
- ③ REF. No. -----Reference numbers assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ④ Inventory Code ----A unique identification code assigned to each part/component, used to represent that specific part/component.
- ⑤ Part Number -----The specification/model of a component or the part number of that component.
- ⑥ I. C. -----Indicates the interchangeability of parts due to design change.
- Example ≠ -----Indicates that the new and old components cannot be replaced with each other.
- Example ← -----Indicates that a new component can replace an old component, but not vice versa.
- Example → -----Indicates that an old component can replace a new component, but not vice versa.
- ⑦ Remarks -----Supplementary information, such as the direction of oil pipes,etc.
- Example Z-Z·14H-0 -----Indicates that both ends of the hydraulic pipe fitting are straight ends, the hydraulic pipe specification is 14H, and there is no special instruction.
- Example Z-W90·14H-0 -----Indicates that the hydraulic pipe fitting has one straight end and one 90° elbow end, the hydraulic pipe specification is 14H, and there is no special instruction.
- Example W90-W90·14H-Y ----Indicates that both ends of the hydraulic pipe fitting are 90° elbow ends, the hydraulic pipe specification is 14H, and the directions of the elbows are one upward and one to the right.
- Example W90-W90·22H-F ----Indicates that both ends of the hydraulic pipe fitting are 90° elbow ends, the hydraulic pipe specification is 22H; "F" means the two elbows are in opposite directions, and "T" means the two elbows are in the same direction.


序 列 号

如下所示，本产品的型号名称、机器号和发动机号在其相应的位置都有说明。请注意，规格不同，它们的位置也不同。请检查产品的规格。

	型号	序列号
挖掘机	_____	_____
发动机	_____	_____
购买日期	_____	_____
经销商名称	_____	
(由购买者填写)		

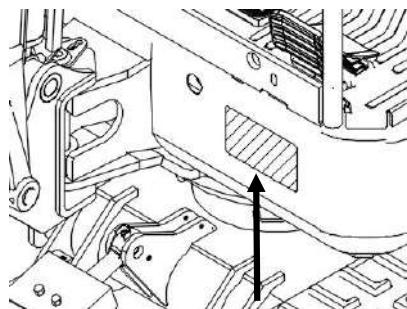 

 SHANDONG RIPPA MACHINERY GROUP CO.,LTD.			
Product Name	Hydraulic Excavator	Model	R15
Engine power(kw)	10.2	Operating Mass(kg)	1445
Serial Number	>LPR25060901<	Year	2025/6
No. 39, Guang'an Road, Liuhang Sub-district,		TEL:+86-0537 2339712	
High-tech Zone, Jining City, 272000 Shandong, P.R. China		Web:www.rippa.com	

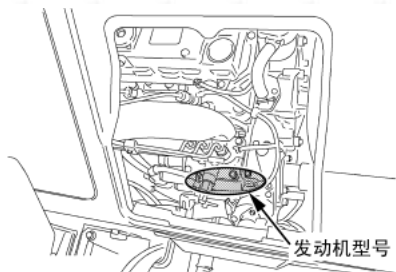 


SERIAL NUMBER


The model name, machine number and engine number of this product are described in their respective positions, as shown below. Note that their positions may be different depending on the specifications. Check the specifications of the product.

	Model	Serial No.
Excavator	_____	_____
Engine	_____	_____
Date of Purchase	_____	_____
Name of Dealer	_____	_____

 (To be filled in by purchaser)

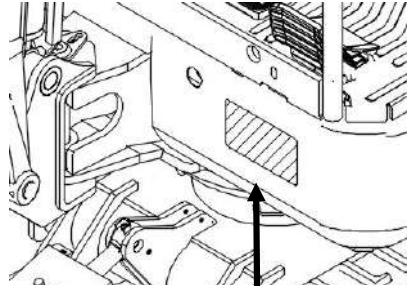


SHANDONG RIPPA MACHINERY GROUP CO.,LTD.			
Product Name	Hydraulic Excavator	Model	R15
Engine power(kw)	10.2	Operating Mass(kg)	1445
Serial Number	>LPR25060901<	Year	2025/6
No. 39, Guang'an Road, Lihang Sub-district,		TEL:+86-0537 2339712	
High-tech Zone, Jining City, 272000 Shandong, P.R. China		Web:www.rippa.com	

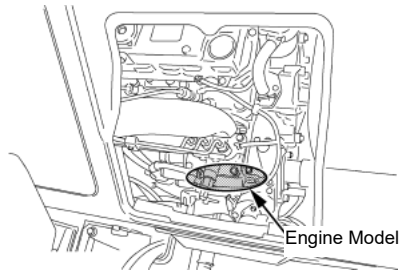 


Engine Model



 

目录部分

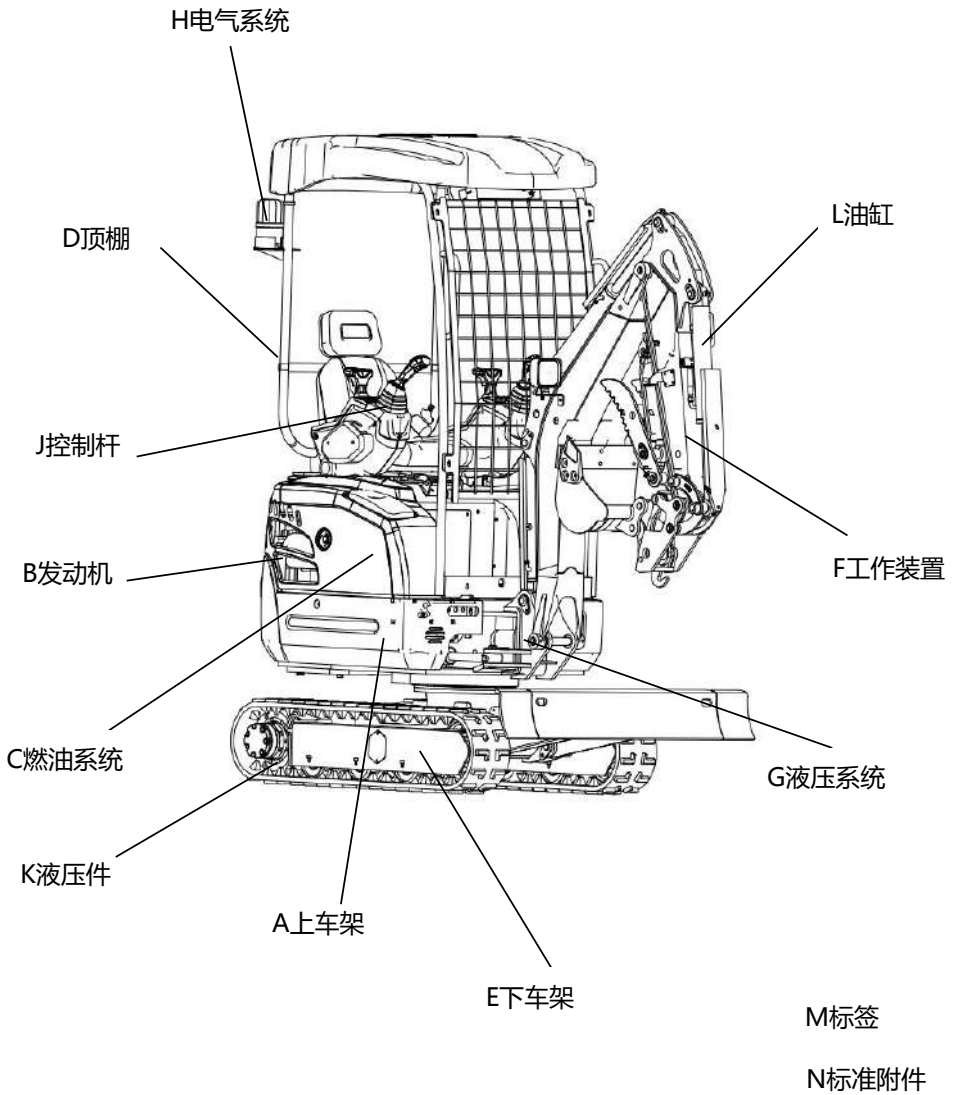

SECTION CONTENTS

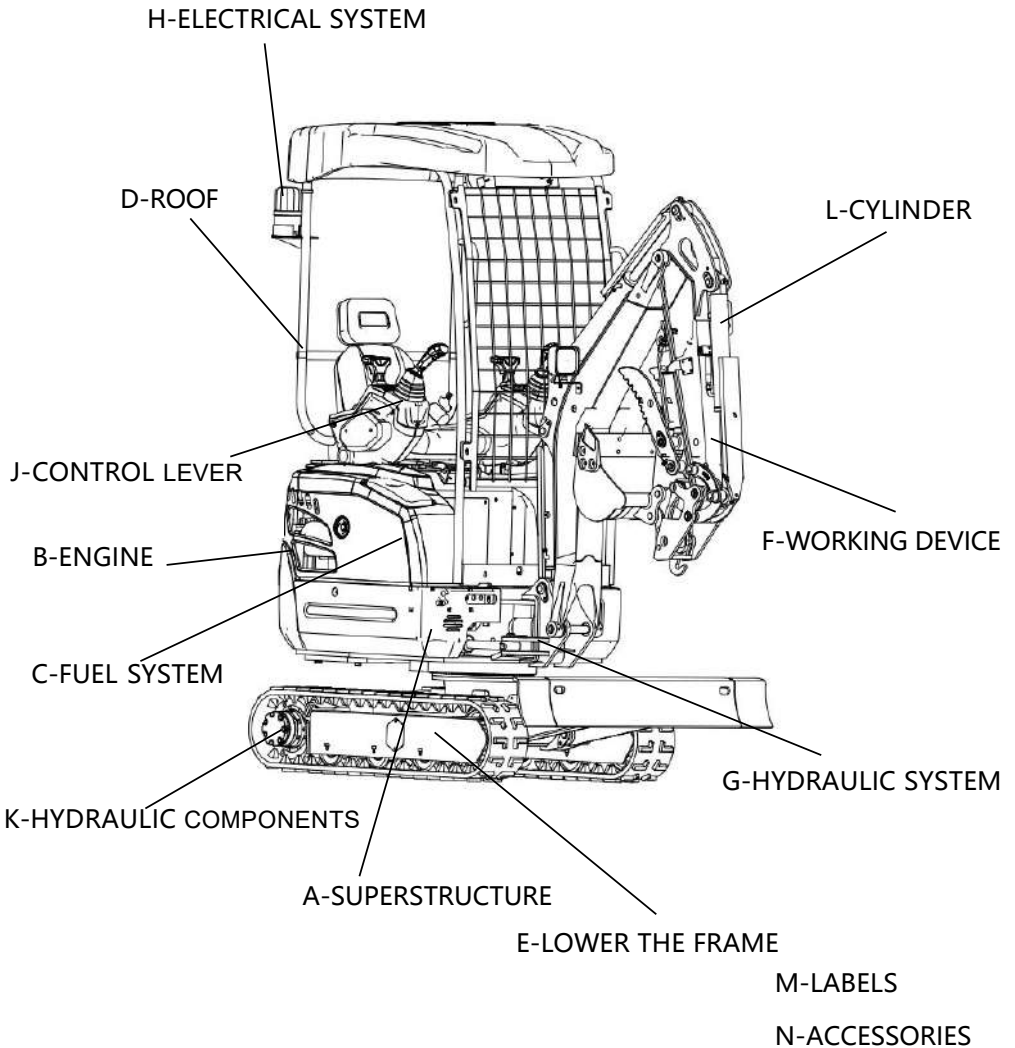 

[如何阅读带图解内容]

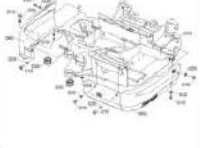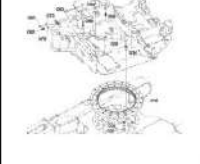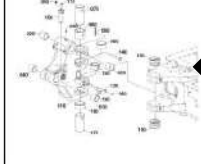   A上车架 ← 步骤1			
SUPERSTRUCTURE			
Fig. No. A001 ← 步骤2	A002	Fig. No. A003 ← 步骤3	
下围护罩	动臂支架	动臂支架	座椅支架
GABIN (PARTITION PLATE)	SWIVEL BEARING	BOOM BRACKET	SESEAT SUPPORT
			
		← 步骤4	

步骤 1：该处指目录中列出的项目。

步骤 2：这些为正文中给出的图号。（图号...0003）

步骤 3：为文本中的名称。

 
 
 

步骤 4：指文本中组件的图解。

如何检索：

在目录部分选择您要查找的项目。在步骤 1 中找到相同的项目。在步骤 4 中找到要查找的件。

在步骤 2 和步骤 3 中，参阅组件的页码并检索相应的部件号。

[How to Read Content with Illustrations]

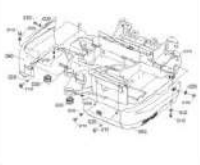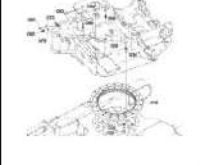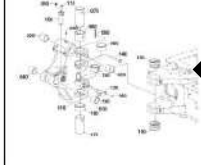A上车架 ← STEP1 SUPERSTRUCTURE			
Fig. No. A001 ← STEP2	A002	Fig. No. A003 ← STEP3	
下围护罩	动臂支承	动臂支架	座椅支承
GABIN (PARTITION PLATE)	SWIVEL BEARING	BOOM BRACKET	SESEAT SUPPORT
			
			← STEP4

Step 1: This refers to the items listed in the table of contents.

Step 2: These are the figure numbers given in the main text.

(Figure No....0003)

 
 
 
 
 
 
 
 
 

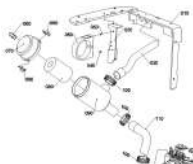 
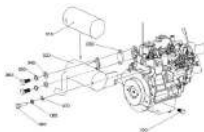 
Step 3: These are the names in the text.

Step 4: This refers to the diagrams of the components in the text.

How to search: Select the item you want to find in the table of contents. Locate the same item in Step 1. Find the part you are looking for in Step 4. In Steps 2 and 3, refer to the page number of the assembly and retrieve the corresponding part number.

 

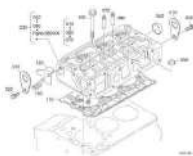 
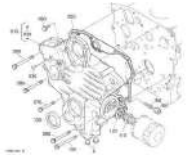 
A上车架

 
 
 
 

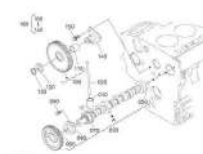 

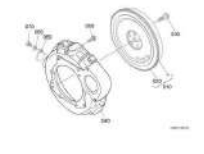 
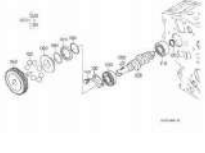 
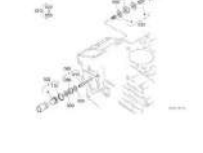 
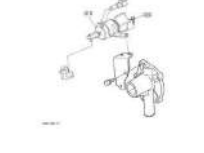 
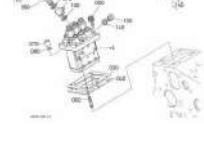 
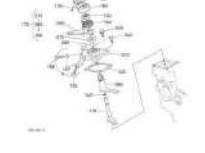 
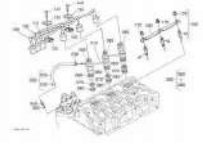 
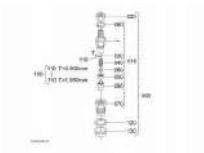 

SUPERSTRUCTURE

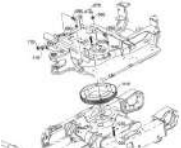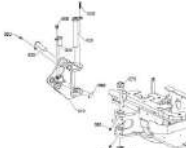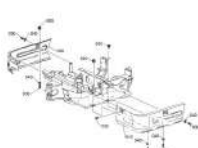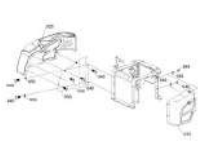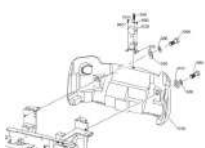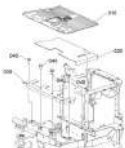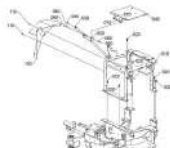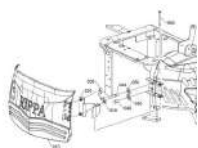

 

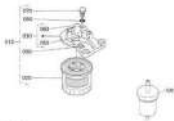 











<p>Fig.No. A001 回转支撑 SWIVEL BEARING</p> 	<p>Fig.No. A002 动臂支架 BOOM BRACKET</p> 	<p>Fig.No. A003 下围护罩 LOWER ENCLOSURE GUARD</p> 	<p>Fig.No. A004 左右护罩 LEFT AND RIGHT GUARDS</p> 
<p>Fig.No. A005 配重 BALANCE WEIGHT</p> 	<p>Fig.No. A006 踏板 PEDAL</p> 	<p>Fig.No. A007 座椅支架 SEAT BRACKET</p> 	<p>Fig.No. A008 后护罩 REAR SHIELD</p> 
<p>Fig.No. A009 座椅护罩 SEAT COVER</p> 	<p>Fig.No. A010 座椅 SEAT</p> 	<p>Fig.No. A011 进气系统 INTIKE SYSTEM</p> 	<p>Fig.No. A012 排气系统 EXHAUST SYSTEM</p> 

          
 
 
 
 
 
 
 
 
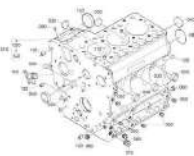 
B发动机

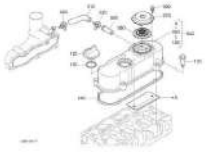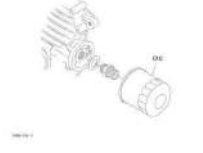 
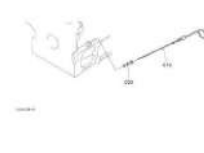 
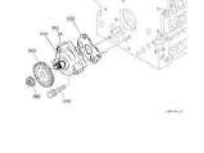 

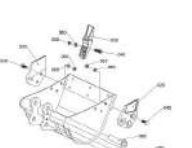 
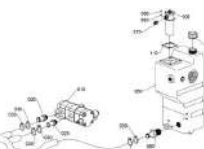 
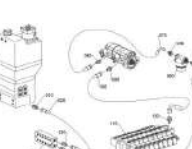 
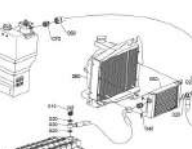 
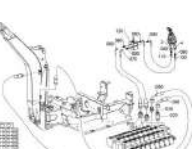 
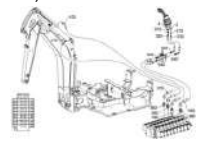 
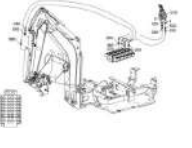 
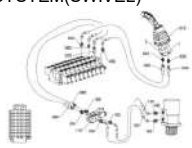 
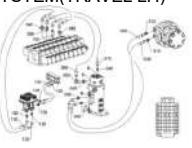 
ENGINE












<p>Fig.No. B001 曲轴箱 CRANKCASE</p> 	<p>Fig.No. B002 油盘 OIL PAN</p> 	<p>Fig.No. B003 油缸头 CYLINDER HEAD</p> 	<p>Fig.No. B004 齿轮箱 CYLINDER HEAD</p> 
---	--	---	---
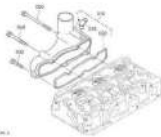
<p>Fig.No. B005 顶盖 HEAD COVER</p> 	<p>Fig.No. B006 机油滤清器 OIL FILTER</p> 	<p>Fig.No. B007 油量计 OIL GAUGE</p> 	<p>Fig.No. B008 油泵 OIL PUMP</p> 
<p>Fig.No. B009 主轴承箱 MAIN BEARING HOUSING</p> 	<p>Fig.No. B010 凸轮轴和中间齿轮轴 CAMSHAFT AND INTERMEDIATE GEAR SHAFT</p> 	<p>Fig.No. B011 活塞和曲柄轴 PISTON AND CRANKSHAFT</p> 	<p>Fig.No. B012 飞轮 FLYWHEEL</p> 
<p>Fig.No. B013 燃油凸轮轴和调速器轴 FUEL CAMSHAFT AND GOVERNOR SHAFT</p> 	<p>Fig.No. B014 怠速限制装置 FUEL IDLE LIMIT DEVICE</p> 	<p>Fig.No. B015 熄火电磁阀 ENGINE SHUT OFF SOLENOID VALVE</p> 	<p>Fig.No. B016 喷射泵 INJECTION PUMP</p> 
<p>Fig.No. B017 调速板 GOVERNOR PLATE</p> 	<p>Fig.No. B018 喷嘴座和电热塞 NOZZLE HOLDER GLOW PLUG</p> 	<p>Fig.No. B019 喷嘴座(分解) NOZZLE HOLDER (DISASSEMBLED)</p> 	<p>Fig.No. B020 叉杆(调速器) FORK LEVER (GOVERNOR)</p> 
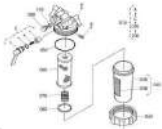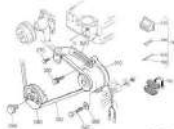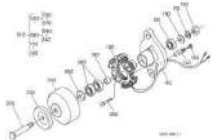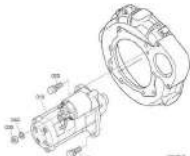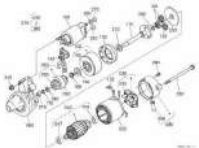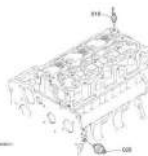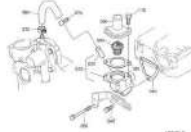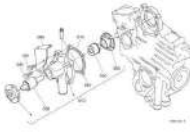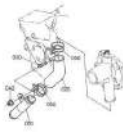
<p>Fig.No. B033 风扇 FAN</p> 	<p>Fig.No. B034 气门和摇臂 VALVE ROCKER ARM</p> 	<p>Fig.No. B035 进气歧管 INTAKE MANIFOLD</p> 	<p>Fig.No. B036 排气歧管 EXHAUST MANIFOLD</p> 
<p>Fig.No. B021 燃油滤清器 FUEL FILTER</p> 	<p>Fig.No. B022 燃油泵 (电磁式) ELECTROMAGNETIC FUEL PUMP</p> 	<p>Fig.No. B023 燃油泵盖 FUEL PUMP COVER</p> 	<p>Fig.No. B024 油水分离器[组成部分] OIL-WATER SEPARATOR</p> 
<p>Fig.No. B025 交流发电机和皮带轮 ALTERNATOR PULLEY</p> 	<p>Fig.No. B026 发电机 (分解) GENERATOR (DISASSEMBLED)</p> 	<p>Fig.No. B027 起动机 STARTER</p> 	<p>Fig.No. B028 起动机 (组成部分) STARTER (COMPONENTS)</p> 
<p>Fig.No. B029 机油开关·温度计和塞 OIL SWITCH TEMPERATURE GAUGE PLUG</p> 	<p>Fig.No. B030 进出水法兰和节温器 INLET AND OUTLET WATER FLANGES THERMOSTA</p> 	<p>Fig.No. B031 水泵 Water Pump</p> 	<p>Fig.No. B032 水管 WATER PIPE</p> 
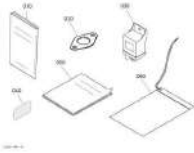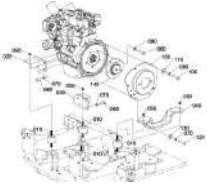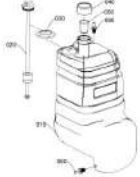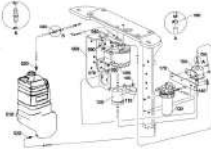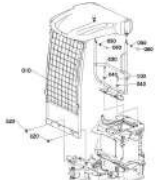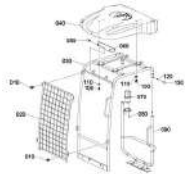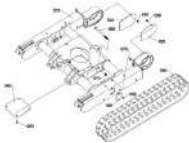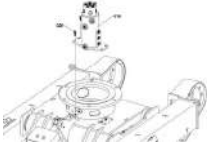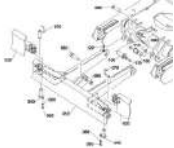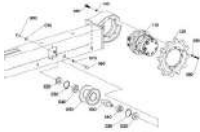
<p>Fig.No. B037</p> <p>标签和使用说明书和附件和服务部 品</p> <p>TAGS, OPERATION MANUALS, ACCESSORIES AND SERVICE PARTS</p> 	<p>Fig.No. B038</p> <p>发动机支座</p> <p>ENGINE MOUN</p> 		
<p>C燃油系统 FUEL SYSTEM</p>			
<p>Fig.No. C001</p> <p>燃油箱</p> <p>FUEL TANK</p> 	<p>Fig.No. C002</p> <p>燃油系统</p> <p>FUEL SYSTEM</p> 		
<p>D顶棚 CEILING</p>			
<p>Fig.No. D001</p> <p>顶棚安装</p> <p>CEILING INSTALLATION</p> 	<p>Fig.No. D002</p> <p>顶棚配件</p> <p>CEILING ACCESSORIES</p> 		
<p>E下车架 LOWER THE FRAME</p>			
<p>Fig.No. E001</p> <p>履带架</p> <p>TRACK FRAME</p> 	<p>Fig.No. E002</p> <p>回转接头</p> <p>ROTARY JOINT</p> 	<p>Fig.No. E003</p> <p>推土铲</p> <p>BULLDOZER BLADE</p> 	<p>Fig.No. E004</p> <p>支重轮</p> <p>ROLLER</p> 
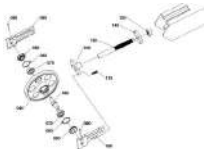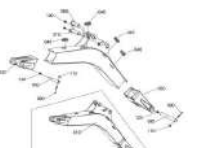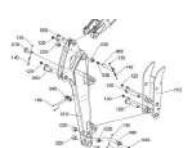
<p>Fig.No. E005 引导轮 IDLER WHEEL</p> 			
<p>F工作装置 WORK DEVICE</p>			
<p>Fig.No. F001 工作装置（动臂） WORK DEVICE (BOOM)</p> 	<p>Fig.No. F002 工作装置（斗杆） WORK DEVICE (STICK)</p> 	<p>Fig.No. F003 工作装置（连杆和快换） WORK DEVICE (CONNECTING & QUICK-CHANGE)</p> 	<p>Fig.No. F004 工作装置（挖斗） WORK DEVICE (BUCKET)</p> 
<p>G液压系统 HYDRAULIC SYSTEM</p>			
<p>Fig.No. G001 液压系统（主进油） HYDRAULIC SYSTEM (MAIN OIL INLET)</p> 	<p>Fig.No. G002 液压系统（输出） HYDRAULIC SYSTEM (DELIVERY)</p> 	<p>Fig.No. G003 液压系统（回流） HYDRAULIC SYSTEM (RETURN)</p> 	<p>Fig.No. G004 液压系统（动臂） HYDRAULIC SYSTEM (BOOM)</p> 
<p>Fig.No. G005 液压系统（斗杆） HYDRAULIC SYSTEM (ARM)</p> 	<p>Fig.No. G006 液压系统（挖斗） HYDRAULIC SYSTEM (BUCKET)</p> 	<p>Fig.No. G007 液压系统(回转) HYDRAULIC SYSTEM(SWIVEL)</p> 	<p>Fig.No. G008 液压系统(左行走) HYDRAULIC SYSTEM(TRAVEL LH)</p> 
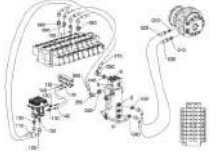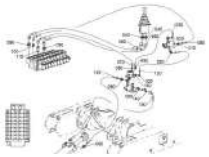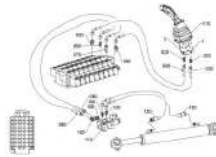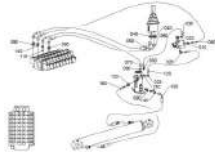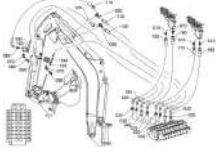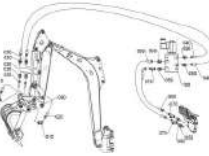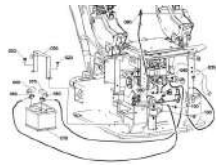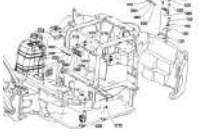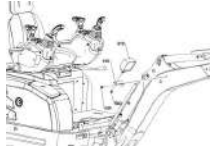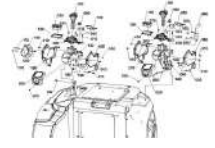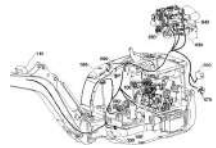           
<p>Fig.No. G009 液压系统(右行走) HYDRAULIC SYSTEM(TRAVEL RH)</p> 	<p>Fig.No. G010 液压系统(推土) HYDRAULIC SYSTEM(BLADE)</p> 	<p>Fig.No. G011 液压系统(偏摆) HYDRAULIC SYSTEM(SWING)</p> 	<p>Fig.No. G012 液压系统(伸缩) HYDRAULIC SYSTEM(TELESCOPI)</p> 
<p>Fig.No. G013 液压系统(破碎) HYDRAULIC SYSTEM(ADD)</p> 	<p>Fig.No. G014 液压系统(快换) HYDRAULIC SYSTEM(QUICK CHANGE)</p> 		
<p>H电气系统 ELECTRICAL SYSTEM</p>			
<p>Fig.No. H001 电气系统(电瓶) ELECTRICAL SYSTEM(BATTERY)</p> 	<p>Fig.No. H002 电气系统(喇叭和继电器) ELECTRICAL SYSTEM(HORN AND RELAY)</p> 	<p>Fig.No. H003 电气系统(灯) ELECTRICAL SYSTEM(LIGHT)</p> 	<p>Fig.No. H004 电气系统(扶手箱) ELECTRICAL SYSTEM(ARMREST BOX)</p> 
<p>Fig.No. H005 电气系统(元件) ELECTRICAL SYSTEM(COMPONENT)</p> 			

J操作杆
CONTROL LEVER

Fig.No. J001
先导手柄(左手柄)
)
**CONTROL LEVER
(LEVER LH)**

Fig.No. J002
先导手柄(右手柄)
)
**CONTROL LEVER
(LEVER RH)**

Fig.No. J003
破碎脚踏
BROKEN PEDAL

Fig.No. J004
行走阀、杆
WALKING VALVE, ROD

K液压件
HYDRAULIC COMPONENTS

Fig.No. K000
多路阀
SPMULTI-WAY VALVE

Fig.No. K001
阀体部件(进油)
**SPOOL SECTION(OIL
INLET)**

Fig.No. K002
阀体部件(回转)
SPOOL SECTION(SWING)

Fig.No. K003
阀体部件(动臂)
SPOOL SECTION(BOOM)

Fig.No. K004
阀体部件(挖斗)
SPOOL SECTION(BUCKET)

Fig.No. K005
阀体部件(斗杆)
SPOOL SECTION(ARM)

Fig.No. K006
阀体部件(右行走)
**SPOOL SECTION(DRIVE
RH)**


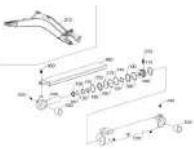 
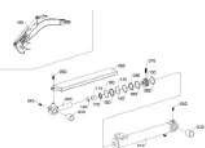 
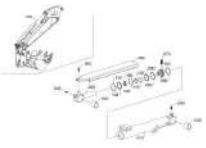 
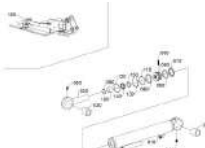 
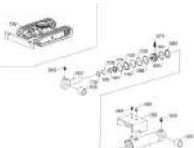 
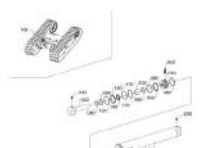 
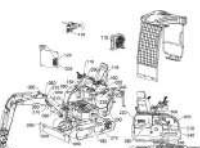 

Fig.No. K007
阀体部件(左行走)
**SPOOL SECTION(DRIVE
LH)**

Fig.No. K008
阀体部件(破碎)
**SPOOL
SECTION(CRUSHING)**

Fig.No. K009
阀体部件(推土)
SPOOL SECTION(BLADE)


Fig.No. K010
齿轮泵和零件
GEAR PUMP AND PARTS

Fig.No. K011
回转马达
ROYTARY MOTOR

<p>Fig.No.K012 行走马达 TRAVELING MOTOR</p> 			
<p>L油缸 CYLINDER</p>			
<p>Fig.No. L001 油缸 (动臂) BOOM CYLINDER</p> 	<p>Fig.No. L002 油缸 (斗杆) ARM CYLINDER</p> 	<p>Fig.No. L003 油缸 (挖斗) BUCKET CYLINDER</p> 	<p>Fig.No. L004 油缸 (动臂偏摆) BOOM SWING CYLINDER</p> 
<p>Fig.No. L005 油缸 (推土) BULLDOZER HYDRAULIC CYLINDER</p> 	<p>Fig.No. L006 油缸 (伸缩) TLESCOPIC HYDRAULIC CYLINDER</p> 		
<p>M标签 LABELS</p>			
<p>Fig.No. M001 标签 LABEL</p> 	<p>Fig.No. M002 标签 LABEL</p> 		


N标准附件
ACCESSORIES

 Fig.No.
N001 标准附件
ACCESSORIES



A008

 
后护罩
REAR SHIELD

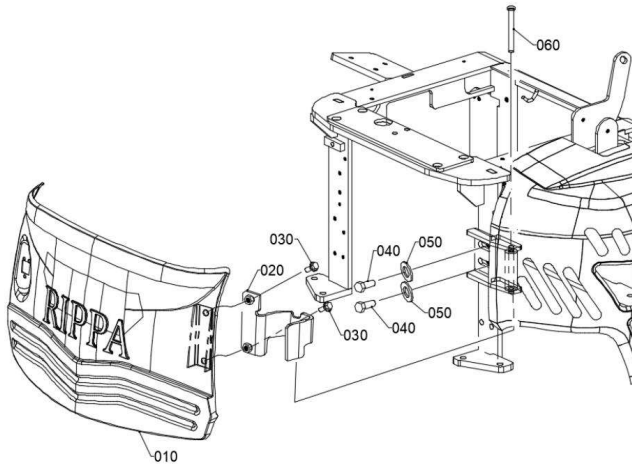

序号 RF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112013050		后护罩	REAR SHIELD	1		
020	LP0112010309		护罩铰接	SHIELD HINGE	1		
030	LP0116011016	M10*16	法兰螺栓	FLANGE BOLT	2		
040	LP0116011842	M12*30	螺栓	BOLT	2		
050	LP0116011788	M12	垫片	GASKET	2		
060	LP0107021869		销	PIN	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
**A009 座椅护罩
SEAT COVER**

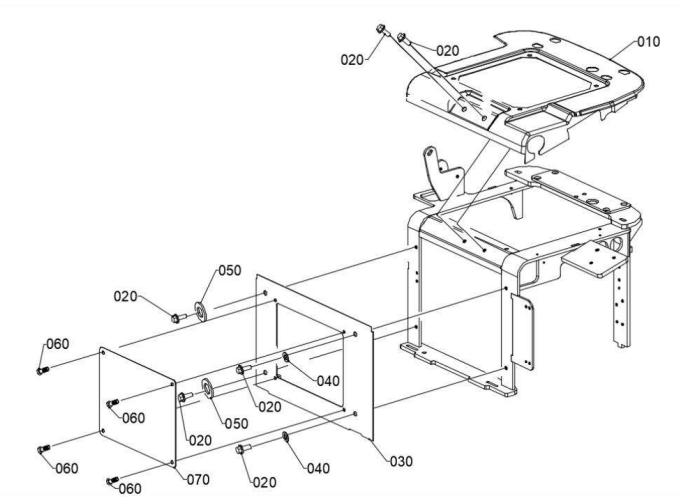

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互换 性 I. C.	备注 REMARKS
010	LP0112011776		座椅护罩	SEAT COVER	1		
020	LP0116011672	M10*20	法兰螺栓	BOLT	6		
030	LP0112014804		护板	FENDER	1		
040	LP0116011715	M10	垫片	GASKET	2		
050	LP0116010597	M10	大垫片	GASKET	2		
060	LP0116011708	M8*16	螺栓	BOLT	4		
070	LP0112014805		护板	FENDER	1		

↔ 可互换 ; ⚠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
A011 进气系统 INTAKE SYSTEM

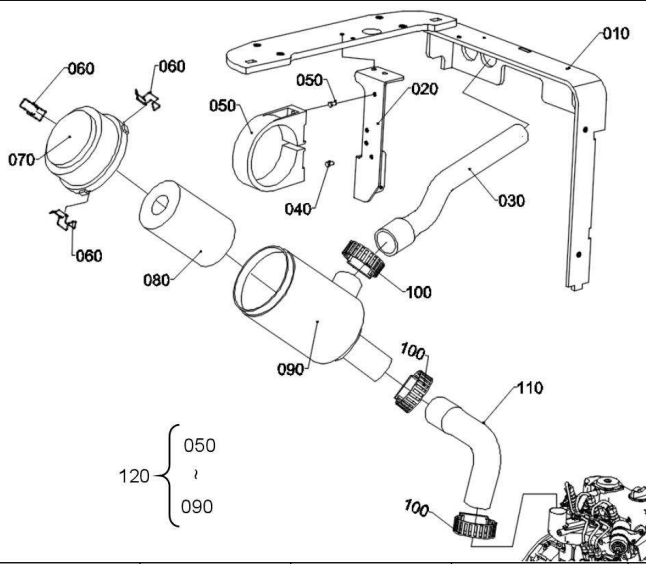

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互换性 I. C.	备注 REMARKS
010	LP0112013922		排气管固定架	EXHAUST PIPE BRACKET	1		
020	LP0112014640		空滤安装支架	INSTALLATION BRACKET	1		
030	LP1013010022-001		空滤排气管	EXHAUST PIPE	1		
040	LP0116011708	M8×16	螺栓	BOLT	2		
050	LP1011010005-005		卡箍	CLAMP	1		
060	LP1011010005-003		固定卡扣	FIXED BUCKLE	3		
070	LP1011010005-004		空滤安装盖	AIR FILTER COVER	1		
080	LP1011010005-002		空气滤芯内芯	AIR FILTER CORE	1		
090	LP1011010005-001		空气滤芯腔	AIR FILTER CHAMBER	1		
100	LP0116010073		管夹	PIPE CLAMP	3		
110	LP1013010022-002		空滤进气管	INTAKE PIPE	1		
120	LP0111010005		空气滤清器	AIR FILTER ELEMENT	1		

↔ 可互换 ; ✗ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
A012 排气系统 EXHAUST SYSTEM

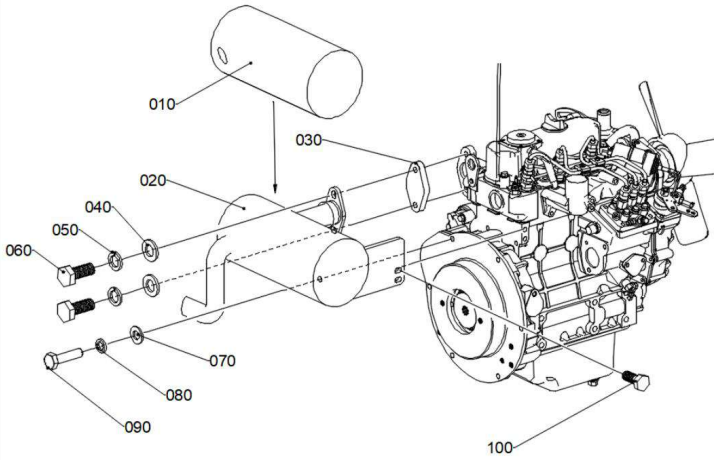

序号 REF.No	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0114020028		消音器隔热棉	HI COTTON	1		
020	LP0114010056		消音器	MUFFER	1		
030	LP0114020041		石棉垫	ASBESTOS PAD	1		
040	LP0116011715	M10	垫片	GASKET	2		
050	LP0116011720	M10	垫片	GASKET	2		
060	LP0116011673	M10*25	螺栓	BOLT	2		
070	LP0116011718	M8	垫片	GASKET	1		
080	LP0116011724	M8	垫片	GASKET	1		
090	LP0116011841	M8*30	螺栓	BOLT	1		
100	LP0116011841	M8*20	螺栓	BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B001 曲轴箱 CRANKCASE

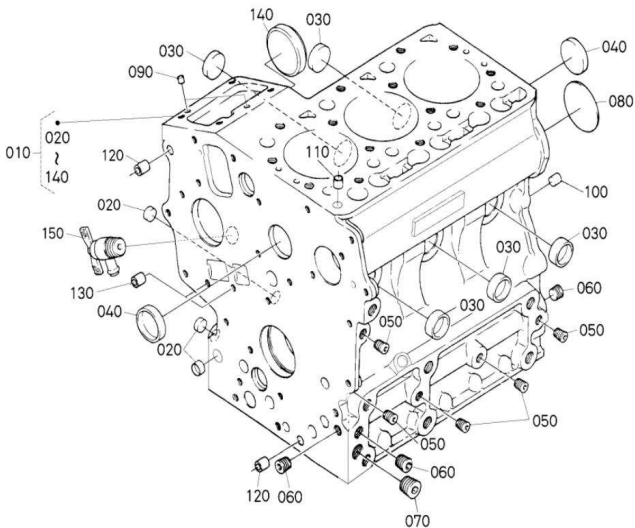

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-153	1J021-01023	曲柄箱, 部件	CRANKCASE, COMPONENT	1		
020	LP0103020002-003	16851-96260	密封盖	SEAL COVER	3		
030	LP0103020002-004	16851-96270	帽	GAP	5		
040	LP1003020004-003	15451-96270	密封盖	SEALING COVER	2		
050	LP1003020004-005	15261-96010	塞子	PLUG	5		
060	LP1003020004-041	15521-96020	塞子	PLUG	3		
070	LP0103020002-006	15521-96030	塞子	PLUG	1		
080	LP0103020002-007	15261-96160	膨胀塞	EXPANSION PLUG	1		
090	LP1003020004-010	05012-00508	平行销	PARALLEL PIN	2		
100	LP1003020004-011	05012-00814	平行销	PARALLEL PIN	2		
110	LP0103020002-008	15221-33650	管销	TUBE PIN	1		
120	LP0103020002-009	17331-59190	管销	TUBE PIN	2		
130	LP0103020002-009	17331-59190	管销	TUBE PIN	2		
140	LP0103020002-010	16851-16212	燃油凸轴轴盖	FUEL CAMSHAFT COVER	1		
150	LP1003020004-021	16871-73020	排油旋塞组件	OIL DRAIN COCK	1		
150	LP1003020003-001	16171-73020	旋塞	COCK	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B002 油盘 OIL PAN

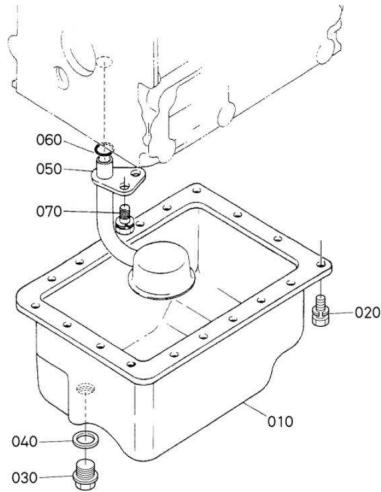

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-002	15862-01500	油泵组件	OIL PUMP ASSEMBLY	1		
020	LP1003020004-025	01023-50614	螺栓	BOLT	18		
030	LP1003020004-023	13901-33750	塞子	PLUG	1		
040	LP1003020004-425	60090-58960	密封垫圈	SEALING WASHER	1		
050	LP1003020002-013	16851-32110	油过滤器	OIL FILTER	1		
060	LP1003020004-028	04814-00160	O型密封圈	O-RING	1		
070	LP1003020004-032	01123-50814	螺栓	BOLT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B003 油缸头
CYLINDER HEAD

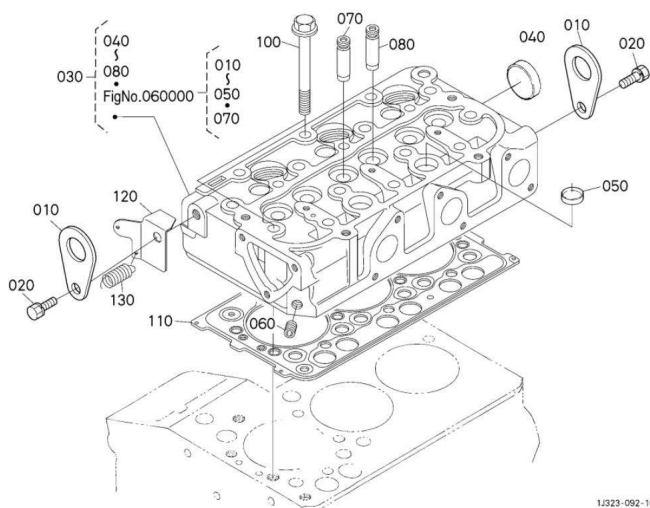

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY./S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-014	15221-01750	发动机吊钩	LIFTING HOOK	2		
020	LP1003020004-027	01123-50816	螺栓	BOLT	2		
030	LP1003020003-003	1A305-03020	连接头组件	CONNECTOR ASSEMBLY	1		
040	LP1003020004-034	15321-96260	杯型塞	CUP PLUG	1		
050	LP1003020004-037	15261-03370	杯型塞	CUP PLUG	2		
060	LP1003020004-005	15261-96010	塞子	PLUG	1		
070	LP1003020002-017	15841-13540	进气阀套筒	INTAKE VALVE SLEEVE	3		
080	LP1003020002-018	15841-13560	排气阀套筒	EXHAUST VALVE SLEEVE	3		
100	LP1003020002-020	1J080-03450	螺栓	BOLT	14		
110	LP1003020003-004	1J092-03310	油缸头垫片	CYLINDER HEAD GASKET	1		
120	LP1003020002-022	16667-57692	支架	BRACKET	1		
130	LP1003020002-023	19837-57923	回位弹簧	RETURN SPRING	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 B004 齿轮箱 GEARBOX

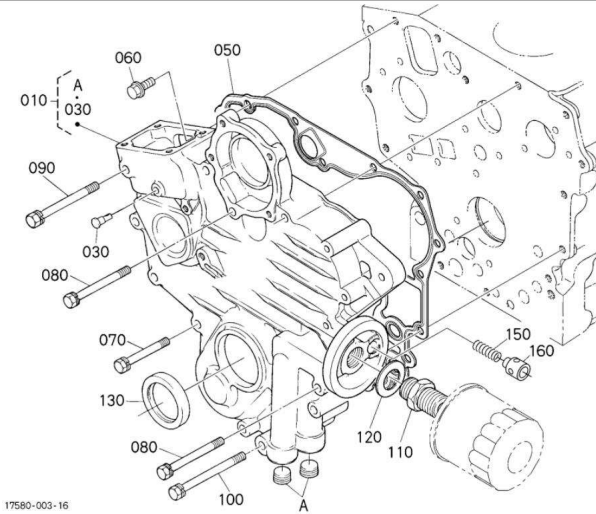


17580-003-16

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-005	1E009-04025	齿轮箱部件	GEARBOX COMPONENT	1		
030	LP1003020003-006	15841-56280	启动弹簧销	STARTER SPRING PIN	1		
050	LP1003020003-007	16851-04130	齿轮箱垫片	GEARBOX GASKET	1		
060	LP1003020004-383	01754-50616	法兰螺栓	FLANGE BOLT	1		
070	LP1003020004-051	01023-50650	螺栓	BOLT	10		
080	LP1003020002-035	15841-91010	螺栓	BOLT	3		
090	LP1003020003-008	01023-50670	螺栓	BOLT	1		
100	LP1003020003-009	01023-50675	螺栓	BOLT	1		
110	LP1003020004-043	15241-32290	管接头	PIPE FITTING	1		
120	LP1003020002-029	15841-94010	平垫圈	FLAT WASHER	1		
130	LP1003020002-038	1J094-04140	油封	OIL SEAL	1		
150	LP1003020002-031	1J092-36950	弹簧	SPRING	1		
160	LP1003020004-045	1J050-36930	溢流阀	RELIEF VALVE	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

 
B005 顶盖 TOP COVER

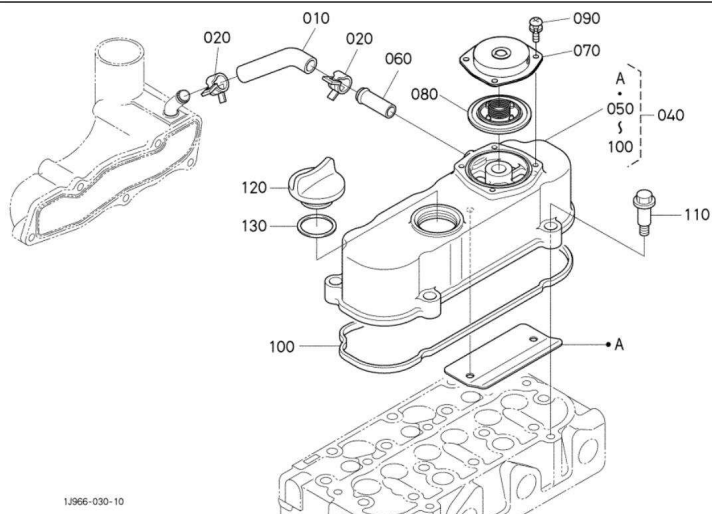

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-039	1G960-05514	管	PIPE	1		
020	LP1003020002-040	09318-88125	软管固定夹	HOSE CLAMP	2		
040	LP1003020003-010	1G958-14504	气缸头盖组件	CYLINDER HEAD COVER	1		
050	LP1003020003-011	1G958-14512	汽缸头盖	CYLINDER HEAD COVER	1		
060	LP1003020004-339	16241-73370	回水管	RETURN WATER PIPE	1		
070	LP1003020004-064	1G801-05120	通气盖	BREATHER COVER	1		
080	LP1003020004-063	1G911-05203	通气阀组件	BREATHER VALVE	1		
090	LP1003020004-065	03024-50510	带垫圈小螺丝	SCREW WITH WASHER	4		
100	LP1003020003-012	1G958-14520	顶盖衬垫	TOP COVER GASKET	1		
110	LP1003020002-043	1G911-91022	螺栓	BOLT	4		
120	LP1003020004-069	E9151-33140	塞油 滤芯	OIL PLUG OFC	1		
130	LP1003020004-070	1J001-96770	O型密封圈	O-RING	1		

(↔) 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B007 油量表 OIL LEVEL GAUGE

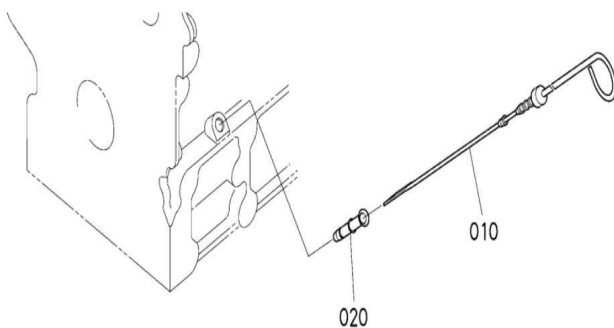

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互换性 I.C.	备注 REMARKS
010	LP1003020003-013	1K177-36410	油位标杆	OIL LEVEL GAUGE	1		
020	LP1003020002-048	17456-36420	机油尺导管	OIL DIPSTICK TUBE	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
**B008 油泵
OIL PUMP**

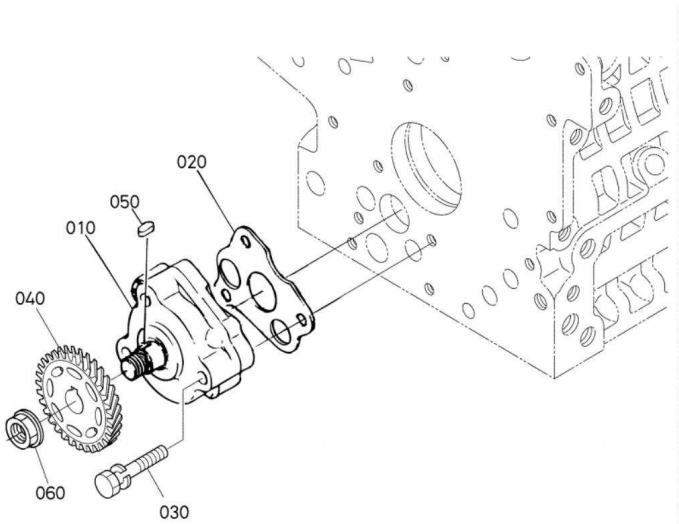

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-049	16851-35012	机油泵组件	OIL PUMP ASSEMBLY	1		
020	LP1003020002-050	16851-35152	密封垫圈, 油泵	OIL PUMP GASKET	1		
030	LP1003020002-051	15841-91050	螺栓	BOLT	3		
040	LP1003020002-052	16687-35662	油泵传动齿轮	OIL PUMP DRIVE GEAR	1		
050	LP1003020002-053	05712-00408	滑键	WOODRUFF KEY	1		
060	LP1003020002-054	02771-50100	法兰螺母	FLANGE NUT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B009 主轴承箱 MAIN BEARING HOUSING

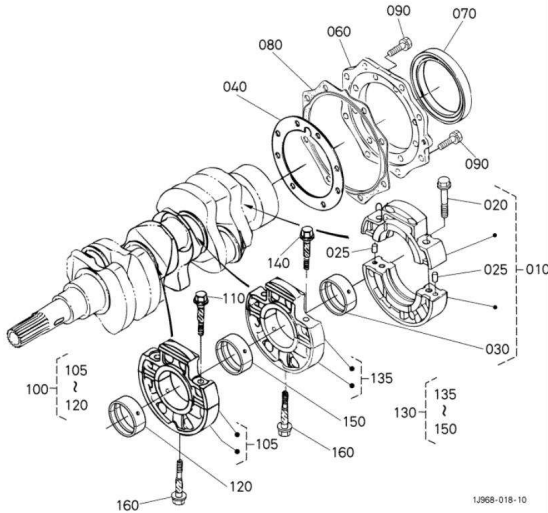

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.N o.	互 换 性 I C	备注 REMARKS
010	LP1003020002-055	1J002-07090	轮毂轴承箱总成	HUB BEARING HOUSING	1		
020	LP1003020002-056	01754-50840	法兰螺栓	FLANGE BOLT	2		
025	LP1003020002-057	05012-00608	平行销	PARALLEL PIN	2		
030	LP1003020003-014	15694-23482	曲柄轴金属件	CRANKSHAFT METAL	1		
030	LP1003020003-015	15694-23932	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 20mm
030	LP1003020003-016	15694-23942	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 40mm
040	LP1003020002-061	15852-04360	密封垫圈	GASKET	1		
060	LP1003020002-062	15841-04815	轴承箱盖	BEARING HOUSING COVER	1		
070	LP1003020002-063	16460-04460	油封	OIL SEAL	1		
080	LP1003020002-064	15841-04823	密封垫圈	GASKET	1		
090	LP1003020002-066	01023-50622	螺栓	BOLT	16		
100	LP1003020003-017	12691-07045	轴承箱, 总组件	BEARING HOUSING	1		
105	LP1003020003-018	16851-04040	主轴承箱总成	MAIN BEARING HOUSING	1		
110	LP1003020003-019	15841-04543	螺栓	BOLT	2		
120	LP1003020003-020	15861-23484	曲柄轴金属件	CRANKSHAFT METAL	1		
120	LP1003020003-021	15861-23863	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 20mm
120	LP1003020003-022	15861-23873	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 40mm
130	LP1003020003-023	16861-07055	轴承箱, 总组件	BEARING HOUSING	1		
135	LP1003020003-024	16861-04050	主轴承箱总成	MAIN BEARING HOUSING	1		
140	LP1003020003-019	15841-04543	螺栓	BOLT	2		
150	LP1003020003-020	15861-23484	曲柄轴金属件	CRANKSHAFT METAL	1		
150	LP1003020003-021	15861-23863	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 20mm
150	LP1003020003-022	15861-23873	曲柄轴金属件	CRANKSHAFT METAL	1		-0. 40mm
160	LP1003020002-071	15841-04562	轴承箱螺栓	BEARING HOUSING BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B010 凸轮轴和中间齿轮轴 CAMSHAFT IDLER GEAR SHAFT

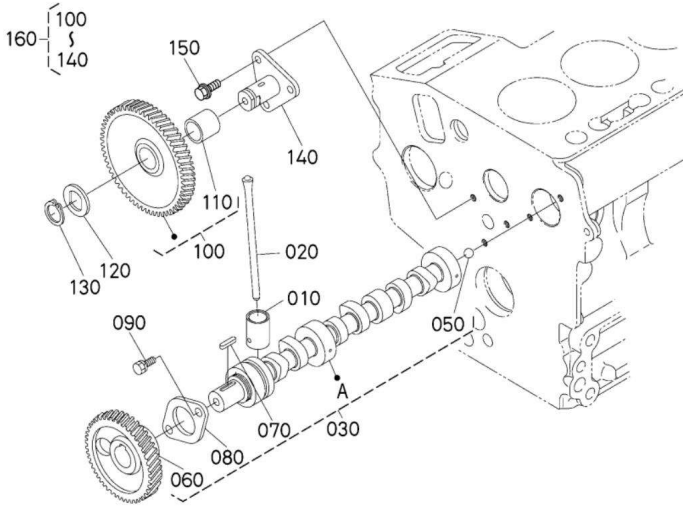

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互换性 I. C.	备注 REMARKS
010	LP1003020002-072	16851-15552	挺杆	TAPPET	6		
020	LP1003020002-073	16851-15110	杆	ROD	6		
030	LP1003020003-029	1A092-16010	凸轮轴总成	CAMSHAFT ASSEMBLY	1		
030	LP1003020003-030	1G408-16010	凸轮轴总成	CAMSHAFT ASSEMBLY	1		
050	LP1003020004-091	07715-00401	球	BALL	1		
060	LP1003020002-075	1G687-16510	凸轮轴齿轮	CAMSHAFT GEAR	1		
070	LP1003020004-093	05712-00518	滑键	SLIDING KEY	1		
080	LP1003020002-076	15841-16270	凸轮轴止动板	CAMSHAFT STOP PLATE	1		
090	LP1003020004-229	01023-50612	螺栓	BOLT	2		
100	LP1003020002-077	15875-24015	中间齿轮组件	INTERMEDIATE GEAR	1		
110	LP1003020002-078	15875-24284	衬套	BUSHING	1		
120	LP1003020002-079	15875-24370	中间齿轮轴环	GEAR COLLAR	1		
130	LP1003020002-080	15875-24320	卡销	DOWEL PIN	1		
140	LP1003020002-081	15875-24250	换挡器,惰轮	SHIFTER, IDLER	1		
150	LP1003020002-082	01754-50612	法兰螺栓	FLANGE BOLT	3		
160	LP1003020002-083	15875-99342	中间齿轮组件	INTERMEDIATE GEAR	1		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

 B011

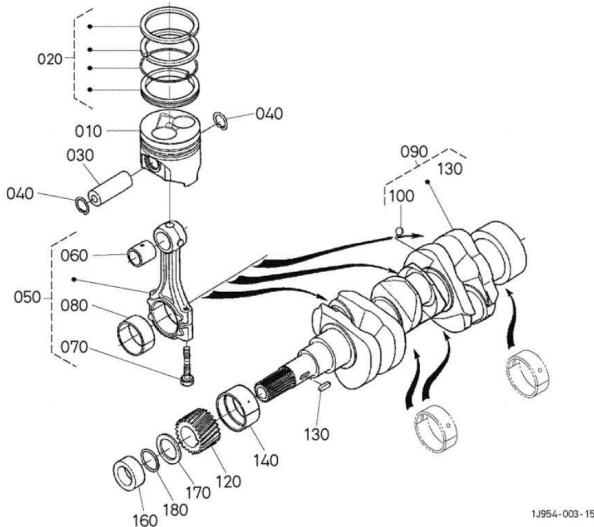
活塞 / 曲柄轴
PISTON/CRANKSHAFT

序号 REF.No	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.No.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-031	1J092-21110	活塞	PISTON	3		
010	LP1003020003-032	1J092-21900	活塞	PISTON	3		
020	LP1003020003-033	1J092-21050	活塞环组件	PISTON RING ASSEMBLY	3		
020	LP1003020003-034	1J092-21090	活塞环组件	PISTON RING ASSEMBLY	3		
030	LP1003020002-088	16871-21310	销	PIN	3		
040	LP1003020002-089	15261-21330	活塞销卡环	PPSR	6		
050	LP1003020002-090	16687-22010	连杆总成	CONNECTING ROD	3		
060	LP1003020002-091	16851-21982	活塞销轴套	PISTON PIN BUSHING	3		
070	LP1003020002-092	16851-22140	连杆螺栓	CONNECTING ROD BOLT	6		
080	LP1003020002-093	15861-22314	金属销	METAL PIN	3		
080	LP1003020002-094	15861-22973	金属销	METAL PIN	3		
080	LP1003020002-095	15861-22983	金属销	METAL PIN	3		
090	LP1003020003-035	16861-23012	曲轴组件	CRANKSHAFT ASSEMBLY	1		
090	LP1003020003-036	16861-23016	曲轴组件	CRANKSHAFT ASSEMBLY	1		
100	LP1003020002-097	07715-03207	球	BALL	3		
120	LP1003020002-098	15841-24110	曲轴齿轮	CRANKSHAFT GEAR	1		
130	LP1003020002-099	05712-00515	滑键	WOODRUFF KEY	1		
140	LP1003020003-037	15861-23474	曲柄轴金属件	CRANKSHAFT METAL	1		
140	LP1003020003-038	15861-23913	曲轴瓦座	PPSR	1		
140	LP1003020003-039	15861-23923	曲轴瓦座	PPSR	1		
160	LP1003020002-103	15841-23250	曲轴轴环	CRANKSHAFT COLLAR	1		
170	LP1003020002-104	15881-23310	油封	OIL SEAL	1		
180	LP1003020002-105	04814-16220	O型密封圈	O-RING	1		

(←) 可互换; (→) 不可互换; (←) 以新换旧; (→) 以旧换新

B012

 
飞轮 FLYWHEEL

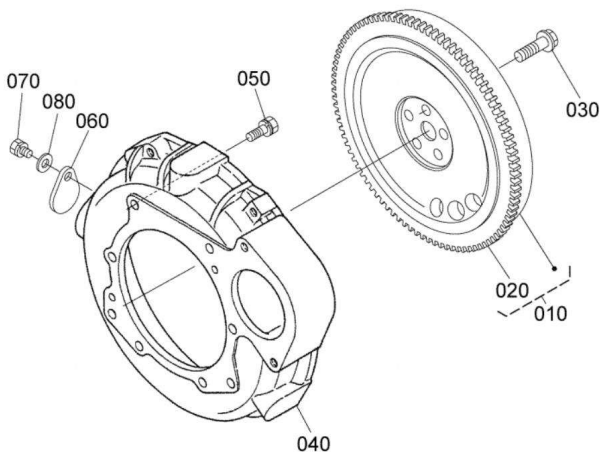

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I C.	备注 REMARKS
010	LP1003020003-040	16861-25020	飞轮组件	FLYWHEEL ASSEMBLY	1		
020	LP1003020002-107	16871-63822	环形齿轮	RING GEAR	1		
030	LP1003020002-108	15852-25160	螺栓	BOLT	5		
040	LP1003020003-041	15847-04612	飞轮壳体	FLYWHEEL HOUSING	1		
050	LP1003020003-042	01123-50820	螺栓	BOLT	8		
060	LP1003020003-043	31220-14170	盖	COVER	1		
070	LP1003020004-032	01123-50814	螺栓	BOLT	1		
080	LP1003020003-044	04013-50080	平垫圈	FLAT WASHER	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B014 怠速限制装置 IDLE LIMIT VALVE

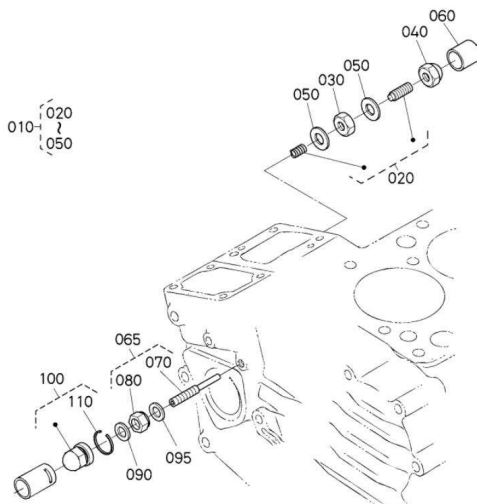

序号 Ref. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-123	15841-54092	设备组件	EQUIPMENT ASSEMBLY	1		
020	LP1003020002-124	15841-54100	调节螺栓组件	ADJUSTING BOLT	1		
030	LP1003020002-125	15261-92020	螺帽	NUT	1		
040	LP1003020002-126	15841-54220	螺帽	NUT	1		
050	LP1003020004-020	15021-33660	垫片	GASKET	2		
060	LP1003020002-127	15841-54270	盖	COVER	1		
065	LP1003020002-128	1J094-54350	螺栓组件	BOLT ASSEMBLY	1		
070	LP1003020002-129	15841-54123	调节螺栓	ADJUSTING BOLT	1		
080	LP1003020004-144	1J094-54210	螺母	NUT	1		
090	LP1003020004-141	15601-96650	垫片	GASKET	1		
095	LP1003020004-141	15601-96650	垫片	GASKET	1		
100	LP1003020002-130	1J094-54380	调节螺栓组件	ADJUSTING BOLT	1		
110	LP1003020004-146	1J094-54280	内卡环	INTERNAL CIRCLIP	1		

↔ 可互换 ; ≢ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B015

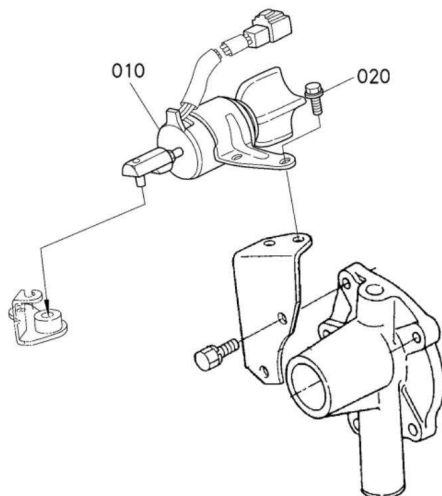熄火电磁阀
FLAMEOUT SOLENOID VALVE

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-047	17520-60013	止动螺线管	STOP SOLENOID	1		
020	LP1003020002-082	01754-50612	法兰螺栓	FLANGE BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 B016 喷射泵 INJECTION PUMP

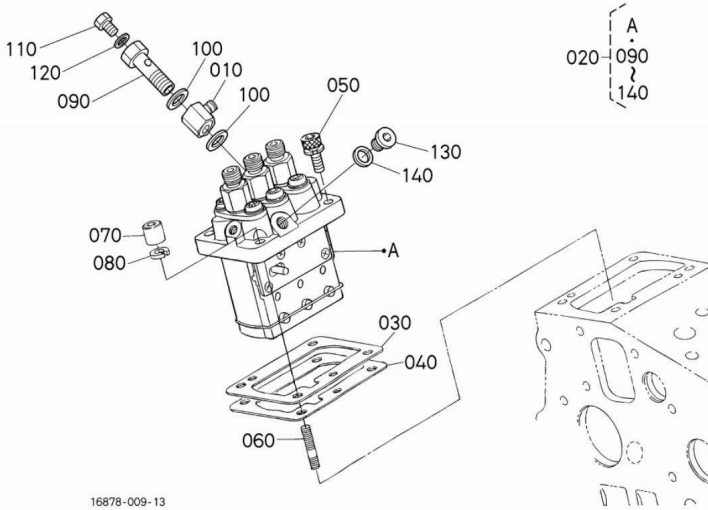


16878-009-13

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-048	15841-95684	旋转管接头	ROTARY PIPE JOINT	1		
020	LP1003020003-049	16006-51012	喷射泵总成	INJECTION PUMP	1		
030	LP1003020006-032	16700-52200	喷射垫片	INJECTION GASKET	1		0.175mm
030	LP1003020006-033	16006-52092	喷射泵垫片	INJECTION PUMP GASKET	1		0.200mm
030	LP1003020006-034	16006-52112	喷射泵垫片	INJECTION PUMP GASKET	1		0.250mm
040	LP1003020006-035	16006-52122	喷射泵垫片	INJECTION PUMP GASKET	1		0.300mm
040	LP1003020006-036	16700-52160	喷射泵垫片	INJECTION PUMP GASKET	1		0.350mm
050	LP1003020004-158	16871-91060	内六角螺栓	HEX SOCKET BOLT	2		
060	LP1003020004-159	15841-91500	双头螺栓	STUD BOLT	2		
070	LP1003020004-160	15841-92320	盖形螺帽	CAP NUT	2		
080	LP1003020004-161	04512-50060	弹垫圈	SPRING WASHER	2		
090	LP1003020002-137	15841-51320	空心螺栓	HOLLOW BOLT	1		
100	LP1003020004-163	15841-96650	密封垫片	SEALING GASKET	2		
110	LP1003020004-164	15841-51350	放气阀螺钉	BLEEDER VALVE SCREW	1		
120	LP1003020004-165	15841-96660	密封垫片	SEALING GASKET	1		
130	LP1003020006-037	16030-96010	塞	PLUG	1		
140	LP1003020006-038	15861-96650	密封垫片	SEALING GASKET	1		

↔ 可互换; ⇄ 不可互换; ← 以新换旧; → 以旧换新

 B017 调速板 SPEED GOVERNING PLATE

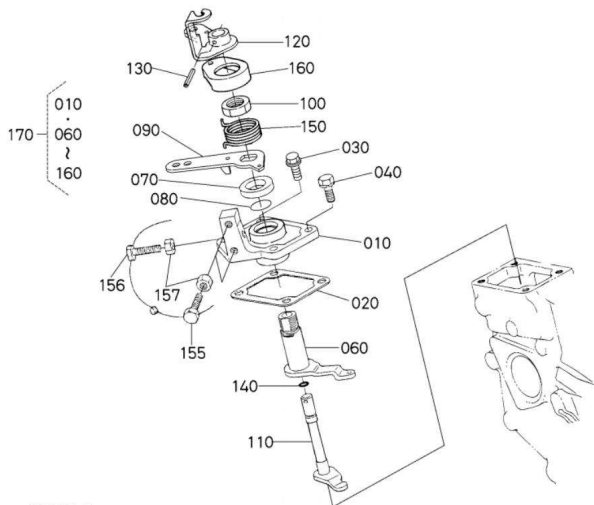


1321-024-14

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-151	15841-57112	调速板	GOVERNOR PLATE	1		
020	LP1003020002-165	15841-57212	密封垫圈	GASKET	1		
030	LP1003020004-383	01754-50616	法兰螺栓	FLANGE BOLT	2		
040	LP1003020002-166	16871-91050	螺栓	BOLT	2		
060	LP1003020003-050	15841-56112	调速器杆	GOVERNOR LEVER	1		
070	LP1003020002-153	19280-57240	轴环	COLLAR	1		
080	LP1003020002-154	04814-10160	O型密封圈	O-RING	1		
090	LP1003020002-155	16639-57150	调速杆	GOVERNOR ROD	1		
100	LP1003020002-156	16866-92010	调速杆螺帽	GOVERNOR ROD NUT	1		
110	LP1003020003-051	16878-57742	调速杆轴	GOVERNOR LEVER SHAFT	1		
120	LP1003020003-052	16851-57724	发动机停机杆	STOP LEVER	1		
130	LP1003020002-159	05411-00314	弹簧销	SPRING PIN	1		
140	LP1003020002-160	04814-10070	O型密封圈	O-RING	1		
150	LP1003020002-161	16878-57920	回位弹簧	RETURN SPRING	1		
155	LP1003020002-162	15108-57280	止动部件	STOPPER COMPONENT	2		
156	LP1003020002-163	19202-91010	螺栓	BOLT	1		
157	LP1003020004-148	02056-50060	螺母	NUT	3		
160	LP1003020002-164	16866-57302	盖	COVER	1		
170	LP1003020003-053	16866-57010	调速板组件	GOVERNOR PLATE	1		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 B018 喷嘴座和电热塞
NOZZLE HOLDER GLOW PLUG

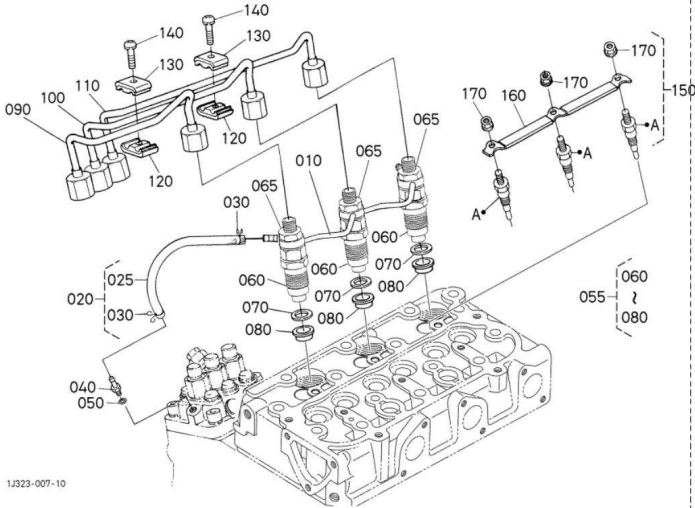


1J323-007-10

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-054	15862-42502	回油管组件	RETURN OIL PIPE	1		
020	LP1003020004-184	15841-42502	管组件	PIPE ASSEMBLY	1		
025	LP1003020004-185	15841-42522	燃油管	FUEL PIPE	1		
030	LP1003020004-186	14971-42750	管夹	PIPE CLIP	2		
040	LP1003020004-183	15841-51360	螺钉	SCREW	1		
050	LP1003020004-141	15601-96650	垫片	GASKET	1		
055	LP1003020002-168	16871-53904	喷嘴套件固定器	NOZZLE KIT HOLDER	3		
060	LP1003020002-169	16871-53002	喷油器组件	FUEL INJECTOR	3		
065	LP1003020004-198	16826-92032	螺母	NUT	3		
070	LP1003020004-416	15841-53622	垫片	GASKET	3		
080	LP1003020004-415	19077-53650	密封	SEAL	3		
090	LP1003020003-055	16686-53710	喷射管	INJECTION PIPE	1		
100	LP1003020003-056	16686-53720	喷射管	INJECTION PIPE	1		
110	LP1003020003-057	16686-53730	喷射管	INJECTION PIPE	1		
120	LP1003020004-191	15841-53850	管夹	PIPE CLIP	2		
130	LP1003020004-192	15841-53860	管夹	PIPE CLIP	2		
140	LP1003020004-193	03024-50520	带垫圈小螺丝	SCREW WITH WASHER	2		
150	LP1003020004-194	16679-65512	预热塞	GLOW PLUG	3		
160	LP1003020003-058	16861-65560	预热塞导电排	GLOW PLUG CONDUCTIVE BAR	1		
170	LP1003020004-196	02761-50040	法兰螺母	FLANGE NUT	3		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

 
B019 喷嘴座(分解) NOZZLE HOLDER (DISASSEMBLED)

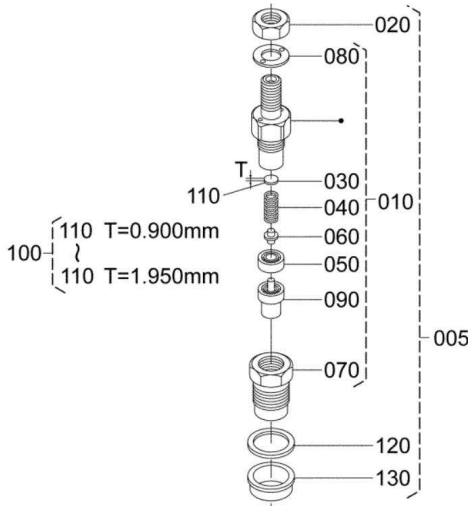

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
005	LP1003020002-168	16871-53904	喷嘴套件固定器	NOZZLE KIT HOLDER	3		
010	LP1003020002-169	16871-53002	喷油器组件	FUEL INJECTOR	3		
020	LP1003020004-198	16826-92032	螺母	NUT	3		
030	LP1003020004-199	16032-53230	调节垫圈	ADJUSTING WASHER	3		
040	LP1003020004-200	16032-53170	喷嘴弹簧	NOZZLE SPRING	3		
050	LP1003020004-201	16032-53350	隔片	SPACER	3		
060	LP1003020004-202	16032-53160	推杆	PUSH ROD	3		
070	LP1003020002-181	16871-53280	喷嘴螺母	NOZZLE NUT	3		
080	LP1003020004-204	16032-94040	平垫圈	FLAT WASHER	3		
090	LP1003020002-182	16962-53610	喷嘴部件	NOZZLE COMPONENT	3		
100	LP1003020002-183	15841-98100	调节垫圈组件	ADJUSTING WASHER	3		
110	LP1003020002-184	15841-53230	调节垫片	ADJUSTING SHIM	3		0.900mm
110	LP1003020002-185	15841-98510	调整垫片	ADJUSTING SHIM	3		0.925mm
110	LP1003020002-186	15841-98520	调整垫片	ADJUSTING SHIM	3		0.950mm
110	LP1003020002-187	15841-98530	调整垫片	ADJUSTING SHIM	3		0.975mm
110	LP1003020002-188	15841-98540	调整垫片	ADJUSTING SHIM	3		1.000mm
110	LP1003020002-189	15841-98550	调整垫片	ADJUSTING SHIM	3		1.025mm
110	LP1003020002-190	15841-98560	调整垫片	ADJUSTING SHIM	3		1.050mm
110	LP1003020002-191	15841-98570	调整垫片	ADJUSTING SHIM	3		1.075mm
110	LP1003020002-192	15841-98580	调整垫片	ADJUSTING SHIM	3		1.100mm
110	LP1003020002-193	15841-98590	调整垫片	ADJUSTING SHIM	3		1.125mm
110	LP1003020002-194	15841-98600	调整垫片	ADJUSTING SHIM	3		1.150mm
110	LP1003020002-195	15841-98610	调整垫片	ADJUSTING SHIM	3		1.175mm
110	LP1003020002-196	15841-98620	调整垫片	ADJUSTING SHIM	3		1.200mm
110	LP1003020002-197	15841-98630	调整垫片	ADJUSTING SHIM	3		1.225mm
110	LP1003020002-198	15841-98640	调整垫片	ADJUSTING SHIM	3		1.250mm
110	LP1003020002-199	15841-98650	调整垫片	ADJUSTING SHIM	3		1.275mm
110	LP1003020002-200	15841-98660	调整垫片	ADJUSTING SHIM	3		1.300mm
110	LP1003020002-201	15841-98670	调整垫片	ADJUSTING SHIM	3		1.325mm
110	LP1003020002-202	15841-98680	调整垫片	ADJUSTING SHIM	3		1.350mm

↔ 可互换; ≠ 不可互换; ← 以新版旧; → 以旧换新

 
B019 喷嘴座(分解) NOZZLE HOLDER (DISASSEMBLED)

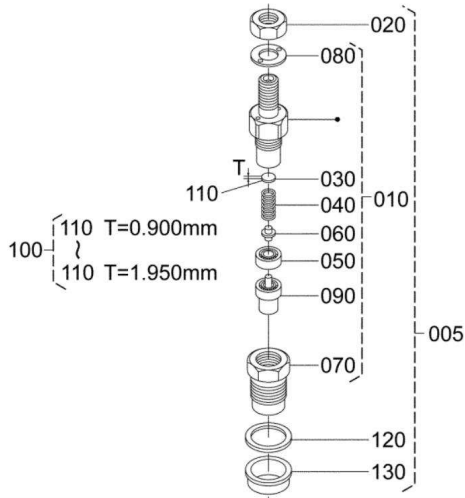

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I C	备注 REMARKS
110	LP1003020002-203	15841-98690	调整垫片	ADJUSTING SHIM	3		1.375mm
110	LP1003020002-204	15841-98700	调整垫片	ADJUSTING SHIM	3		1.400mm
110	LP1003020002-205	15841-98710	调整垫片	ADJUSTING SHIM	3		1.425mm
110	LP1003020002-206	15841-98720	调整垫片	ADJUSTING SHIM	3		1.450mm
110	LP1003020002-207	15841-98730	调整垫片	ADJUSTING SHIM	3		1.475mm
110	LP1003020002-208	15841-98740	调整垫片	ADJUSTING SHIM	3		1.500mm
110	LP1003020002-209	15841-98750	调整垫片	ADJUSTING SHIM	3		1.525mm
110	LP1003020002-210	15841-98760	调整垫片	ADJUSTING SHIM	3		1.550mm
110	LP1003020002-211	15841-98770	调整垫片	ADJUSTING SHIM	3		1.575mm
110	LP1003020002-212	15841-98780	调整垫片	ADJUSTING SHIM	3		1.600mm
110	LP1003020002-213	15841-98790	调整垫片	ADJUSTING SHIM	3		1.625mm
110	LP1003020002-214	15841-98800	调整垫片	ADJUSTING SHIM	3		1.650mm
110	LP1003020002-215	15841-98810	调整垫片	ADJUSTING SHIM	3		1.675mm
110	LP1003020002-216	15841-98820	调整垫片	ADJUSTING SHIM	3		1.700mm
110	LP1003020002-217	15841-98830	调整垫片	ADJUSTING SHIM	3		1.725mm
110	LP1003020002-218	15841-98840	调整垫片	ADJUSTING SHIM	3		1.750mm
110	LP1003020002-219	15841-98850	调整垫片	ADJUSTING SHIM	3		1.775mm
110	LP1003020002-220	15841-98860	调整垫片	ADJUSTING SHIM	3		1.800mm
110	LP1003020002-221	15841-98870	调整垫片	ADJUSTING SHIM	3		1.825mm
110	LP1003020002-222	15841-98880	调整垫片	ADJUSTING SHIM	3		1.850mm
110	LP1003020002-223	15841-98890	调整垫片	ADJUSTING SHIM	3		1.875mm
110	LP1003020002-224	15841-98900	调整垫片	ADJUSTING SHIM	3		1.900mm
110	LP1003020002-225	15841-98910	调整垫片	ADJUSTING SHIM	3		1.925mm
110	LP1003020002-226	15841-98920	调整垫片	ADJUSTING SHIM	3		1.950mm
120	LP1003020004-416	15841-53622	垫片	GASKET	3		
130	LP1003020004-415	19077-53650	密封	SEAL	3		

↔ 可互换 ≠ 不可互换 ← 以新版旧 → 以旧换新

 B020 叉杆(调速器) FORK LEVER (GOVERNOR)

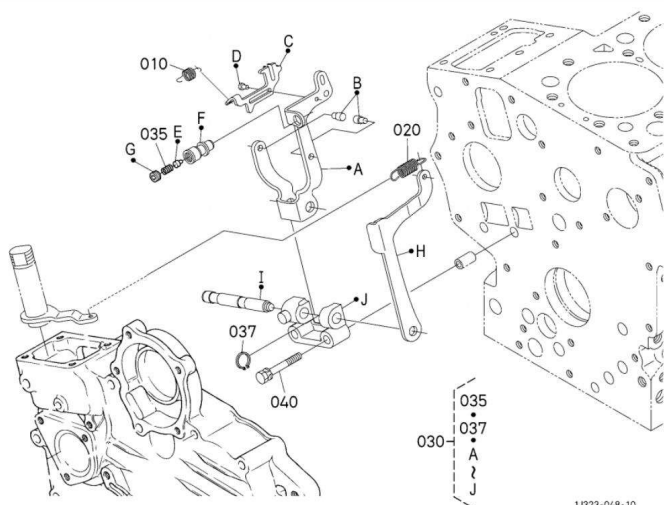


1J323-048-10

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-059	16851-56480	启动弹簧	STARTER SPRING	1		
020	LP1003020003-060	16851-56410	调速弹簧	GOVERNOR SPRING	1		
030	LP1003020003-061	1J966-56050	操作杆.组件	OPERATING LEVER	1		
035	LP1003020002-142	15531-54230	弹簧	SPRING	1		
037	LP1003020003-062	04613-50070	外卡环	EXTERNAL CIRCLIP	1		
040	LP1003020002-149	01023-50635	螺栓	BOLT	2		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 **B021 燃油滤清器
FUEL FILTER**

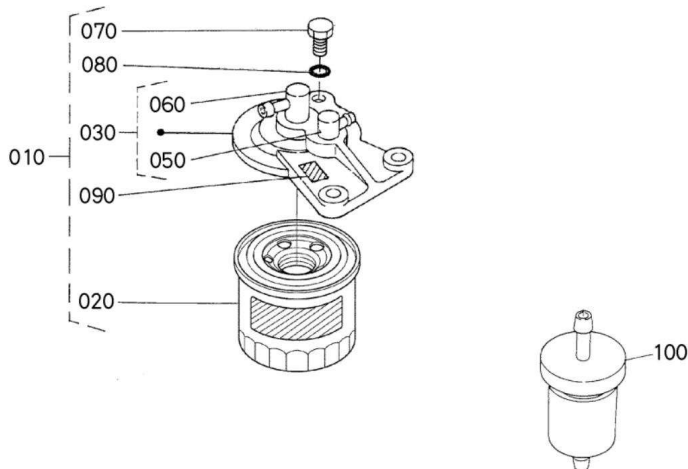


19099-179-14

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020004-232	15224-43010	燃油滤清器组件	FUEL FILTER ASSEMBLY	1		
020	LP0111020179	15221-43170	滤清器滤芯	FILTER ELEMENT	1		
030	LP1003020004-233	15224-43200	滤清器盖组件	FILTER COVER	1		
050	LP1003020004-234	15108-43610	管接头	PIPE FITTING	1		
060	LP1003020004-235	15108-43780	管接头	PIPE FITTING	1		
070	LP1003020004-237	19222-43280	塞子(过滤通风器)	FILTER VENTILATOR	1		
080	LP1003020004-238	15108-43290	O型环	O-RING	1		
090	LP1003020004-239	15224-87760	型号标志	MODEL MARK	1		
100	LP1003020004-392	12581-43012	过滤器	FILTER	1		

(↔) 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 
B022 燃油泵 (电磁式) FUEL PUMP (ELECTROMAGNETIC TYPE)

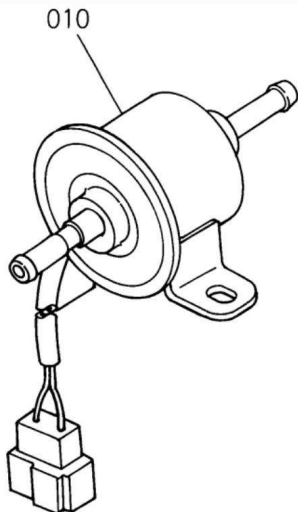

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-063	1G938-52034	泵	PUMP	1		

(↔) 可互换 ; (≠) 不可互换 ; (←) 以新换旧 ; (→) 以旧换新

 
B023 燃油泵盖 FUEL PUMP COVER

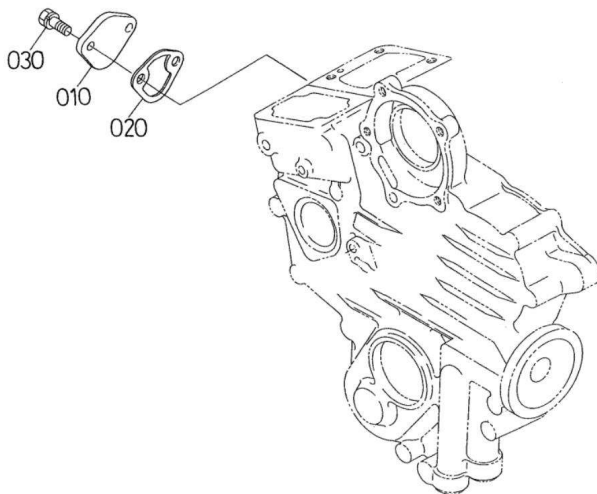

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-227	15852-52850	盖板	COVER PLATE	1		
020	LP1003020002-228	16264-52140	燃油泵衬垫	FUEL PUMP GASKET	1		
030	LP1003020004-095	01023-50616	螺栓	BOLT	2		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 B024 油水分离器[组成部分]
OIL-WATER SEPARATOR [CONSTITUENT PARTS]

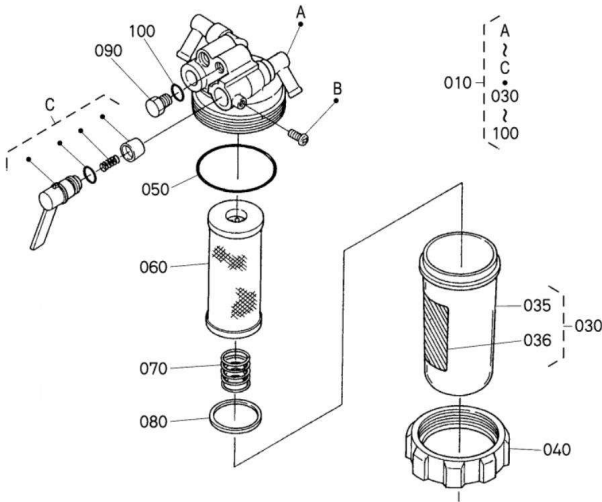


6-13

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020002-230	15831-43354	分离器组件	SEPARATOR ASSEMBLY	1		
030	LP1003020006-047	1G311-43100	滤清器滤杯组件	FILTER BOWL ASSEMBLY	1		
035	LP1003020006-049	1G311-43580	滤清器滤杯	FILTER BOWL	1		
036	LP1003020002-231	15831-87462	标签	LABEL	1		
040	LP1003020002-232	16271-43590	卡环	RETAINING RING	1		
050	LP1003020002-233	16271-43572	O形过滤杯圈	O-RING FOR FILTER BOWL	1		
060	LP1003020006-052	1G311-43380	滤芯	FILTER ELEMENT	1		
070	LP1003020006-053	1G311-43930	弹簧	SPRING	1		
080	LP1003020006-054	1G311-43250	浮子	FLOAT	1		
090	LP1003020002-234	15231-43283	振铃螺钉	RIVET	1		
100	LP1003020002-235	04817-00060	O型密封圈	O-RING	1		

↔ 可互换 ≠ 不可互换 ← 以新换旧 → 以旧换新

 
B025 交流发电机/皮带轮
OIL-WATER SEPARATOR [CONSTITUENT PARTS]

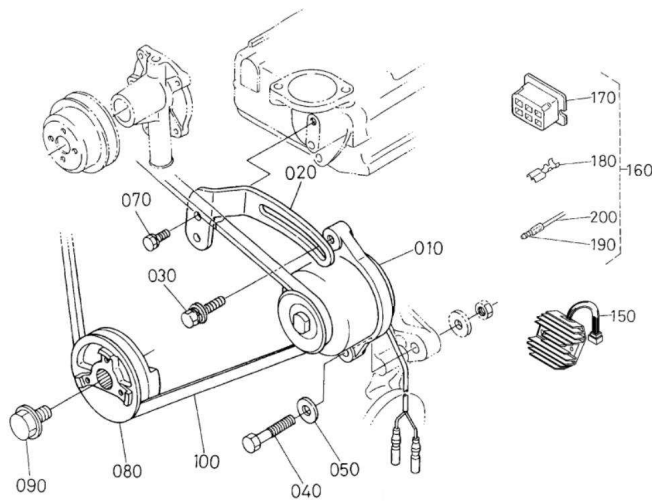

序号 Ref. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-064	17531-64012	交流发电机总成	ALTERNATOR ASSEMBLY	1		
020	LP1003020003-065	15841-64420	固定器, 发电机	HOLDER, GENERATOR	1		
030	LP1003020002-237	16871-91030	螺栓	BOLT	1		
040	LP1003020003-066	01155-50845	螺栓	BOLT	1		
050	LP1003020003-044	04013-50080	平垫圈	FLAT WASHER	1		
070	LP1003020004-095	01023-50616	螺栓	BOLT	1		
080	LP1003020003-068	16861-74285	风扇传动装置滑轮	FAN DRIVE PULLEY	1		
090	LP1003020002-242	15881-91030	螺栓	BOLT	1		
100	LP1003020003-069	16897-97010	V型皮带	V-BELT	1		
150	LP1003020003-070	PN201-68564	调节器	REGULATOR	1		
160	LP1003020003-071	19428-65830	连接器组件	CONNECTOR ASSEMBLY	1		
170	LP1003020003-072	19237-65880	连接器	CONNECTOR	1		
180	LP1003020003-073	19237-65910	端子	TERMINAL	6		
190	LP1003020003-074	68271-65910	端子	TERMINAL	2		
200	LP1003020003-075	68271-65920	套筒	SLEEVE	2		

↔ 可互换 ; ⚠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 B026 发电机（分解） GENERATOR (DISASSEMBLED)

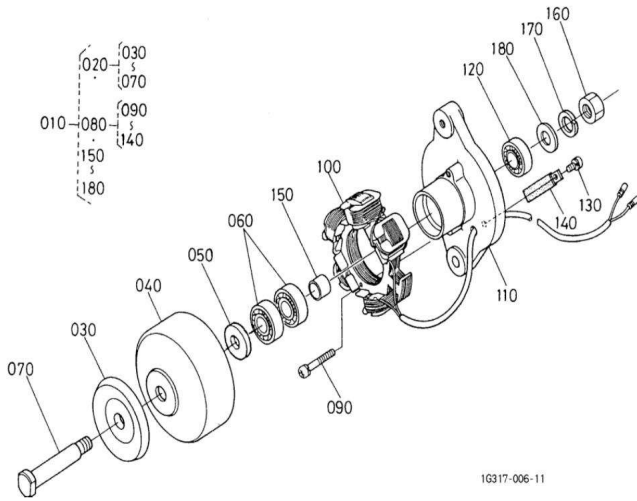


1G317-006-11

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-064	17531-64012	交流发电机总成	ALTERNATOR ASSEMBLY	1		
020	LP1003020003-077	15532-64120	飞轮组件	FLYWHEEL ASSEMBLY	1		
030	LP1003020003-078	15531-64110	皮带轮	PULLEY	1		
040	LP1003020003-079	15532-64040	飞轮组件	FLYWHEEL ASSEMBLY	1		
050	LP1003020003-080	60040-82860	轴环1	SHAFT COLLAR 1	1		
060	LP1003020003-081	15531-74180	球轴承	BALL BEARING	2		
070	LP1003020003-082	15532-74140	风扇轴	FAN SHAFT	1		
080	LP1003020003-083	15532-64360	定子组件	STATOR ASSEMBLY	1		
090	LP1003020003-084	15261-93010	螺母	NUT	2		
100	LP1003020003-085	15531-64292	定子	STATOR	1		
110	LP1003020003-086	15532-64070	板	PLATE	1		
120	LP1003020003-081	15531-74180	球轴承	BALL BEARING	1		
130	LP1003020003-088	15531-93010	圆头螺钉	ROUND HEAD SCREW	1		
140	LP1003020003-089	15261-64190	线夹	WIRE CLIP	1		
150	LP1003020003-090	15261-64150	轴环	SHAFT COLLAR	1		
160	LP1003020003-091	15261-92030	螺母	NUT	1		
170	LP1003020003-092	15261-94070	弹簧垫圈	SPRING WASHER	1		
180	LP1003020003-093	15261-94020	平垫圈	FLAT WASHER	1		

↔ 可互换；↘ 不可互换；← 以新换旧；→ 以旧换新

 
B027 起动机 STARTER

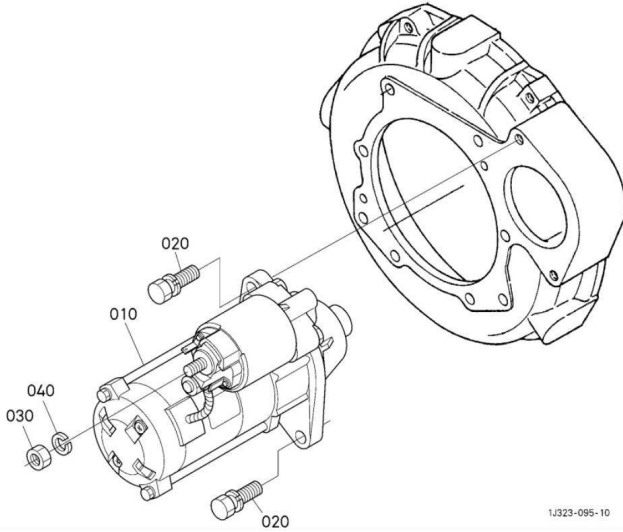

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S. N o.	互 换 性 I C.	备注 REMARKS
010	LP1003020003-094	67980-31150	启动马达组件	STARTER MOTOR	1		
020	LP1003020002-256	01123-50825	螺栓	BOLT	2		
030	LP1003020004-307	02156-50080	螺母	NUT	1		
040	LP1003020004-308	04512-50080	弹垫圈	SPRING WASHER	1		

(↔) 可互换 ; (≠) 不可互换 ; (←) 以新换旧 ; (→) 以旧换新

 B028 起动机 (组成部分) STARTER (COMPONENTS)

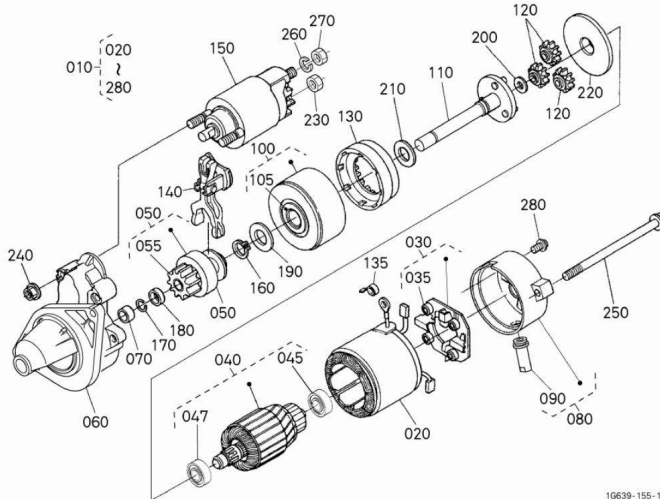


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-094	67980-31150	启动马达组件	STARTER MOTOR	1		
020	LP1003020003-096	6A100-31160	起动装置总成轭	STARTER ASSEMBLY YOKE	1		
030	LP1003020003-097	14958-63380	固定器总成	HOLDER ASSEMBLY	1		
035	LP1003020003-098	14958-63480	电刷弹簧	BRUSH SPRING	4		
040	LP1003020003-099	6A100-31170	电机转子组件	MOTOR ROTOR	1		
045	LP1003020003-100	15504-63530	球轴承	BALL BEARING	1		
047	LP1003020003-101	15504-63500	球轴承	BALL BEARING	1		
050	LP1003020003-102	K3511-81430	起动装置总成离合器	STARTER CLUTCH	1		
055	LP1003020003-103	17311-63280	小齿轮	PINION	1		
060	LP1003020003-104	67980-31180	滑动壳组套	SLIDING HOUSING	1		
070	LP1003020003-105	6A100-31190	轴承	BEARING	1		
080	LP1003020003-106	K3511-81450	框架组件	FRAME ASSEMBLY	1		
090	LP1003020003-107	12182-63290	盖	COVER	1		
100	LP1003020003-108	14958-63530	轴承总成	BEARING ASSEMBLY	1		
105	LP1003020003-109	14958-63060	轴承	BEARING	1		
110	LP1003020003-110	K3511-81460	起动装置总成轴	STARTER SHAFT	1		
120	LP1003020003-111	14958-63260	齿轮	GEAR	3		
130	LP1003020003-112	14958-63270	齿轮	GEAR	1		
135	LP1003020004-319	15401-63390	炭刷弹簧	CARBON BRUSH SPRING	4		
140	LP1003020003-113	14958-63050	操作杆	OPERATING LEVER	1		
150	LP1003020003-114	12181-63080	开关组件	SWITCH ASSEMBLY	1		
160	LP1003020003-115	14958-63170	按钮环	KNOB RING	1		
170	LP1003020003-116	12181-63220	卡环	RETAINING RING	1		
180	LP1003020003-117	13816-63460	轴环	SHAFT COLLAR	1		
190	LP1003020003-118	14958-94010	平垫圈	FLAT WASHER	1		
200	LP1003020003-119	14958-94020	平垫圈	FLAT WASHER	1		
210	LP1003020003-120	14958-94030	平垫圈	FLAT WASHER	1		
220	LP1003020003-121	14958-94040	板	PLATE	1		
230	LP1003020004-330	16611-92020	螺母	NUT	1		
240	LP1003020003-122	14278-92010	螺母	NUT	2		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

B029

机油开关·温度计和塞

 
OIL SWITCH, THERMOMETER AND PLUG

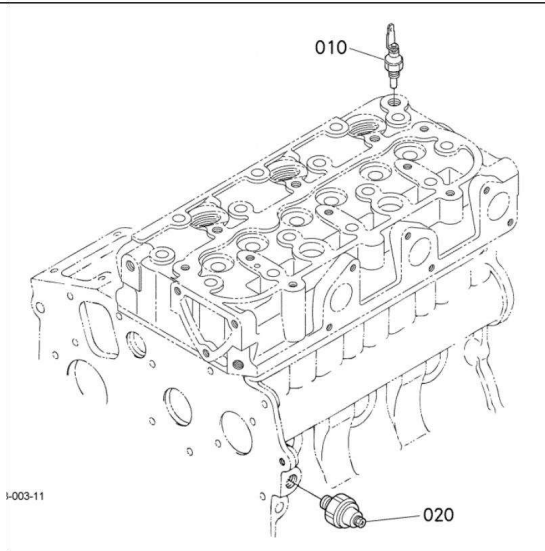

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-127	1G498-83040	传感器	SENSOR	1		
020	LP1003020004-337	15841-39013	开关	SWITCH	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B030 进出水法兰和节温器 WATER INLET/OUTLET FLANGE AND THERMOSTAT

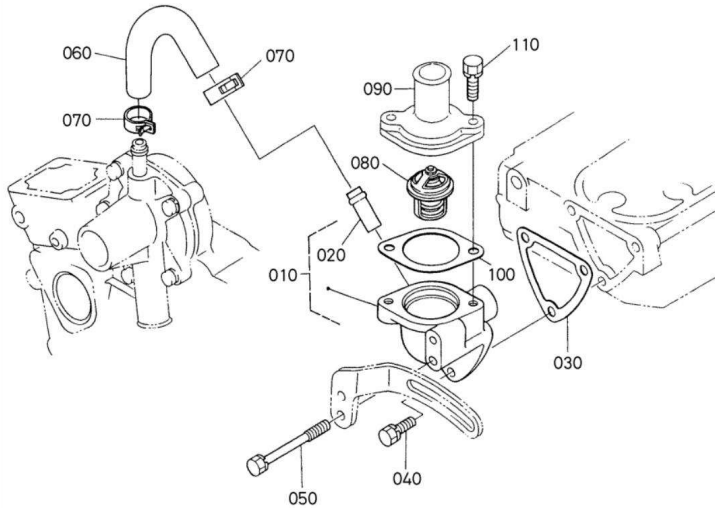

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020003-128	15841-72700	水管法兰, 部件	WATER PIPE FLANGE	1		
020	LP1003020004-339	16241-73370	回水管	RETURN WATER PIPE	1		
030	LP1003020002-252	15841-72923	密封垫圈	GASKET	1		
040	LP1003020004-095	01023-50616	螺栓	BOLT	2		
050	LP1003020003-129	15841-91040	螺栓	BOLT	1		
060	LP1003020003-130	15841-73350	回水管	RETURN WATER PIPE	1		
070	LP1003020003-131	16241-73360	管箍	PIPE CLAMP	2		
080	LP1003020003-132	1E399-73010	节温器组件	THERMOSTAT ASSEMBLY	1		
090	LP1003020003-133	15841-73260	盖板	COVER PLATE	1		
100	LP1003020003-134	16851-73270	垫片	GASKET	1		
110	LP1003020002-066	01023-50622	螺栓	BOLT	2		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

 B031 水泵 WATER PUMP

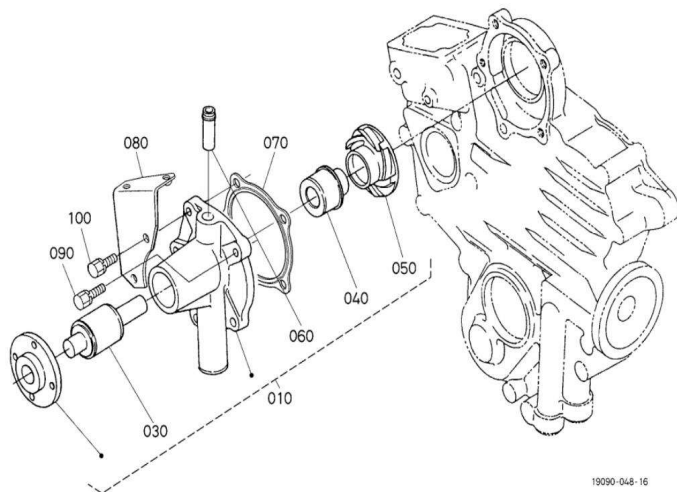


19090-048-16

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I C	备注 REMARKS
010	LP1003020003-135	19069-73037	水泵	WATER PUMP	1		
030	LP1003020002-258	15852-73550	轴承	BEARING	1		
040	LP1003020003-136	15852-73052	机械密封, 组件	MECHANICAL SEAL	1		
050	LP1003020003-137	19069-73510	水泵叶轮	WATER PUMP IMPELLER	1		
060	LP1003020004-352	15852-73340	回水管	RETURN WATER PIPE	1		
070	LP1003020002-259	16851-73430	水泵衬垫	WATER PUMP GASKET	1		
080	LP1003020003-138	16667-60110	支撑件	SUPPORT	1		
090	LP1003020002-066	01023-50622	螺栓	BOLT	2		
100	LP1003020004-353	01023-50630	螺栓	BOLT	2		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

 
**B033 风扇
FAN**

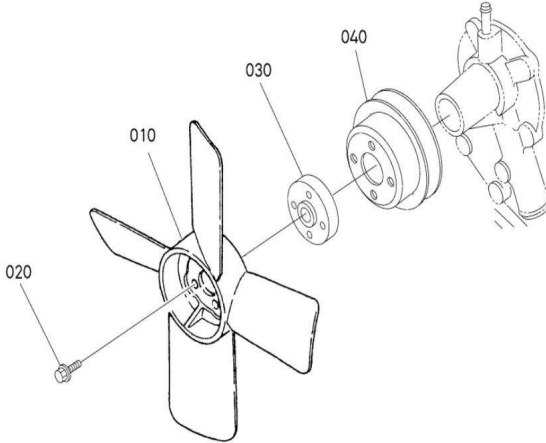

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-140	15881-74110	风扇	FAN	1		
020	LP1003020004-362	01754-50625	法兰螺栓	FLANGE BOLT	4		
030	LP1003020004-361	16261-74152	风扇轴环	FAN SHAFT COLLAR	1		
040	LP1003020002-240	15841-74250	风扇皮带轮	FAN PULLEY	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
B034 气门和摇臂
VALVE AND ROCKER ARM

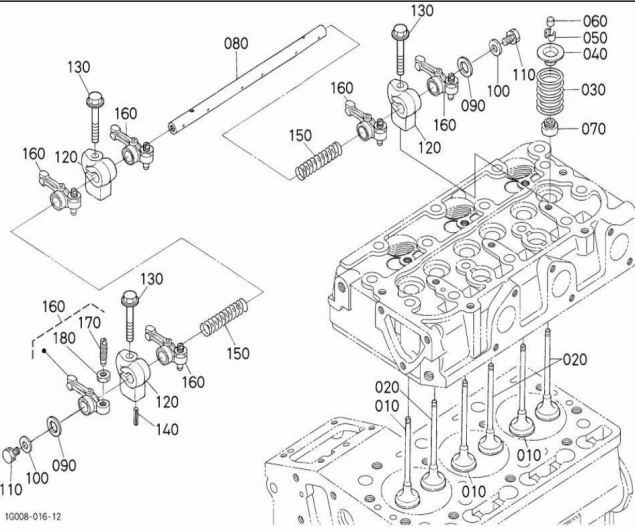

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-141	1G686-13110	进气阀	INTAKE VALVE	3		
020	LP1003020003-142	1G686-13120	出气阀	EXHAUST VALVE	3		
030	LP1003020002-271	14601-13240	气门弹簧	VALVE SPRING	6		
040	LP1003020002-272	14601-13330	弹簧阀继电器	SPRING VALVE RELAY	6		
050	LP1003020002-273	14601-13980	气阀弹簧夹头	VALVE SPRING COLLET	6		
060	LP1003020002-274	16851-13280	气阀盖	VALVE COVER	6		
070	LP1003020002-275	11420-13150	气门杆密封	VALVE STEM SEAL	6		
080	LP1003020003-143	15861-14264	摇臂轴	ROCKER ARM SHAFT	1		
090	LP1003020002-277	16871-14430	垫圈	WASHER	2		
100	LP1003020004-376	15841-94022	平垫圈	FLAT WASHER	2		
110	LP1003020002-278	01023-50610	螺栓	BOLT	2		
120	LP1003020003-144	1G958-14350	摇臂支架	ROCKER ARM BRACKET	3		
130	LP1003020002-280	01754-50640	法兰螺栓	FLANGE BOLT	3		
140	LP1003020004-170	05411-00420	弹簧销	SPRING PIN	1		
150	LP1003020003-145	14601-14312	摇臂弹簧	ROCKER ARM SPRING	2		
160	LP1003020002-282	15841-14036	摇臂总成	ROCKER ARM ASSEMBLY	6		
170	LP1003020002-283	15841-14230	螺钉	SCREW	6		
180	LP1003020002-284	14601-14240	螺母	NUT	6		

↔ 可互换 ≠ 不可互换 ← 以新换旧 → 以旧换新

 
B036 排气歧管 EXHAUST MANIFOLD

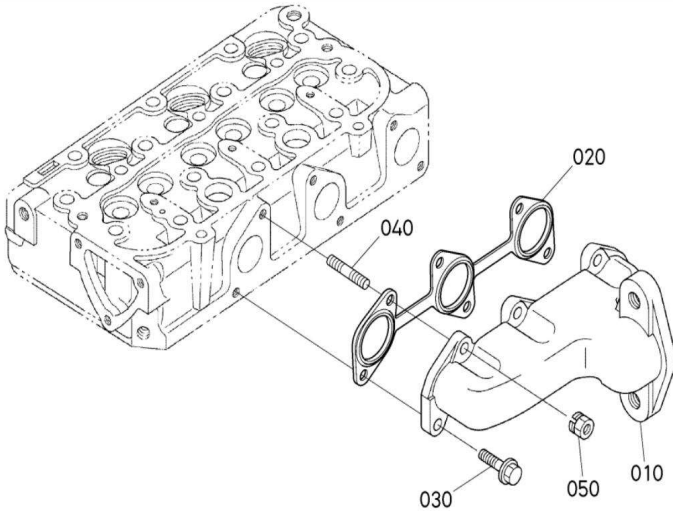

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1003020003-149	16897-12312	排气歧管	EXHAUST MANIFOLD	1		
020	LP1003020003-150	16318-12350	密封垫圈 (排气歧管)	SEALING WASHER	1		
030	LP1003020002-291	01759-50616	UBS螺栓	UBS BOLT	3		
040	LP1003020002-292	01513-50620	起动螺栓	STARTER BOLT	3		
050	LP1003020002-293	02756-50060	UBS螺母	UBS NUT	3		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 B038 发动机支座 ENGINE MOUN

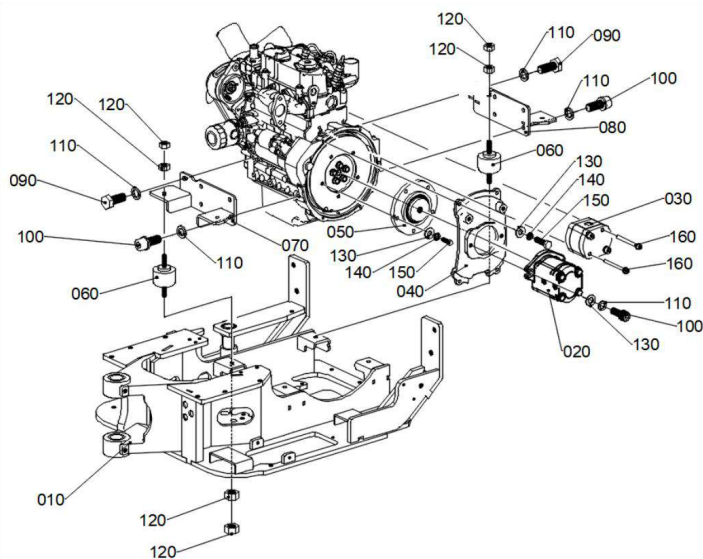


序号 REF. No	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I C	备注 REMARKS
010	LP0112012191		上盘	UPPER CASE	1		
020	LP0101010021		齿轮泵	GEAR PUMP	1		
030	LP0101010028		齿轮泵	GEAR PUMP	1		
040	LP0102010070		飞轮壳	FLYWHEEL HOUSING	1		
050	LP0102010038		联轴器	COUPLING	1		
060	LP0111020035		发动机减震垫	SHOCK ABSORBER PAD	4		
070	LP0112014852		发动机支座	ENGINE MOUNT	1		
080	LP0112014853		发动机支座	ENGINE MOUNT	1		
090	LP0116011673	M10x25	螺栓	BOLT	8		
100	LP0116011179	M10x30	螺栓	BOLT	4		
110	LP0116011720	M10	弹垫	SPRING WASHER	14		
120	LP0116011712	M10	螺母	NUT	16		
130	LP0116011718	M8	垫片	WASHER	9		
140	LP0116011724	M8	弹垫	SPRING WASHER	9		
150	LP0116011664	M8*30	螺栓	BOLT	9		
160	LP1001010028-001	M8*90	螺栓	BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

C002

 
燃油系统
FUEL SYSTEM

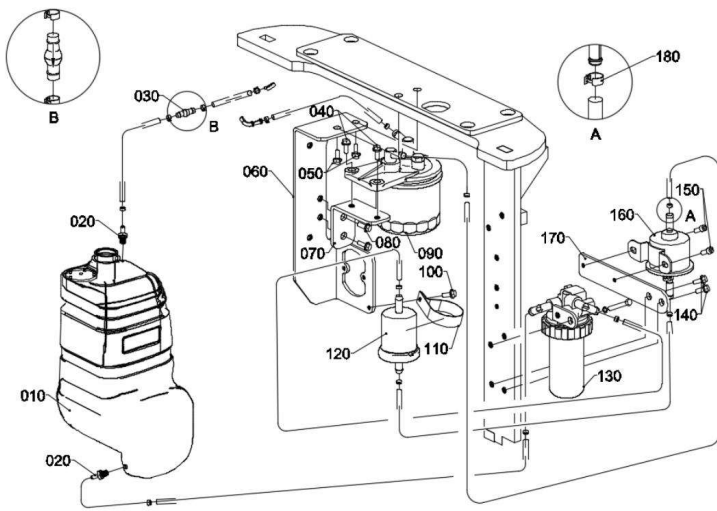

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115040010		燃油箱	FUEL TANK	1		
020	LP0115040171		油口预埋对丝	SILK	2		
030	LP0111020010		单向阀	CHECK VALVE	1		
040	LP0116011709	M8*20	螺栓	BOLT	2		
050	LP0116011709	M8*20	螺栓	BOLT	2		
060	LP0112014640		空滤安装架	INSTALLATION FRAME	1		
070	LP0112013114		柴滤架	DIESEL FILTER FRAME	1		
080	LP0116011735	M8*10	螺栓	BOLT	2		
090	LP1003020004-456	1A001-43010	精滤	SECONDARY FILTER	1		
100	LP0116011735	M8*10	螺栓	BOLT	1		
110	LP0113040016		安装架	MOUNTING BRACKET	1		
120	LP1003020004-392	12581-43012	粗滤	PRIMARY FILTER	1		
130	LP0111020089		油水分离器	SEPARATOR	1		
140	LP0116011735	M8*10	螺栓	BOLT	2		
150	LP0116011864	M6*10	螺栓	BOLT	2		
160	LP1003020004-397	16377-52030	打油泵	FUEL FEED PUMP	1		
170	LP0112014643		油泵架	OIL PUMP FRAME	1		
180	LP0116010712		管卡	PIPE CLIP	14		

↔ 可互换; ← 不可互换; ← 以新换旧; → 以旧换新

 
D001 顶棚安装 CEILING INSTALLATION

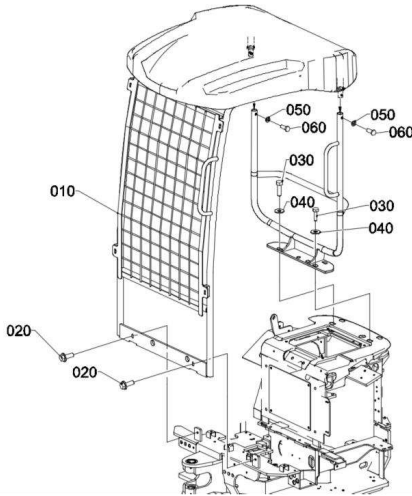

序号 REF. No	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY./S.No.	互 换 性 I.C.	备注 REMARKS
010	LP0108020070		顶棚	CEILING	1		
020	LP0116012552	M10*20	螺栓	BOLT	2		
030	LP0116011623	M14*30	螺栓	BOLT	4		
040	LP0116011851	M14	垫片	WASHER	4		
050	LP0116011715	M10	垫片	WASHER	2		
060	LP0116011675	M10*30	螺栓	BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
E001 履带架 TRACK FRAME

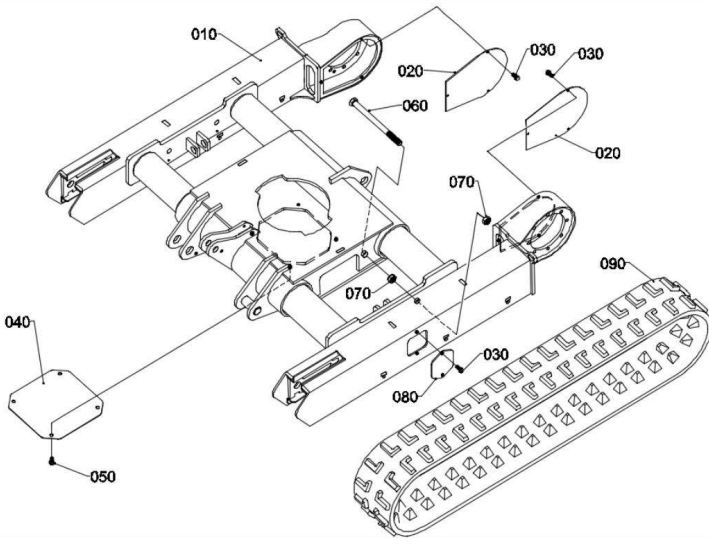

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112014135		履带架	TRACK FRAME	1		
020	LP0112012204		马达盖	MOTOR COVER	2		
030	LP0116011735	M8*10	螺栓	BOLT	10		
040	LP0112012202		底板	BASE PLATE	1		
050	LP0116011016	M10*15	螺栓	BOLT	4		
060	LP0116012356	M16*230	螺栓	BOLT	2		
070	LP0116011706	M16	螺母	NUT	4		
080	LP0112012203		盖板	COVER	2		
090	LP0102110003		履带	CRAWLER TRACK	2		

↔ 可互换 / ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 E002 回转接头 ROTARY JOINT

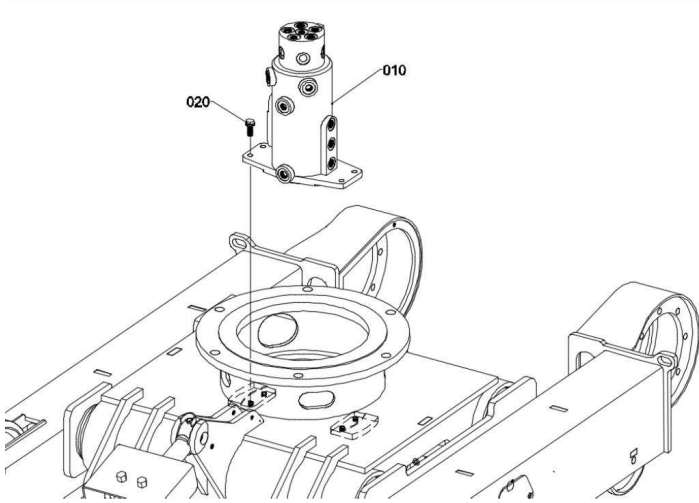


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0102050002		回转接头	ROTARY JOINT	1		
020	LP0116012635	M8*20	螺栓	BOLT	4		

↔ 可互换 ✕ 不可互换 ← 以新换旧 → 以旧换新

E003

 
推土铲 BULLDOZER BLADE

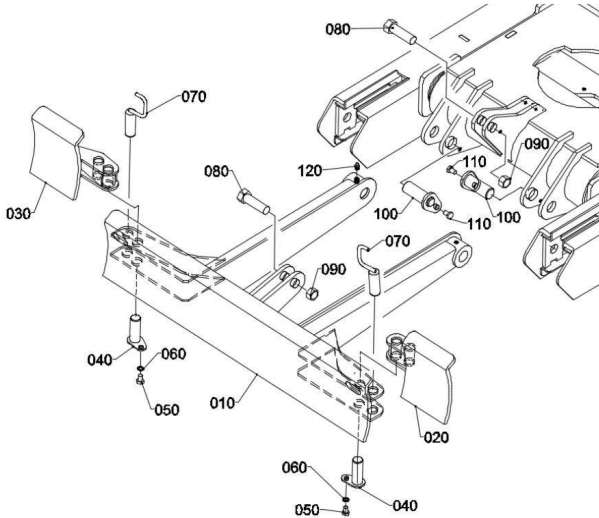

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互换性 I. C.	备注 REMARKS
010	LP0112012672		推土铲	DOZER BLADE	1		
020	LP0115040167		左加宽	LEFT WIDENED	1		
030	LP0115040168		右加宽	RIGHT WIDENED	1		
040	LP0107020094	38*80-25*70	销轴	SHAFT	2		
050	LP0116011671	M10*15	螺栓	BOLT	4		
060	LP0116012327	M10	弹垫	SPRING WASHER	2		
070	LP0107020095	24*70	销轴	SHAFT	2		
080	LP0116011696	M22*70	螺栓	BOLT	2		
090	LP0116011786	M22	螺母	NUT	2		
100	LP0107021119	45*88-30*76	销轴	SHAFT	2		
110	LP0116011085	M10*1	黄油嘴	GREASE FITTING	2		

↔ 可互换 : / 不可互换 : ← 以新换旧 : → 以旧换新

 
E004 支重轮 ROLLER

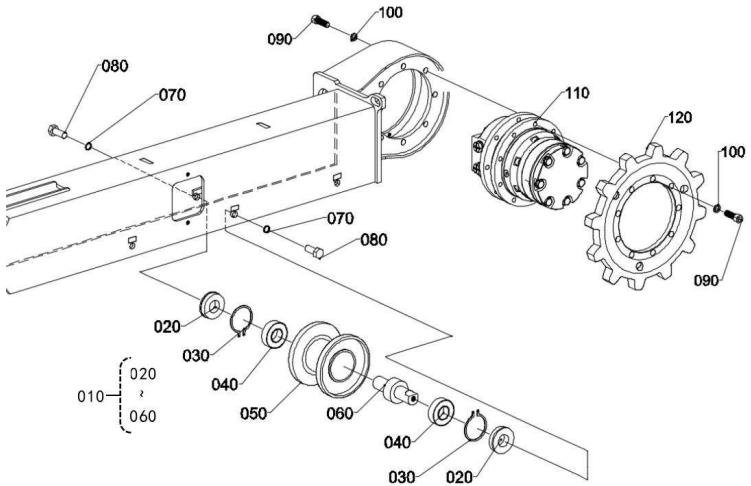

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互换性 I. C.	备注 REMARKS
010	LP0102060001		支重轮总成	ROLLER ASSEMBLY	6		
020	LP1002060001-001		密封	SEAL	12		
030	LP1002060001-002		卡簧	CLAMP	12		
040	LP1002060001-003	6205/25*52*13	轴承	BERRING	12		
050	LP1002060001-004		轮体	WHEEL BODY	6		
060	LP1002060001-005		轴	SHAFT	6		
070	LP0116011721	M12	弹垫	SPRING WASHER	12		
080	LP0116011842	M12*30	螺栓	BOLT	12		
090	LP0116012618	M10*30	螺栓	BOLT	17		
100	LP0116012327	M10	弹垫	SPRING WASHER	17		
110	LP0102020030		行走马达	TRAVEL MOTOR	2		
120	LP0102090005		驱动链轮	DRIVE SPROCKET	2		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

 
E005 引导轮 IDLER WHEEL

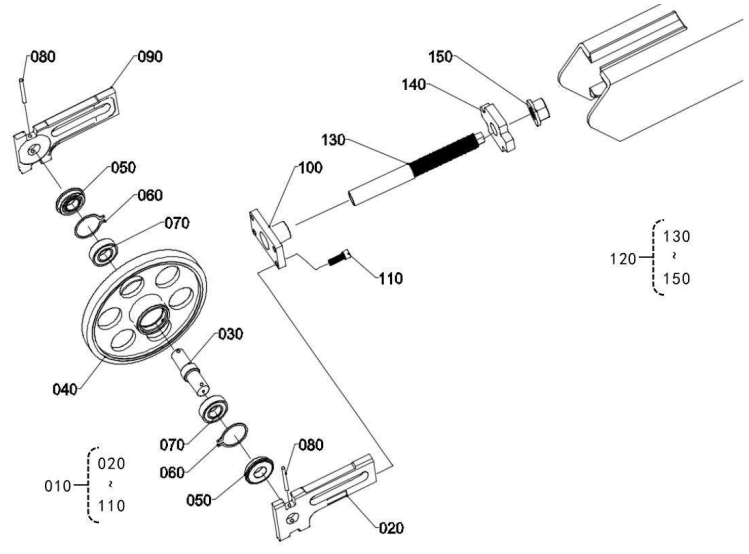

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互换性 I. C.	备注 REMARKS
010	LP0102070002		引导轮组件	ASSY WHEEL, IDLER	2		
020	LP1002070002-001		左侧支架	BRACKET, LH	2		
030	LP1002070002-002		引导轮轴	SHAFT, IDLER	2		
040	LP1002070002-003		引导轮轮	WHEEL, IDLER	2		
050	LP1002060001-001		密封	SEAL	4		
060	LP1002060001-002		卡簧	CLAMP	4		
070	LP1002060001-003	6205/25*52*13	轴承	BERRING	4		
080	LP1002070002-004		弹簧销	PIN, SPRING	4		
090	LP1002070002-005		右侧支架	BRACKET, RH	2		
100	LP1002070002-006		后座	BACK SEAT	2		
110	LP0116011908	M10*35	螺栓	BOLT	8		
120	LP0102070008		涨紧装置	TIGHTENING DEVICE	2		
130	LP1002070008-001		支杆	ROD	2		
140	LP1002070008-002		挡板	BAFFLE	2		
150	LP1002070008-003	M22	螺母	NUT	2		

↔ 可互换 ; ↯ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
F001 工作装置 (动臂) WORK DEVICE (BOOM)

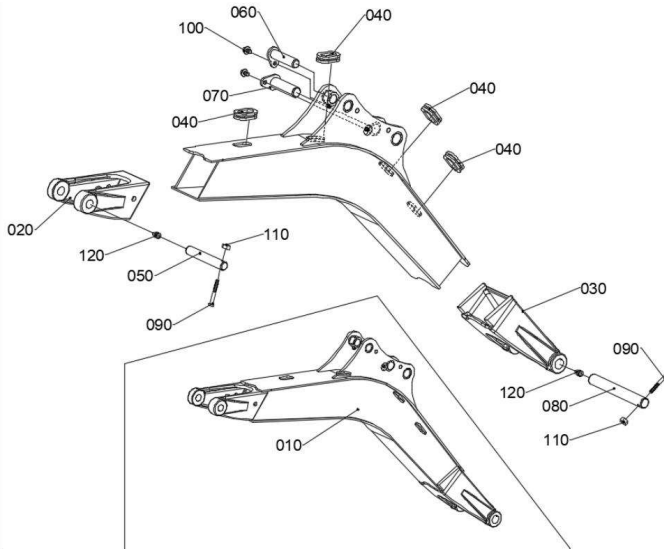

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112013016		动臂	BOOM	1		
020	LP0117020017		动臂前叉	BOOM FRONT	1		
030	LP0117020021		动臂后叉	BOOM AFTER	1		
040	LP0113040043		护圈	RETAINER	4		
050	LP0107021132	25*158	销轴	PIN SHAFT	1		
060	LP0107020096	38 × 111 × 25 × 99	销轴	PIN SHAFT	1		
070	LP0107020092	45 × 111 × 30 × 99	销轴	PIN SHAFT	1		
080	LP0107021140	30 × 234	销轴	PIN SHAFT	1		
090	LP0116011668	M8*70	螺栓	BOLT	2		
100	LP0116011016	M10*15	螺栓	BOLT	2		
110	LP0116011711	M8	螺母	NUT	2		
120	LP0116011085	M10*1	黄油嘴	GREASE NIPPLE	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 G001 液压系统（主进油） HYDRAULIC SYSTEM (MAIN OIL INLET)

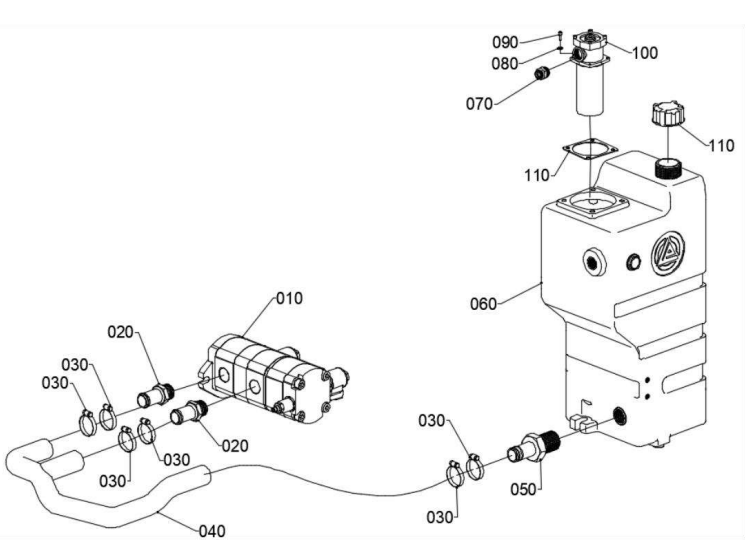


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0101010025		泵	PUMP	1		
020	LP0115021893		吸油法兰	FLANGE, SUCTION	2		
030	LP0116010072		管箍	BAND	6		
040	LP0115021327		出油管	OIL PIPE	1		
050	LP0115021894		对丝	JOINT, PIPE	1		
060	LP0115040073		液压油箱	TANK	1		
070	LP0115021552	33ED变26H	对丝	JOINT, PIPE	1		
080	LP0116010217	M6	组合垫	COMBINATION MAT	4		
090	LP0116011750	M6	内六螺栓	BOLT	4		
100	LP0115030046		回油过滤器	OIL FILTER	1		
110	LP0111080091		油箱盖	TANK CAP	1		

↔ 可互换；⊘ 不可互换；← 以新换旧；→ 以旧换新

G002

 
液压系统 (输出) HYDRAULIC SYSTEM (DELIVERY)

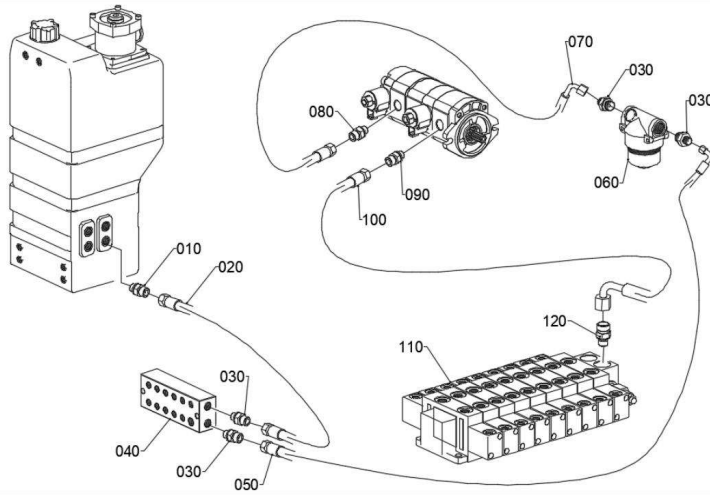

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020374	14ED*14H	对丝	JOINT, PIPE	1		
020	LP0115021829	6*1*220	油管	OIL PIPE	1		Z-Z · 14H-0
030	LP0115021488	3/8*14H	对丝	JOINT, PIPE	4		
040	LP0111080178		汇流排	BUSBAR	1		
050	LP0115021403	6*1*1020	油管	OIL PIPE	1		Z-W90 · 14H-0
060	LP0115030049		先导过滤	PILOT FILTER	1		
070	LP0115021897	6*2*750	油管	OIL PIPE	1		Z-W90 · 14H-0
080	LP0115020853	1/2ED*14H	对丝	JOINT, PIPE	1		
090	LP0115020335	1/2ED*22H	对丝	JOINT, PIPE	1		
100	LP0115021899	13*2*870	油管	OIL PIPE	1		Z-W90 · 22H-0
110	LP0101030025		多路阀	VALVE	1		
120	LP0115020223	22ED*22H	对丝	JOINT, PIPE	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

 
G003 液压系统 (回流) HYDRAULIC SYSTEM (RETURN)

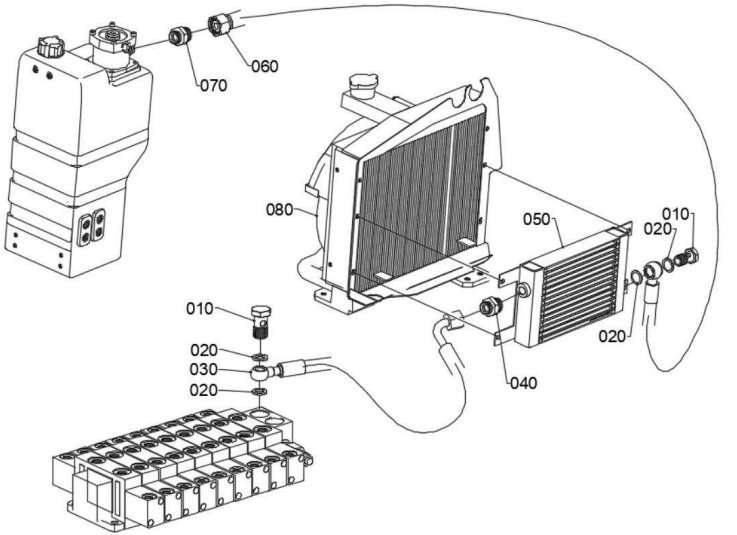

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020713	22H	对丝	JOINT, PIPE	2		
020	LP0116010216	22	组合垫	COMBINATION MAT	4		
030	LP0115021902	16*1*300	油管	OIL PIPE	1		Z-0-220-90
040	LP0115020223	22ED*22H	对丝	JOINT, PIPE	1		
050	LP0110020012-001		油散	OIL RADIATOR	1		
060	LP0115021904	16*1*1210	油管	OIL PIPE	1		Q-220-Z-26H-0
070	LP0115021552	33ED变26H	对丝	JOINT, PIPE	1		
080	LP0110020012-002		水散	WATER COOLER	1		

↔ 可互换 ≠ 不可互换 ← 以新换旧 → 以旧换新

 G006 液压系统 (挖斗) HYDRAULIC SYSTEM (BUCKET)

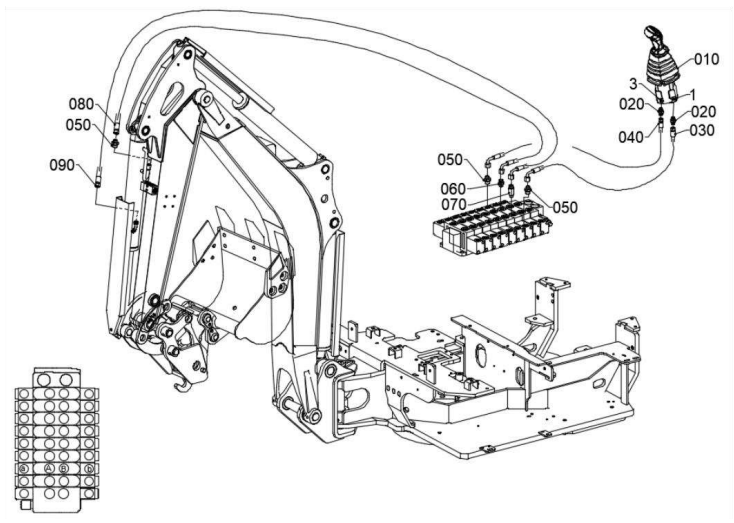


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115030079		先导右手柄	PILOT RIGHT HANDLE	1		
020	LP0115020830	1/4*14H	对丝	JOINT. PIPE	2		
030	LP0115021928	6*1*1850	油管	OIL PIPE	1		Z-W90 · 14H-0
040	LP0115021714	6*1*1130	油管	OIL PIPE	1		Z-W90 · 14H-0
050	LP0115020374	14ED*14H	对丝	JOINT. PIPE	3		
060	LP0115020849	20ED*14H	对丝	JOINT. PIPE	1		
070	LP0115021905	20ED*14H*H	对丝	JOINT. PIPE	1		
080	LP0115020760	6*2*3050	油管	OIL PIPE	1		Z-W90 · 14H-0
090	LP0115021800	6*2*3300	油管	OIL PIPE	1		Z-W90 · 14H-0

↔ 可互换; / 不可互换; ← 以新换旧; → 以旧换新

G008

 
液压系统(左行走)
HYDRAULIC SYSTEM (TRAVEL LH)

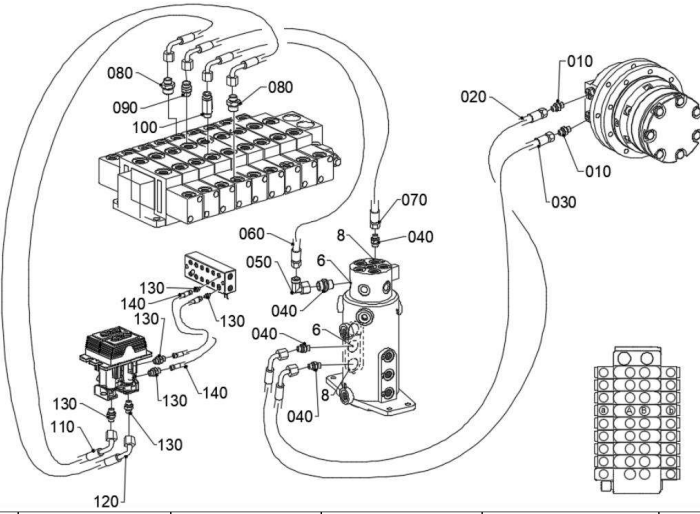

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020326	18ED*16H	对丝	JOINT, PIPE	2		
020	LP0115021944	8*2*750	油管	OIL PIPE	1		Z-W90 · 16H-0
030	LP0115021945	8*2*770	油管	OIL PIPE	1		Z-W90 · 16H-0
040	LP0115021393	14ED*16H	对丝	JOINT, PIPE	4		
050	LP0115020221	16H	对丝	JOINT, PIPE	1		
060	LP0115021946	8*2*530	油管	OIL PIPE	1		Z-W90 · 16H-0
070	LP0115021947	8*2*340	油管	OIL PIPE	1		Z-W90 · 16H-0
080	LP0115020374	14ED*14H	对丝	JOINT, PIPE	2		
090	LP0115020850	20ED*16H	对丝	JOINT, PIPE	1		
100	LP0115021908	20ED*16H**H	对丝	JOINT, PIPE	1		
110	LP0115021948	6*1*660	油管	OIL PIPE	1		W90-W90 · 14H-F
120	LP0115021949	6*1*440	油管	OIL PIPE	1		W90-W90 · 14H-F
130	LP0115020830	1/4*14H	对丝	JOINT, PIPE	6		
140	LP0115021953	6*1*240	油管	OIL PIPE	2		Z-Z · 14H-0

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

 
G010

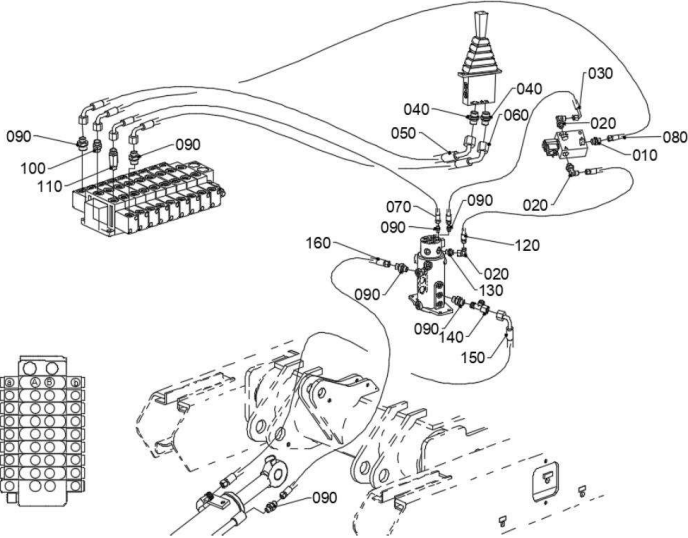 液压系统(推土)
 HYDRAULIC SYSTEM (BLADE)


序号 Ref. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020371	1/4ED*14H	对丝	JOINT PIPE	1		
020	LP0115020840	1/4*14H(90°)	对丝	JOINT PIPE	2		
030	LP0115021964	6*2*320	油管	OIL PIPE	1		Z-W90·14H-0
040	LP0115020830	1/4*14H	对丝	JOINT PIPE	2		
050	LP0115021965	6*1*1310	油管	OIL PIPE	1		W90-W90·14H-F
060	LP0115021966	6*1*1600	油管	OIL PIPE	1		W90-W90·14H-F
070	LP0115021967	6*2*430	油管	OIL PIPE	1		Z-W90·14H-0
080	LP0115021968	6*2*470	油管	OIL PIPE	1		Z-W90·14H-0
090	LP0115020374	14ED*14H	对丝	JOINT PIPE	7		
100	LP0115020849	20ED*14H	对丝	JOINT PIPE	1		
110	LP0115021905	20ED*14H**H	对丝	JOINT PIPE	1		
120	LP0115021969	6*2*280	油管	OIL PIPE	1		Z-Z·14H-0
130	LP0115021546	12ED*14H	对丝	JOINT PIPE	1		
140	LP0115021105	M14	对丝	JOINT PIPE	1		
150	LP0115021970	6*2*600	油管	OIL PIPE	1		Z-W45·14H-0
160	LP0115020469	6*2*600	油管	OIL PIPE	1		Z-Z·14H-0

⇌ 可互换; — 不可互换; ← 以新换旧; → 以旧换新

 
J001

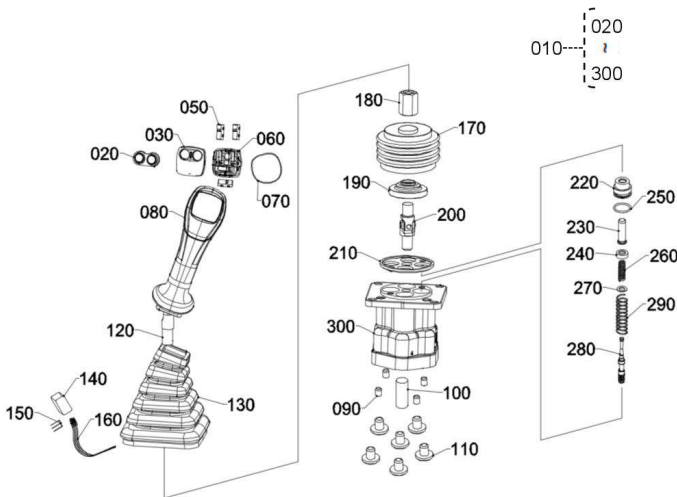先导手柄（左手柄）
CONTROL LEVER (LEVER LH)

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP1015030080		先导左手柄	PILOT LEFT HANDLE	1		
020	LP1015030080-001		大按键	LARGE BUTTON	1		
030	LP1015030080-002		固定板	FIXING PLATE	1		
040			空白	BLANK			
050	LP1015030080-003		开关	SWITCH	3		
060	LP1015030080-004		开关支架	SWITCH BRACKET	1		
070	LP1015030080-005		密封圈	SEALING RING	1		
080	LP1015030080-006		手柄	HANDLE	1		
090	LP1015030080-007		堵头	PLUG	4		
100	LP1015030080-008		衬套	BUSHING	1		
110	LP1015030080-009		防尘塞	DUST-PROOF PLUG	4		
120	LP1015030080-010		弯杆	BENT ROD	1		
130	LP1015030080-011		大护套	PROTECTIVE SLEEVE	1		
140	LP1015030080-012		端子插头	TERMINAL PLUG	1		
150	LP1015030080-013		卡扣	BUCKLE	1		
160	LP1015030080-014		线束	WIRE HARNESS	1		
170	LP1015030080-015		防尘套	DUST-PROOF SLEEVE	1		
180	LP1015030080-016		连接螺母	CONNECTING NUT	1		
190	LP1015030080-017		斜盘	SWASH PLATE	1		
200	LP1015030080-018		万向节	UNIVERSAL JOINT	1		
210	LP1015030080-019		压盘	PRESSURE PLATE	1		
220	LP1015030080-020		铜套	COPPER SLEEVE	4		
230	LP1015030080-021		柱塞	PLUNGER	4		
240	LP1015030080-022		油封	OIL SEAL	4		
250	LP1015030080-023		密封圈	SEALING RING	4		
260	LP1015030080-024		弹簧	SPRING	4		
270	LP1015030080-025		垫片	GASKET	4		
280	LP1015030080-026		阀芯	VALVE CORE	4		
290	LP1015030080-027		弹簧	SPRING	4		
300	LP1015030080-028		阀体	VALVE BODY	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧

 J002 先导手柄（右手柄） CONTROL LEVER (LEVER RH)

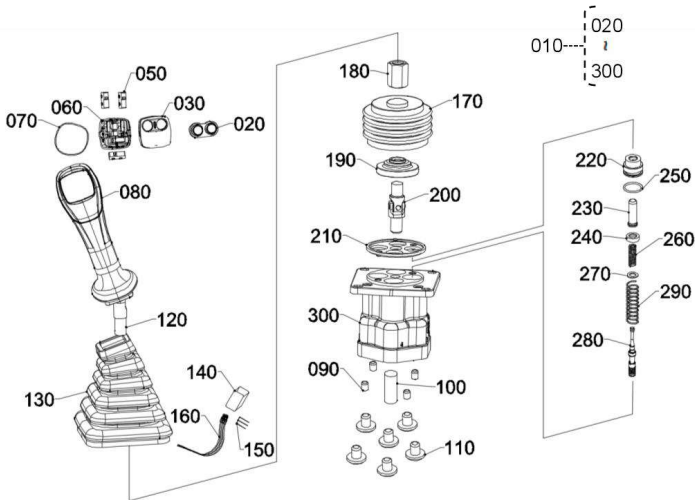


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1015030079		先导右手柄	PILOT LEFT HANDLE	1		
020	LP1015030080-001		大按键	LARGE BUTTON	1		
030	LP1015030080-002		固定板	FIXING PLATE	1		
040	---		空白	BLANK			
050	LP1015030080-003		开关	SWITCH	3		
060	LP1015030080-004		开关支架	SWITCH BRACKET	1		
070	LP1015030080-005		密封圈	SEALING RING	1		
080	LP1015030079-001		手柄	HANDLE	1		
090	LP1015030080-007		堵头	PLUG	4		
100	LP1015030080-008		衬套	BUSHING	1		
110	LP1015030080-009		防尘塞	DUST-PROOF PLUG	4		
120	LP1015030079-002		弯杆	BENT ROD	1		
130	LP1015030079-003		大护套	PROTECTIVE SLEEVE	1		
140	LP1015030080-012		端子插头	TERMINAL PLUG	1		
150	LP1015030080-013		卡扣	BUCKLE	1		
160	LP1015030080-014		线束	WIRE HARNESS	1		
170	LP1015030080-015		防尘套	DUST-PROOF SLEEVE	1		
180	LP1015030080-016		连接螺母	CONNECTING NUT	1		
190	LP1015030080-017		斜盘	SWASH PLATE	1		
200	LP1015030080-018		万向节	UNIVERSAL JOINT	1		
210	LP1015030080-019		压盘	PRESSURE PLATE	1		
220	LP1015030080-020		铜套	COPPER SLEEVE	4		
230	LP1015030080-021		柱塞	PLUNGER	4		
240	LP1015030080-022		油封	OIL SEAL	4		
250	LP1015030080-023		密封圈	SEALING RING	4		
260	LP1015030080-024		弹簧	SPRING	4		
270	LP1015030080-025		垫片	GASKET	4		
280	LP1015030080-026		阀芯	VALVE CORE	4		
290	LP1015030080-027		弹簧	SPRING	4		
300	LP1015030080-028		阀体	VALVE BODY	1		

↔ 可互换；↗ 不可互换；↖ 以新换旧；→ 以旧

K010 齿轮泵和零件

 
GEAR PUMP AND PARTS

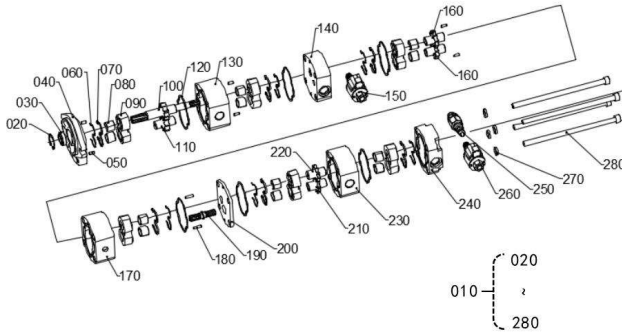

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0101010025		齿轮泵	GEAR PUMP	1		
020	LP1001010025-001	32	孔用弹性挡圈	HOLE ELASTIC R RING	1		
030	LP1001010025-002	18*30*8/10	油封	OIL SEAL	1		
040	LP1001010025-003	TX3025-825102	前盖	FRONT COVER	1		
050	LP1001010025-004	φ5*12	圆柱销	CYLINDRICAL PIN	6		
060	LP1001010025-005	CBT-F31-105	3字挡圈	3-SHAPED RING	6		
070	LP1001010025-006	CBT-F31-106	3型垫	TYPE 3 PAD	6		
080	LP1001010025-007	18*20*20	衬套	BUSHING	12		
090	LP1001010025-008	CBT-F3-109DXP	轴套	SHAFT SLEEVE	12		
100	LP1001010025-009	TXD381-06DRHT-FHB	主动齿轮	DRIVING GEAR	1		
110	LP1001010025-010	TXD381-06ID	被动齿轮	DRIVEN GEAR	1		
120	LP1001010025-011	CBT-F31-108	矩形圈	RECTANGULAR RING	6		
130	LP1001010025-012	104G4321-65	中间体	INTERMEDIATE BODY	1		
140	LP1001010025-013	CBT-FHL-301	阀块	VALVE BLOCK	1		
150	LP1001010025-014	TX-8001	电磁阀	SOLENOID VALVE	1		
160	LP1001010025-015	TXD381-04DRG	被动齿轮 II	DRIVEN GEAR II	2		
170	LP1001010025-016	104G43-65	中间体	INTERMEDIATE BODY	1		
180	LP1001010025-017	φ5*18	圆柱销	CYLINDRICAL PIN	2		
190	LP1001010025-018	TX-7001	连接轴	CONNECTING SHAFT	1		
200	LP1001010025-019	CBT-XKLJB-02	连接板	CONNECTING PLATE	1		
210	LP1001010025-020	TXD381-03DRG	被动齿轮 II	DRIVEN GEAR II	1		
220	LP1001010025-021	TXD381-03ID	被动齿轮	DRIVEN GEAR	1		
230	LP1001010025-022	TXD03-104G21	中间体	INTERMEDIATE BODY	1		
240	LP1001010025-023	CBT-FXD-308	后盖	REAR COVER	1		
250	LP1001010025-024	TX-9001	溢流阀	RELIEF VALVE	1		
260	LP1001010025-025	TX-8001	电磁阀	SOLENOID VALVE	1		
270	LP1001010025-026	M10	平垫	FLAT WASHER	4		
280	LP1001010025-027	M10*210	内六角螺栓	INTERNAL BOLT	4		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

 
K011 回转马达 ROYTARY MOTOR

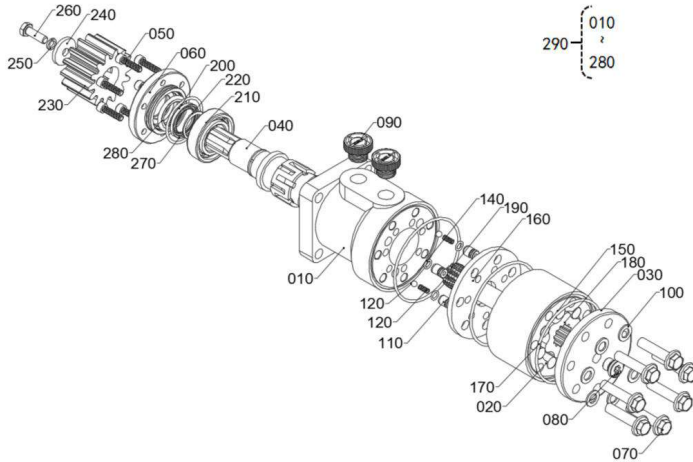

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1002030001-001	2022	壳体	SHELL	1		
020	LP1002030001-002	6021-315	定子	STATOR	1		
030	LP1002030001-003	3022-03	后盖	BACK COVER	1		
040	LP1002030001-004	1021P-01	输出轴	OUTPUT SHAFT	1		
050	LP1002030001-005	M6*25	内六角圆柱头螺钉	SCREW	6		
060	LP1002030001-006	9021P-01	前盖	FRONT COVER	1		
070	LP1002030001-007	M10*45	六角头法兰面螺栓	SCREW	7		
080	LP1002030001-008	M14*1.5	螺堵	SCREW PLUG	1		
090	LP1002030001-009	M18*1.5	塑料油堵	OIL BLOCKAGE	2		
100	LP1002030001-010	10*1.6	垫圈	WASHER	7		
110	LP1002030001-011	5024	单向阀体	VALVE BODY	3		
120	LP1002030001-012	0.5*5*12	弹簧	SPRING	2		
130	LP1002030001-013	6	钢球	STEEL BALL	2		
140	LP1002030001-014	6.9*1.8	O型橡胶密封圈	O-RING	3		
150	LP1002030001-015	90*2.65	O型橡胶密封圈	O-RING	3		
160	LP1002030001-016	3021	隔板	PARTITION	1		
170	LP1002030001-017	5021-02 (315)	针齿	NEEDLE TOOTH	7		
180	LP1002030001-018	4021-02 (315)	转子	ROTOR	1		
190	LP1002030001-019	8021-02	联动轴	LINKAGE SHAFT	1		
200	LP1002030001-020	47.29*2.65	O型橡胶密封圈	O-RING	1		
210	LP1002030001-021	60006	深沟球轴承	BEARING	1		
220	LP1002030001-022	GB894.2	轴用弹性挡圈	RETAINING RING	1		
230	LP1002030001-023	W504-01	齿轮	GEAR	1		
240	LP1002030001-024	30	平垫	FLAT GASKET	1		
250	LP1002030001-025	8*2.1	弹性垫圈	ELASTIC WASHER	1		
260	LP1002030001-026	M8*25	六角头螺栓	SCREW	1		
270	LP1002030001-027	7021-01	骨架油封	SKELETAL OIL SEAL	1		
280	LP1002030001-028	7029-01	格莱圈	GLAY CIRCLE	1		
290	LP0102030001	BM2-315花键	回转马达	ROYTARY MOTOR	1		

↔ 可互换; ↘ 不可互换; ← 以新换旧; → 以旧换新

 
K012 行走马达 TRAVELING MOTOR

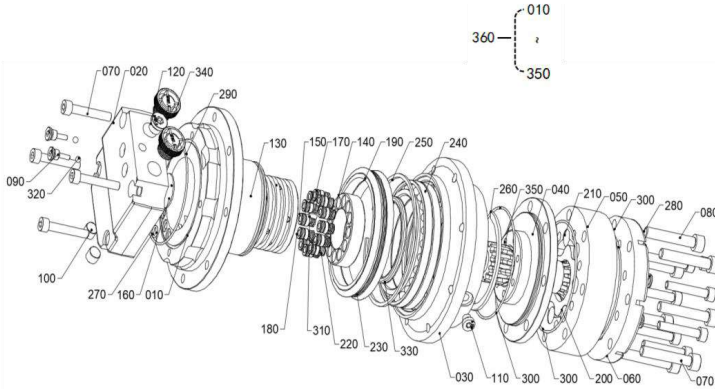

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1002020023-001	B112-15	壳体	SHELL	1		
020	LP1002020023-002	B114-05	单速阀体	VALVE BODY	1		
030	LP1002020023-003	B112-03	壳体	SHELL	1		
040	LP1002020023-004	E112-01	隔板	PARTITION	1		
050	LP1002020023-005	H112(310)	定子	STATOR	1		
060	LP1002020023-006	E112-02	后盖	BACK COVER	1		
070	LP1002020023-007	M8*50	内六角圆柱头螺钉	SCREW	7		
080	LP1002020023-008	M10*60	内六角圆柱头螺钉	SCREW	7		
090	LP1002020023-009	F112-11	螺堵	SCREW PLUG	2		
100	LP1002020023-010	G4分之1	顶丝	SET SCREW	2		
110	LP1002020023-011	G8分之1	螺堵	SCREW PLUG	1		
120	LP1002020023-012	M14*1.5	螺堵	SCREW PLUG	1		
130	LP1002020023-013	H112-02	配油盘	OIL PAN	1		
140	LP1002020023-014	H112-03	配油盘2	OIL PAN TWO	1		
150	LP1002020023-015	F112-05	活塞	PISTON	12		
160	LP1002020023-016	Y112-02	平垫	FLAT GASKET	1		
170	LP1002020023-017	K112-07	密封垫	GASKET	12		
180	LP1002020023-018	7.7*1.9	O型橡胶密封圈	O-RING	12		
190	LP1002020023-019	K112-05	浮封环	FLOATING SEAL RING	2		
200	LP1002020023-020	4061-(310)	轴承限位套	LIMIT SLEEVE	1		
210	LP1002020023-021	5056(310)	针齿	NEEDLE TOOTH	7		
220	LP1002020023-022	1.5*9*8	压缩弹簧	COMPRESSION SPRING	12		
230	LP1002020023-023	109*7	O型橡胶密封圈	O-RING	2		
240	LP1002020023-024	112	轴承	BEARING	1		
250	LP1002020023-025	N112-01	止动环	RETAINING RING	1		
260	LP1002020023-026	N112-02	止动环	RETAINING RING	1		
270	LP1002020023-027	8*2	O型橡胶密封圈	O-RING	4		
280	LP1002020023-028	8*1.6	平垫圈	FLAT WASHER	7		
290	LP1002020023-029	99.5*1.9	O型橡胶密封圈	O-RING	1		
300	LP1002020023-030	104*2	O型橡胶密封圈	O-RING	3		

↔ 可互换; ↗ 不可互换; ↖ 以新换旧; → 以旧换新

 
M001 标签 LABEL

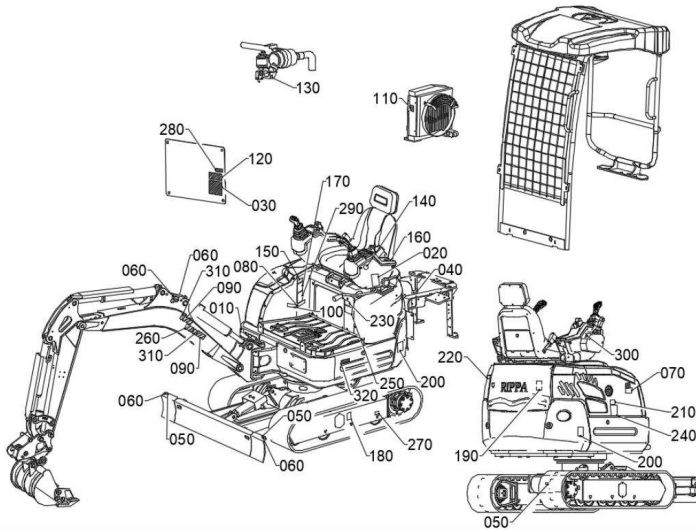

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0116011957		标签	LABEL	1		
020	LP0116011958		安全锁标签	SAFETY LOCK LABELS	1		
030	LP0116012002		计算标签	LABEL	1		
040	LP0116011987		注意标签	LABEL, CAUTION	1		
050	LP0116011962		标签	LABEL	3		
060	LP0116011963		标签	LABEL	4		
070	LP0116011970		注意标签	LABEL, CAUTION	1		
080	LP0116011965		警告标签	WARNING LABELS	1		
090	LP0116011960		注意标签	LABEL, CAUTION	2		
100	LP0116011973		操作标签	OPERATION LABELS	1		
110	LP0116011988		风扇警告标签	LABEL, FAN WARNING	1		
120	LP0116011989		警告标签	WARNING LABELS	1		
130	LP0116011972		标签	LABEL	1		
140	LP0116011971		标签	LABEL	1		
150	LP0116011966		警告标签	WARNING LABELS	1		
160	LP0116012001		标签	LABEL	1		
170	LP0116011975		“小心触电”标签	LABEL	1		
180	LP0116011977		标签	LABEL	1		
190	LP0116011975		注意标签	LABEL, CAUTION	1		
200	LP0116011979		注意标签	LABEL, CAUTION	2		
210	LP0116011974		标签	LABEL	1		
220	LP0116011981		注意标签	LABEL, CAUTION	1		
230	LP0116011983		标签	LABEL	1		
240	LP0116012007		标签	LABEL	1		
250	LP0116011980		注意标签	LABEL, CAUTION	1		
260	LP0116012006		注意标签	LABEL, CAUTION	1		
270	LP0116011982		注意标签	LABEL, CAUTION	1		
280	LP0116011984		注意标签	LABEL, CAUTION	1		
290	LP0116011969		警告标签	WARNING LABELS	1		
300	LP0116012004		操作标签	OPERATION LABELS	1		

↔ 可互换, ≠ 不可互换, ← 以新核旧, → 以旧换新

 M002 标签 LABEL

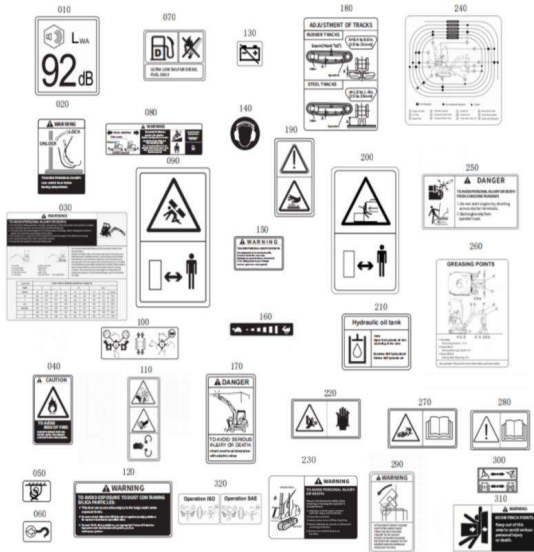

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0116011957		标签	LABEL	1		
020	LP0116011958		安全锁标签	SAFETY LOCK LABELS	1		
030	LP0116012002		计算标签	LABEL	1		
040	LP0116011987		注意标签	LABEL, CAUTION	1		
050	LP0116011962		标签	LABEL	3		
060	LP0116011963		标签	LABEL	4		
070	LP0116011970		注意标签	LABEL, CAUTION	1		
080	LP0116011965		警告标签	WARNING LABELS	1		
090	LP0116011960		注意标签	LABEL, CAUTION	2		
100	LP0116011973		操作标签	OPERATION LABELS	1		
110	LP0116011988		风扇警告标签	LABEL, FAN WARNING	1		
120	LP0116011989		警告标签	WARNING LABELS	1		
130	LP0116011972		标签	LABEL	1		
140	LP0116011971		标签	LABEL	1		
150	LP0116011966		警告标签	WARNING LABELS	1		
160	LP0116012001		标签	LABEL	1		
170	LP0116011975		"小心触电" 标签	LABEL	1		
180	LP0116011977		标签	LABEL	1		
190	LP0116011975		注意标签	LABEL, CAUTION	1		
200	LP0116011979		注意标签	LABEL, CAUTION	2		
210	LP0116011974		标签	LABEL	1		
220	LP0116011981		注意标签	LABEL, CAUTION	1		
230	LP0116011983		标签	LABEL	1		
240	LP0116012007		标签	LABEL	1		
250	LP0116011980		注意标签	LABEL, CAUTION	1		
260	LP0116012006		注意标签	LABEL, CAUTION	1		
270	LP0116011982		注意标签	LABEL, CAUTION	1		
280	LP0116011984		注意标签	LABEL, CAUTION	1		
290	LP0116011969		警告标签	WARNING LABELS	1		
300	LP0116012004		操作标签	OPERATION LABELS	1		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

