

注意事项

使用本零件表时，请注意以下事项。

1. 订购零件时，请使用本零件表检查确认零件的数量和零件的名称。
2. 需要修理时，请参照本零件表中的插图。
3. 本零件表适用于R22-3 Pro车型。
4. 本零件表如有变更，恕不另行通知。

NOTICE


This Parts List is for the following purposes.

1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
2. When making repairs, refer to the illustrations in this Parts List.
3. This Parts List is applicable to the R22-3 Pro model.
4. This Parts List is subject to change without notice.

使用说明 INSTRUCTION

①
↓
K002

阀体部件(动臂)
SPOOL SECTION (BOOM)

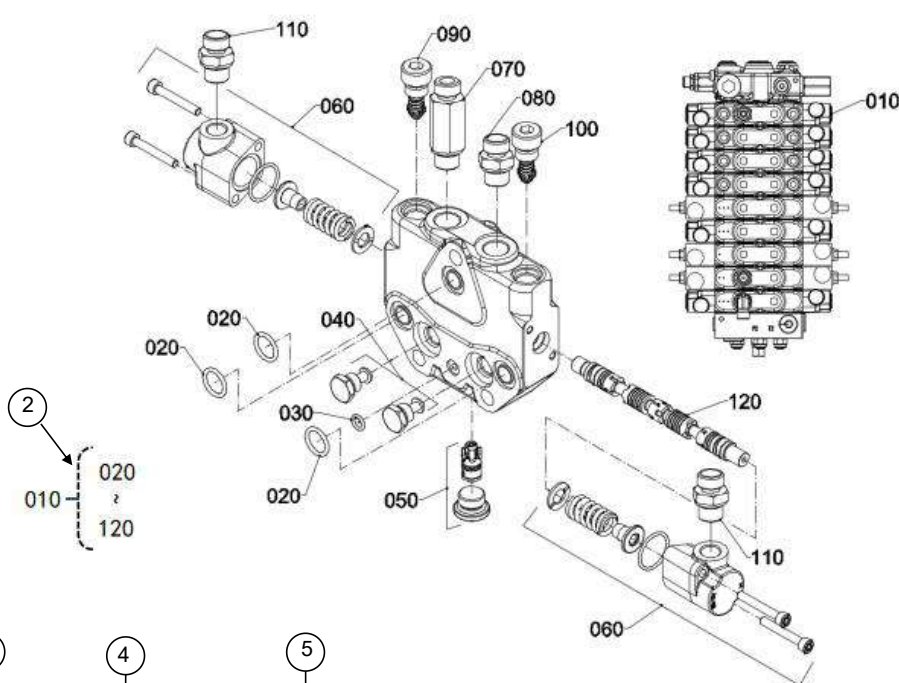

③
↓

④
↓

⑤
↓

⑥
↓

⑦
↓

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1001030020-002		动臂联阀体部件	ASSY VALVE, BOOM	1		
020	LP1001030020-014		密封	SEAL	3		
030	LP1001030020-015		密封	SEAL	1		
040	LP1001030020-016		单向阀部件	CHECK VALVE	2		
050	LP1001030020-017		补偿阀部件	COMPENSATING VALVE	1		
060	LP1001030020-018		端盖部件	END COVER	2		


- ① 图号-----代表与每一组名称相对应的数字。
- ② 组件-----供一个装配用的组件可以通过一组虚线识别。
- ③ 序号 (REF. No.) -----参考数字是指在图解说明中特定的零部件由特定的数字代表。在图解中一个零部件的代号可以通过参考零部件目录上的同的参考数字而识别出来。
- ④ 存货编码-----每个零部件独一无二的识别代码，用于代表该部件。
- ⑤ 零件号-----零部件的规格型号或者该零部件的零件号。
- ⑥ 互换性-----表示由于设计上的变化部件的可互换型。
- 例 ≠ -----表示新老零部件之间不可以替换。
- 例 ← -----表示一个新部件可以替换一个老部件，相反则不行。
- 例 → -----表示一个老部件可以替换一个新部件，相反则不行。
- ⑦ 备注-----补充信息，如油管方向等。
- 例 Z-Z · 14H-0-----表示油管接头两头都是直头，油管规格是14H，无特别说明。
- 例 Z-W90 · 14H-0-----表示油管接头一直一弯，油管规格是14H，无特别说明。
- 例 W90-W90 · 14H-Y-----表示油管接头两头都是90° 弯头，油管规格是14H，弯头方向是一上一右。
- 例 W90-W90 · 22H-F-----表示油管接头两头都是90° 弯头，油管规格是22H，F表示两个弯头方向相反，T表示两个弯头方向相同。

- ① Fig.No.-----Represents No. corresponding to each group name.
- ② Components-----The components of an assembly are identified by a bracket of dotted lines.
- ③ REF. No. -----Reference numbers assigned to parts in the illustration.The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ④ Inventory Code -----A unique identification code assigned to each part/component, used to represent that specific part component.
- ⑤ Part Number -----The specification/model of a component or the part number of that component.
- ⑥ I. C. -----Indicates the interchangeability of parts due to design change.
 Example \neq -----Indicates that the new and old components cannot be replaced with each other.
 Example \leftarrow -----Indicates that a new component can replace an old component, but not vice versa.
 Example \rightarrow -----Indicates that an old component can replace a new component, but not vice versa.
- ⑦ Remarks -----Supplementary information, such as the direction of oil pipes,etc.
 Example Z-Z·14H-0 -----Indicates that both ends of the hydraulic pipe fitting are straight ends, the hydraulic pipe specification is 14H, and there is no special instruction.
 Example Z-W90·14H-0 -----Indicates that the hydraulic pipe fitting has one straight end and one 90° elbow end, the hydraulic pipe specification is 14H, and there is no special instruction.
 Example W90-W90·14H-Y ----Indicates that both ends of the hydraulic pipe fitting are 90° elbow ends, the hydraulic pipe specification is 14H, and the directions of the elbows are one upward and one to the right.
 Example W90-W90·22H-F ----Indicates that both ends of the hydraulic pipe fitting are 90° elbow ends, the hydraulic pipe specification is 22H; "F" means the two elbows are in opposite directions, and "T" means the two elbows are in the same direction.

序 列 号

如下所示，本产品的型号名称、机器号和发动机号在其相应的位置都有说明。请注意，规格不同，它们的位置也不同。请检查产品的规格。


	型号	序列号
挖掘机	_____	_____
发动机	_____	_____
购买日期	_____	_____
经销商名称 (由购买者填写)	_____	

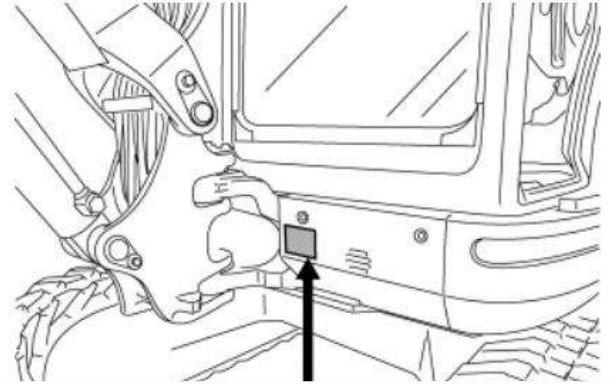

CE SHANDONG RIPPA MACHINERY GROUP CO.,LTD.

Product Name	Hydraulic Excavator	Model	R22
Engine power(kw)	18.2	Operating Mass(kg)	2023
Serial Number	>LPR25060304<	Year	2025/6

The north of Guang'an Road and east of Gaoxin Avenue (Liaoh Road),
High tech Zone, Jining City, Shandong, P.R. China. TEL:+86-0537 2339712
Web:www.rippa.com

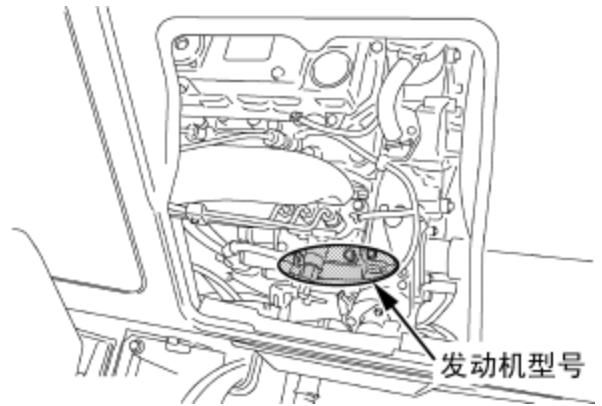


SERIAL NUMBER

The model name, machine number and engine number of this product are described in their respective positions, as shown below. Note that their positions may be different depending on the specifications. Check the specifications of the product.

	Model	Serial No.
Excavator	_____	_____
Engine	_____	_____
Date of Purchase	_____	_____
Name of Dealer	_____	_____

(To be filled in by purchaser)

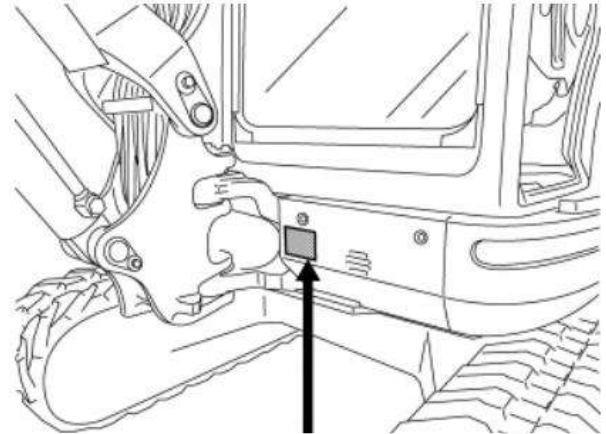


CE SHANDONG RIPPA MACHINERY GROUP CO.,LTD.


Product Name	Hydraulic Excavator	Model	R22
Engine power(kw)	18.2	Operating Mass(kg)	2023
Serial Number	>LPR25060304<	Year	2025/6

The north of Guang'an Road and east of Gaoxin Avenue (Liaohe Road),
High tech Zone, Jining City, Shandong, P.R. China.


TEL:+86-0537 2339712
Web:www.rippa.com

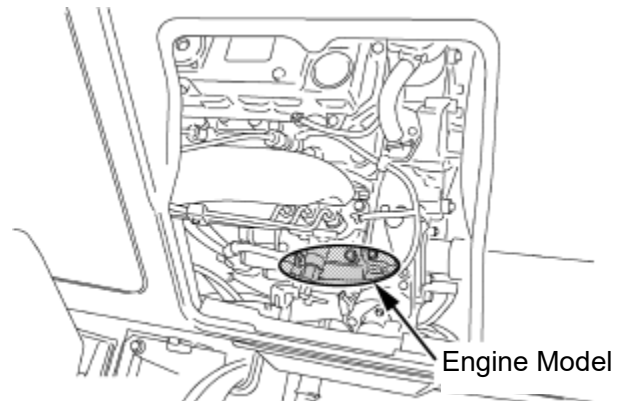





目录部分

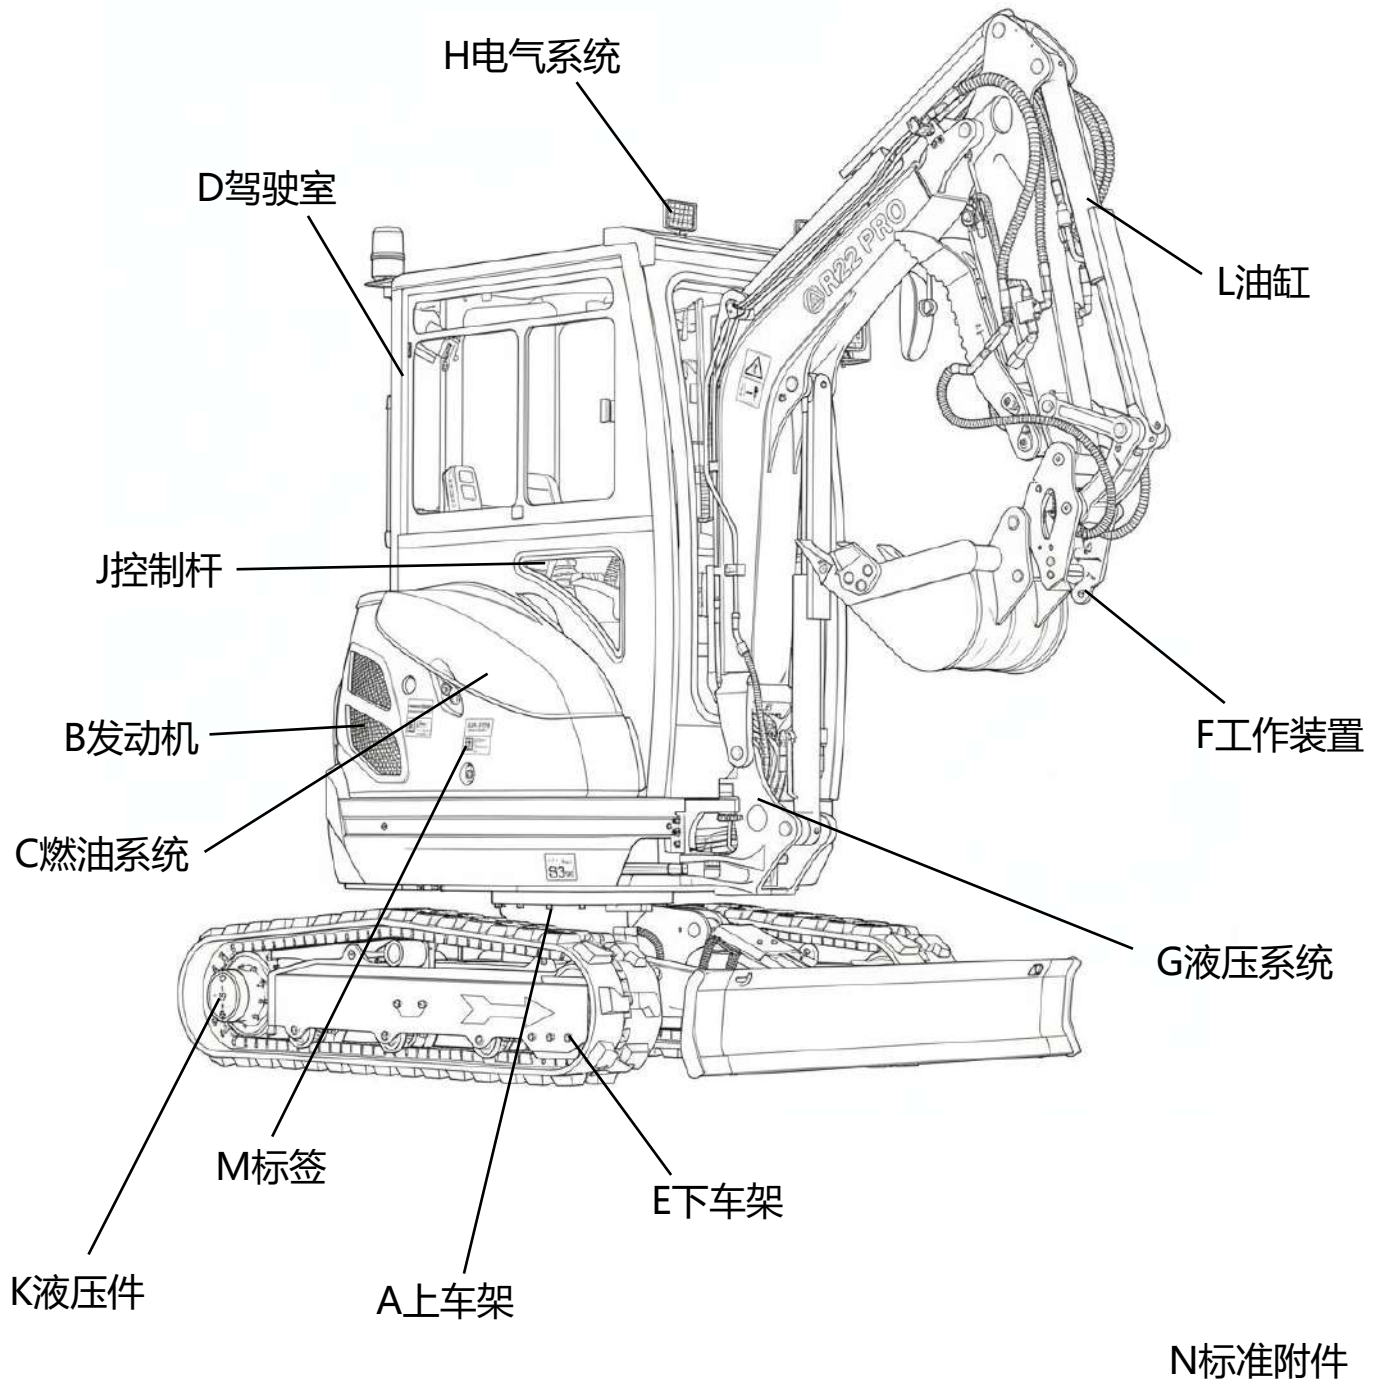

SECTION CONTENTS

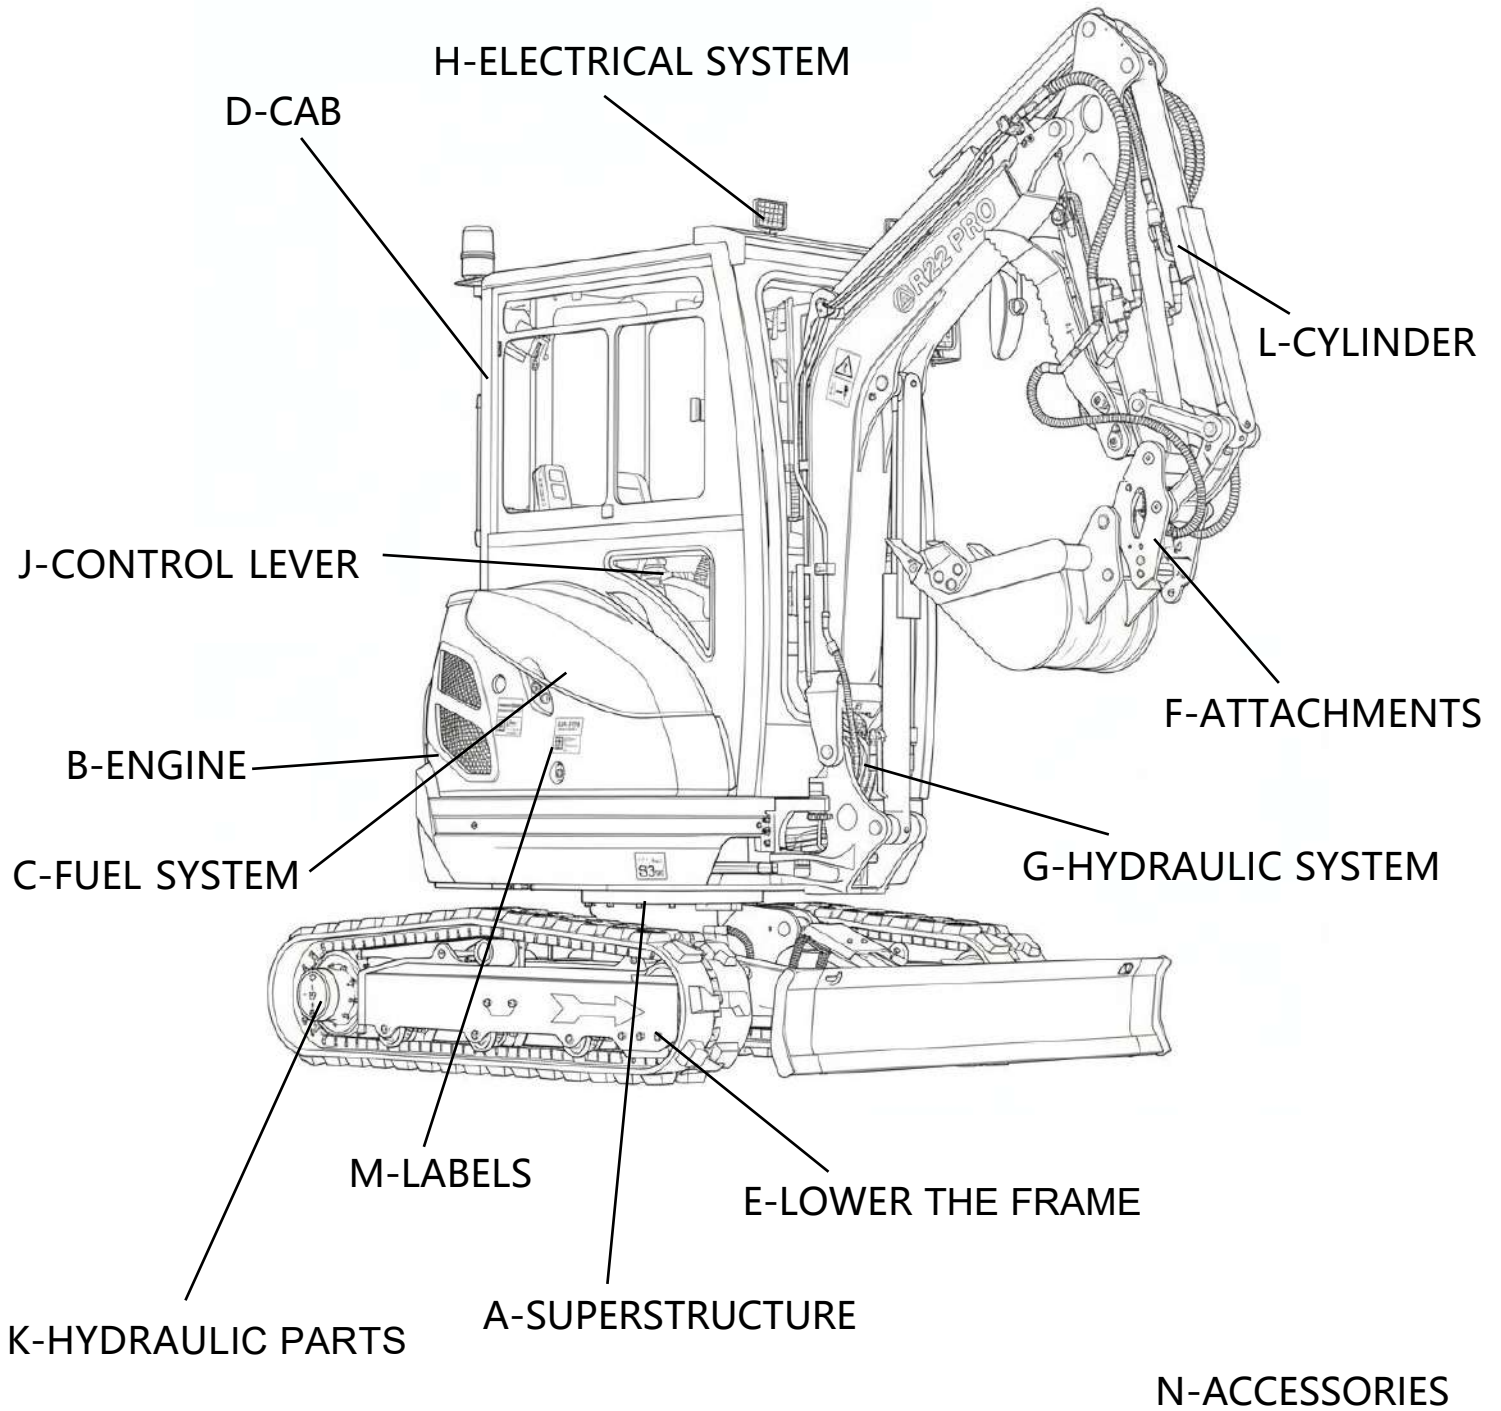

[如何阅读带图解内容]

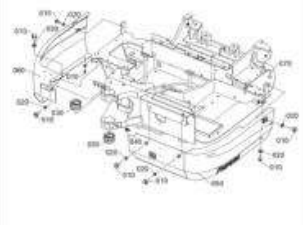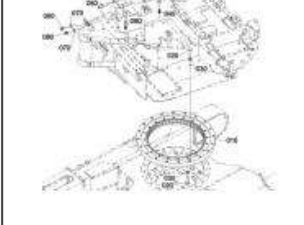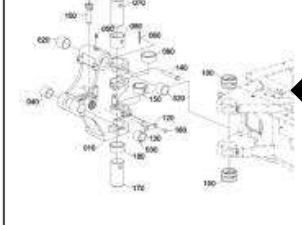A上车架 ← 步骤1 SUPERSTRUCTURE			
Fig. No. A001 ← 步骤2	A002	Fig. No. A003 ← 步骤3	
下围护罩	动臂支架	动臂支架	座椅支架
CABIN (PARTITION PLATE)	SWIVEL BEARING	BOOM BRACKET	SESEAT SUPPORT
			

步骤 1：该处指目录中列出的项目。

步骤 2：这些为正文中给出的图号。（图号...0003）





步骤 3：为文本中的名称。

步骤 4：指文本中组件的图解。

如何检索：

在目录部分选择您要查找的项目。在步骤 1 中找到相同的项目。在步骤 4 中找到要查找的件。在步骤 2 和步骤 3 中，参阅组件的页码并检索相应的部件号。

[How to Read Content with Illustrations]

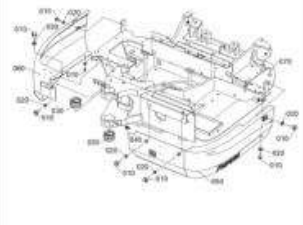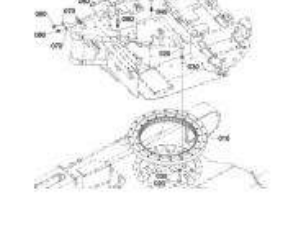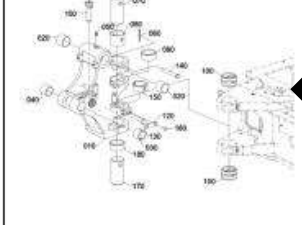A 上车架 ← STEP1 SUPERSTRUCTURE			
Fig. No. A001 ← STEP2	A002	Fig. No. A003 ← STEP3	
下围护罩	动臂叉架	动臂支架	座椅支...
GABIN (PARTITION PLATE)	SWIVEL BEARING	BOOM BRACKET	SESEAT SUPPORT
			
			← STEP4

Step 1: This refers to the items listed in the table of contents.

Step 2: These are the figure numbers given in the main text.

(Figure No....0003)

Step 3: These are the names in the text.

Step 4: This refers to the diagrams of the components in the text.

How to search: Select the item you want to find in the table of contents. Locate the same item in Step 1. Find the part you are looking for in Step 4. In Steps 2 and 3, refer to the page number of the assembly and retrieve the corresponding part number.

A 上车架
SUPERSTRUCTURE

Fig.No. **A001**
回转支撑
SWIVEL BEARING



Fig.No. **A002**
动臂支架
BOOM BRACKET

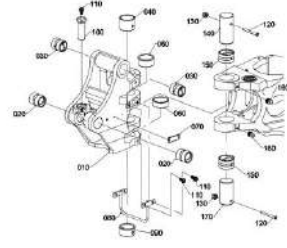


Fig.No. **A003**
下围护罩
CABIN (PARTITION PLATE)

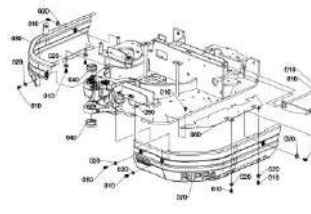


Fig.No. **A004**
右护罩
REAR SHIELD



Fig.No. **A005**
配重
COUNTERWEIGHT



Fig.No. **A006**
踏板
PEDAL

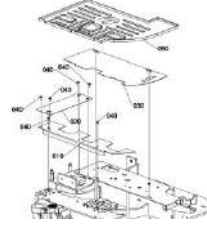


Fig.No. **A007**
座椅支架
SESEAT SUPPORT



Fig.No. **A008**
后护罩
REAR SHIELD



Fig.No. **A009**
座椅护罩, 左护罩
BOLT SHIELD, LEFT SHIELD

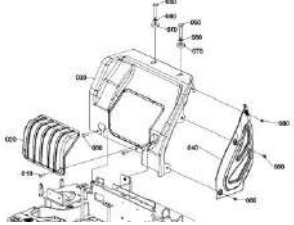


Fig.No. **A010**
座椅
SEAT



B 发动机
ENGINE

Fig.No. **B001**
曲轴箱
CRANKCASE



Fig.No. **B002**
油盘
OIL PAN
















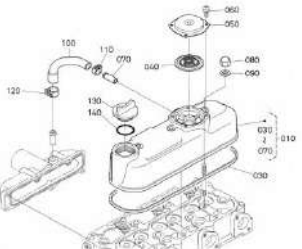


















Fig.No. **B003**
油缸头
CYLINDER HEAD GEARBOX

















Fig.No. **B004**
齿轮箱
GEARBOX

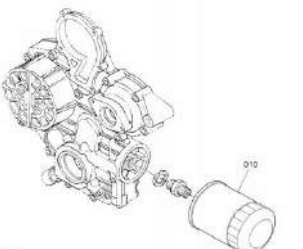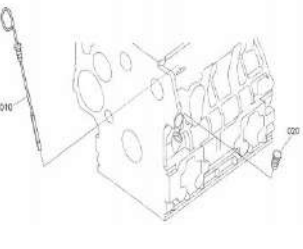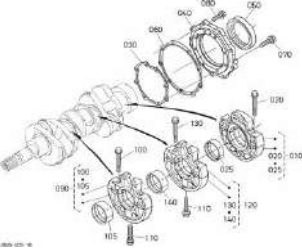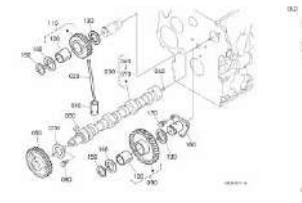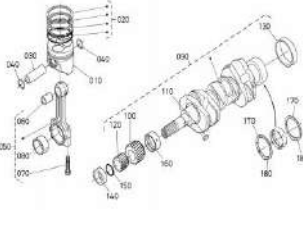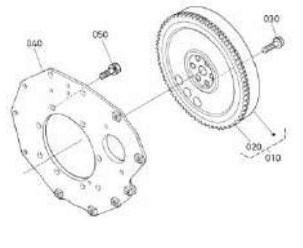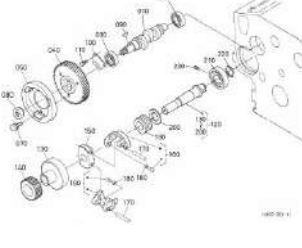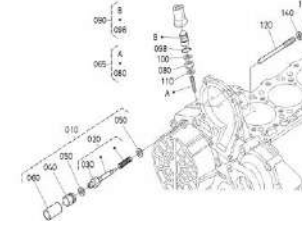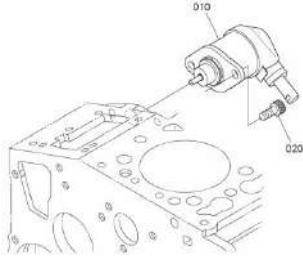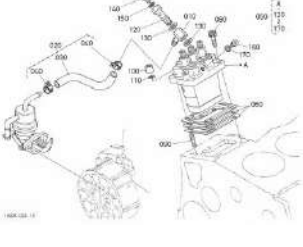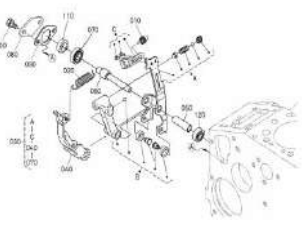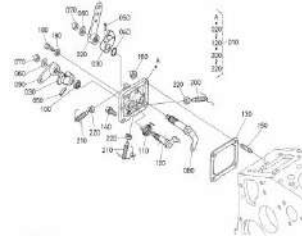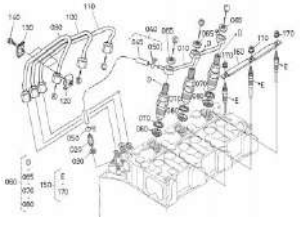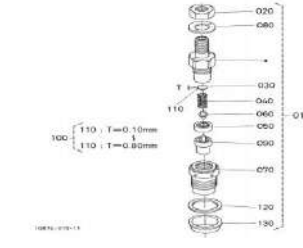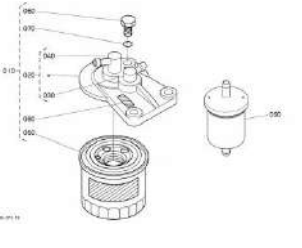





<p>Fig.No. B005 顶盖 TOP COVER</p> 	<p>Fig.No. B006 机油滤清器 OIL FILTER</p> 	<p>Fig.No. B007 油量表 OIL GAUGE</p> 	<p>Fig.No. B008 主轴承箱 MAIN BEARING HOUSING</p> 
<p>Fig.No. B009 凸轮轴和中间齿轮轴 CAMSHAFT AND INTERMEDIATE GEAR SHAFT</p> 	<p>Fig.No. B010 活塞和曲柄轴 PISTON AND CRANKSHAFT</p> 	<p>Fig.No. B011 飞轮 FLYWHEEL</p> 	<p>Fig.No. B012 燃油凸轮轴和调速器轴 FUEL CAMSHAFT AND GOVERNOR SHAFT</p> 
<p>Fig.No. B013 怠速限制装置 IDLE SPEED LIMITING DEVICE</p> 	<p>Fig.No. B014 熄火电磁阀 FLAMEOUT SOLENOID VALVE</p> 	<p>Fig.No. B015 喷射泵 INJECTION PUMP</p> 	<p>Fig.No. B016 调速器 GOVERNOR</p> 
<p>Fig.No. B017 调速板 GOVERNOR BOARD</p> 	<p>Fig.No. B018 喷嘴座和电热塞 NOZZLE HOLDER GLOW PLUG</p> 	<p>Fig.No. B019 喷嘴座和电热塞 NOZZLE HOLDER</p> 	<p>Fig.No. B020 燃油滤清器 FUEL FILTER</p> 
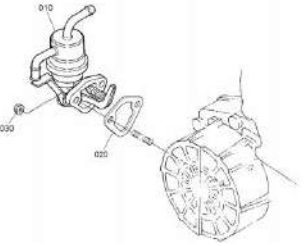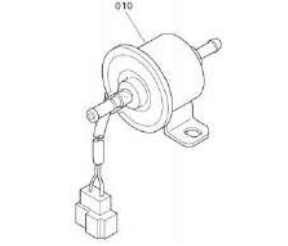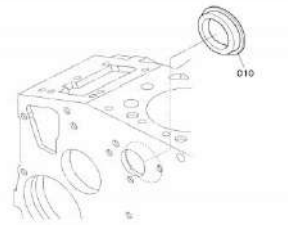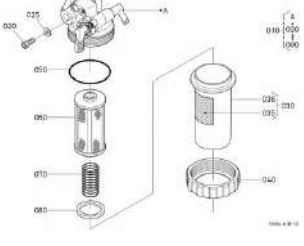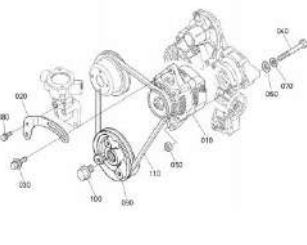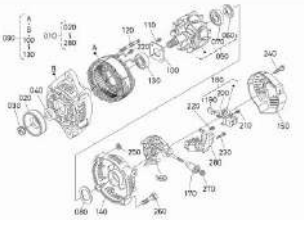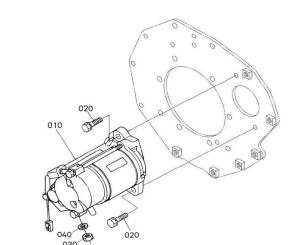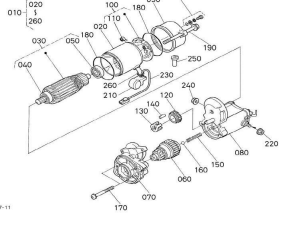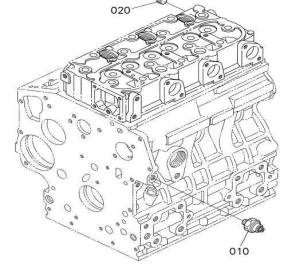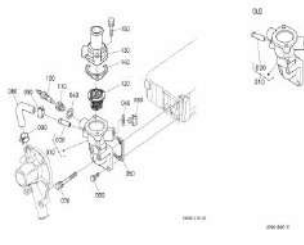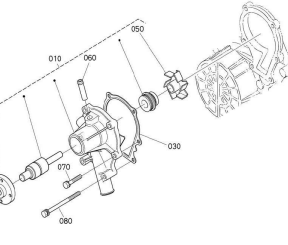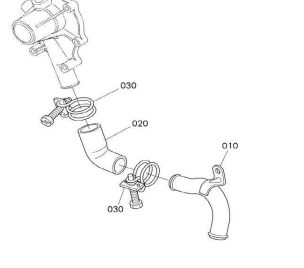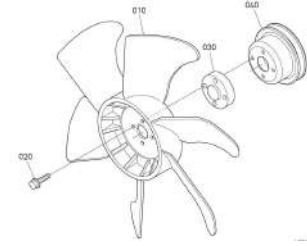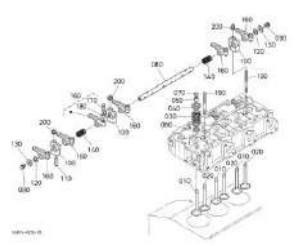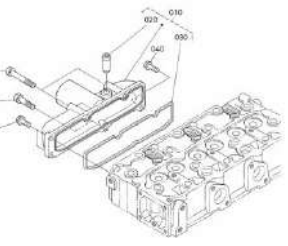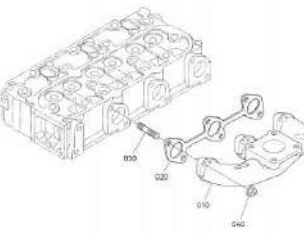
<p>Fig.No. B021 燃油泵（机械式） MECHANICAL FUEL PUMP</p> 	<p>Fig.No. B022 燃油泵（电磁式） ELECTROMAGNETIC FUEL PUMP</p> 	<p>Fig.No. B023 燃油泵盖 FUEL PUMP COVER</p> 	<p>Fig.No. B024 油水分离器（组成部分） OIL-WATER SEPARATOR</p> 
<p>Fig.No. B025 交流发电机和皮带轮 ALTERNATOR PULLEY</p> 	<p>Fig.No. B026 交流发电机（组成部分） ALTERNATOR</p> 	<p>Fig.No. B027 起动机 ALTERNATOR</p> 	<p>Fig.No. B028 起动机（组成部分） STARTER MOTOR</p> 
<p>Fig.No. B029 机油开关 OIL SWITCH</p> 	<p>Fig.No. B030 进出水法兰和节温器 WATER INLET AND OUTLET FLANGES THERMOSTAT</p> 	<p>Fig.No. B031 水泵 WATER PUMP</p> 	<p>Fig.No. B032 水管 WATER PIPE</p> 
<p>Fig. No. B033 风扇 FAN</p> 	<p>Fig. No. B034 气门和摇臂 VALVE ROCKER ARM</p> 	<p>Fig. No. B035 进气歧管 INTAKE MANIFOLD</p> 	<p>Fig. No. B036 排气歧管 EXHAUST MANIFOLD</p> 

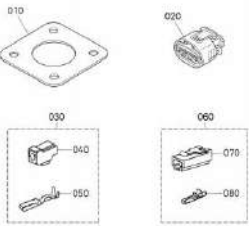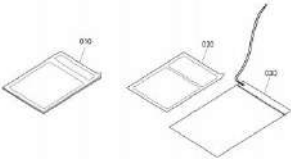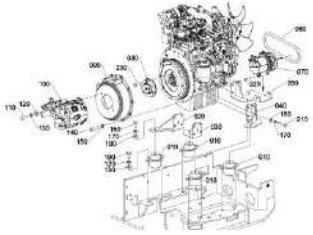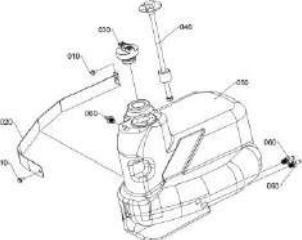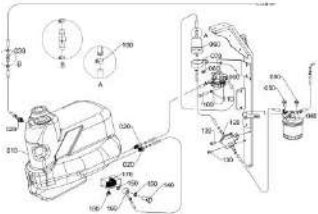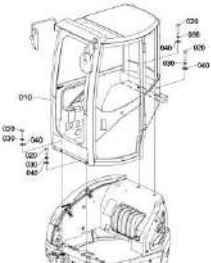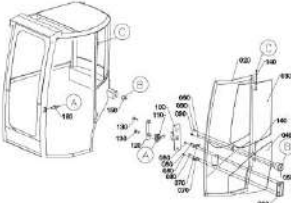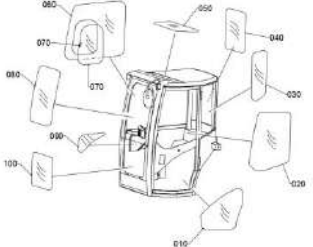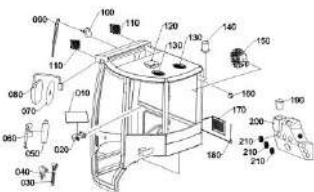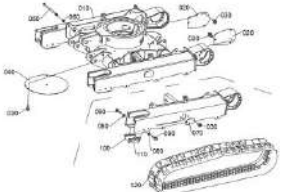
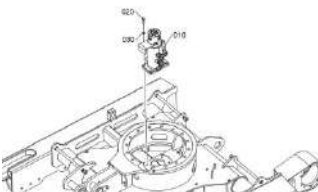
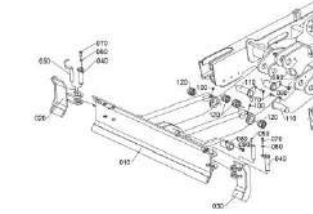
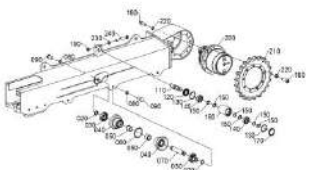
<p>Fig.No. B037 附件和维修零件 ACCESSORIES MAINTENANCE PARTS</p> 	<p>Fig.No. B038 标签和使用说明书 LABEL USERMANUAL</p> 	<p>Fig.No. B039 发动机支座 ENGINE MOUNT</p> 	
<p>C 燃油系统 FUEL SYSTEM</p>			
<p>Fig.No. C001 燃油箱 FUEL TANK</p> 	<p>Fig.No. C002 燃油系统 FUEL SYSTEM</p> 		
<p>D 驾驶室 CAB</p>			
<p>Fig.No. D001 驾驶室（主体） CABIN (BODY)</p> 	<p>Fig.No. D002 驾驶室门 CAB DOOR</p> 	<p>Fig.No. D003 驾驶室（玻璃） CAB (GLASS)</p> 	<p>Fig.No. D004 驾驶室配件 CAB PARTS</p> 
<p>E 下车架 LOWER THE FRAME</p>			
<p>Fig.No. E001 履带架 TRACK FRAME</p> 	<p>Fig.No. E002 回转接头 ROTARY JOINT</p> 	<p>Fig.No. E003 推土铲 BULLDOZER BLADE</p> 	<p>Fig.No. E004 支重轮 ROLLER</p> 




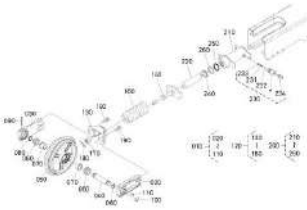
<p>Fig.No. E005 引导轮 IDLER WHEEL</p> 			
---	--	--	--





**F 工作装置
ATTACHMENTS**
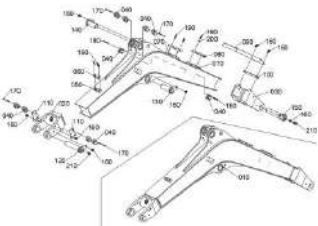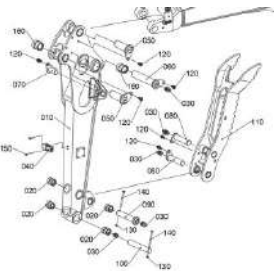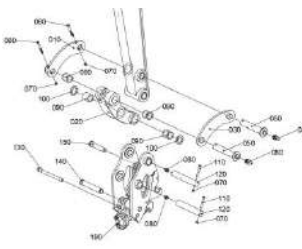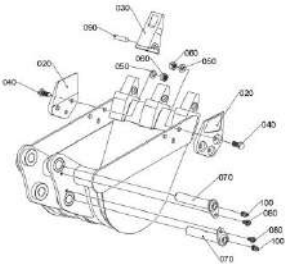
<p>Fig.No. F001 工作装置（动臂） WORK DEVICE (BOOM)</p> 	<p>Fig.No. F002 工作装置（斗杆） WORK DEVICE (BUCKET ROD)</p> 	<p>Fig.No. F003 工作装置（连遥杆和快换） WORK DEVICE (CONNECTING ROD & QUICK-CHANGE)</p> 	<p>Fig.No. F004 工作装置（挖斗） WORK DEVICE (BUCKET)</p> 
--	--	--	--





**G 液压系统
HYDRAULIC SYSTEM**
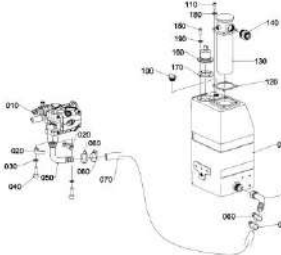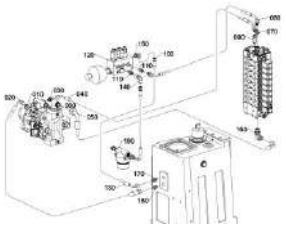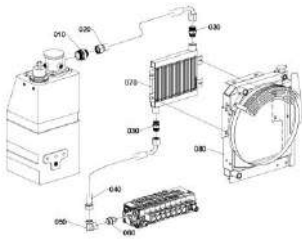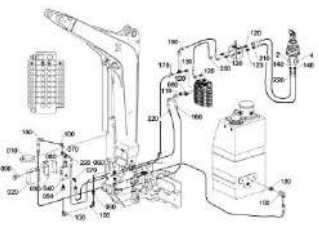
<p>Fig.No. G001 液压系统（主进油） HYDRAULIC SYSTEM (MAIN OIL INLET)</p> 	<p>Fig.No. G002 液压系统（输出） HYDRAULIC SYSTEM (DELIVERY)</p> 	<p>Fig.No. G003 液压系统（回流） HYDRAULIC SYSTEM (DELIVERY)</p> 	<p>Fig.No. G004 液压系统（动臂） HYDRAULIC SYSTEM (BOOM)</p> 
---	--	---	--
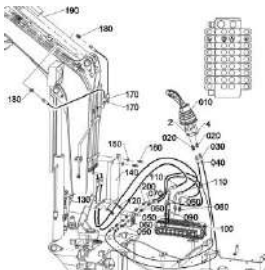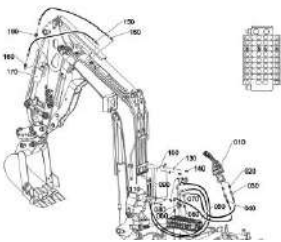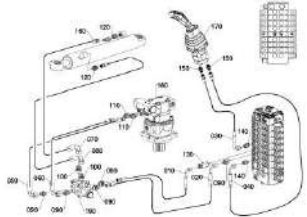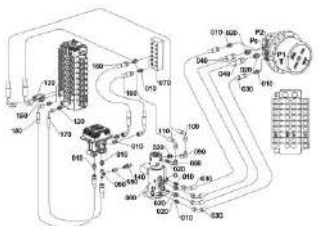
<p>Fig.No. G005 液压系统（斗杆） HYDRAULIC SYSTEM (ARM)</p> 	<p>Fig.No. G006 液压系统（挖斗） HYDRAULIC SYSTEM (BUCKET)</p> 	<p>Fig.No. G007 阀体部件(偏摆回转) HYDRAULIC SYSTEM (SWING ROTARY)</p> 	<p>Fig.No. G008 液压系统(左行走) SPOOL SECTION (TRAVEL LH)</p> 
---	--	---	---

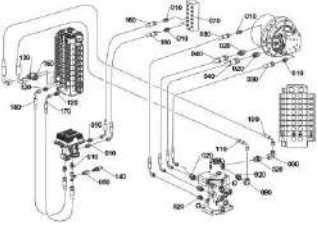
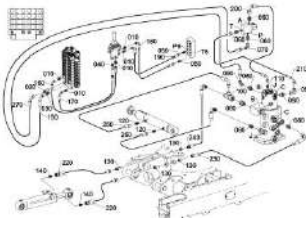
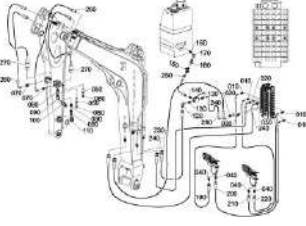
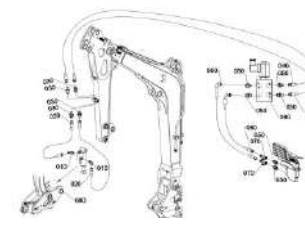
<p>Fig.No. G009 液压系统(右行走) SPOOL SECTION(TRAVEL RH)</p> 	<p>Fig.No. G010 阀体部件(推土) SPOOL SECTION(BLADE)</p> 	<p>Fig.No. G011 阀体部件(破碎) SPOOL SECTION(CRUSHING)</p> 	<p>Fig.No. G012 阀体部件(快换) SPOOL SECTION(QUICK CHANGE)</p> 
--	---	---	--

H 电气系统
ELECTRICAL SYSTEM
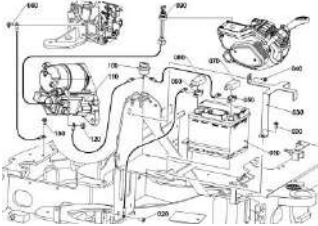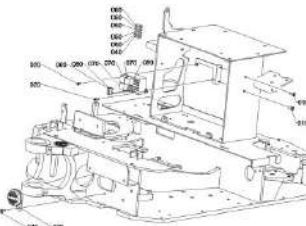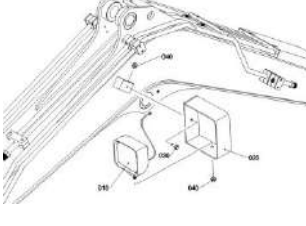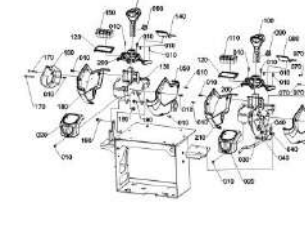
<p>Fig.No. H001 电气系统 (电瓶) ELECTRICAL SYSTEM (BATTERY)</p> 	<p>Fig.No. H002 电气系统 (喇叭和继电器) ELECTRICAL SYSTEM (HORN AND RELAY)</p> 	<p>Fig.No. H003 电气系统 (灯) ELECTRICAL SYSTEM (LIGHT)</p> 	<p>Fig.No. H004 电气系统 (扶手箱) ELECTRICAL SYSTEM (ARMREST BOX)</p> 
--	---	--	---

<p>Fig.No.H005 电气系统 (元件) CONTROL LEVER (LEVER LH)</p> 			
---	--	--	--

J 操作杆
CONTROL LEVER
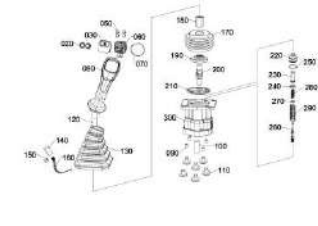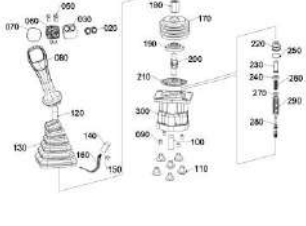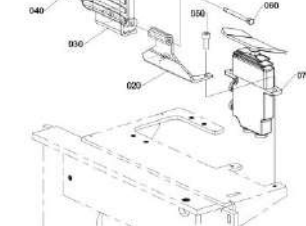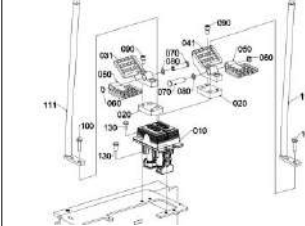
<p>Fig.No.J001 先导手柄 (左手柄) CONTROL LEVER (LEVER LH)</p> 	<p>Fig.No. J002 先导手柄 (右手柄) CONTROL LEVER (LEVER RH)</p> 	<p>Fig.No. J003 破碎脚踏 BROKEN PEDAL</p> 	<p>Fig.No. J004 行走阀、杆 WALKING VALVE, ROD</p> 
--	---	--	--

K 液压件
HYDRAULIC COMPONENTS

Fig.No. K000
多路阀
SPMULTI-WAY VALVE

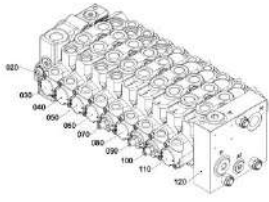


Fig.No. K001
阀体部件(进油)
SPOOL SECTION(OIL INLET)

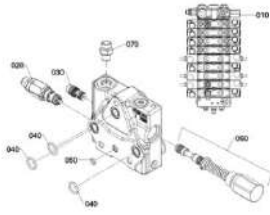


Fig.No. K002
阀体部件(动臂)
SPOOL SECTION(BOOM)

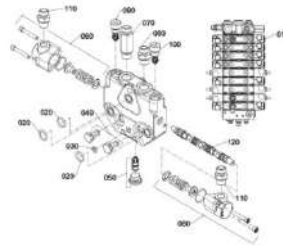


Fig.No.K003
阀体部件(斗杆)
SPOOL SECTION(ARM)

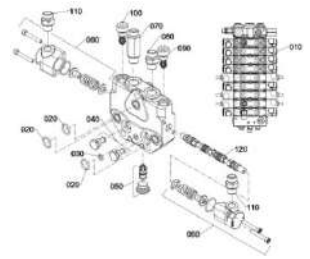


Fig.No. K004
阀体部件(铲斗)
SPOOL SECTION(BUCKET)

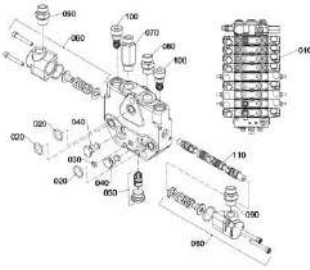


Fig.No. K005
阀体部件(破碎)
SPOOL SECTION(CRUSHING)

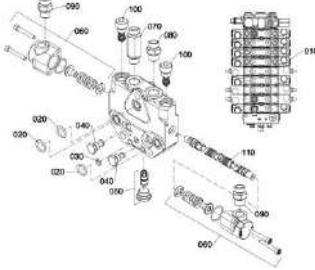


Fig.No. K006
阀体部件(回转)
SPOOL SECTION(SWING)

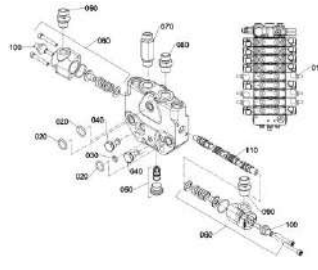


Fig.No. K007
阀体部件(偏摆)
SPOOL SECTION(YAW)

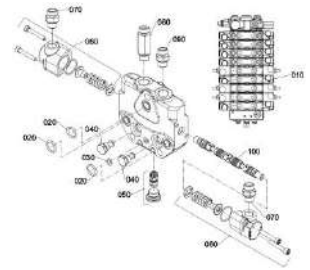


Fig.No. 008
阀体部件(左行走)
SPOOL SECTION(DRIVE LH)

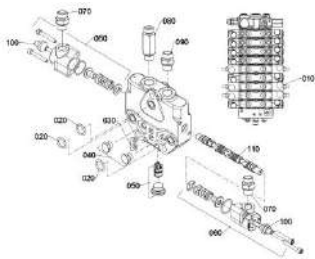


Fig.No. K009
阀体部件(右行走)
SPOOL SECTION(DRIVE RH)

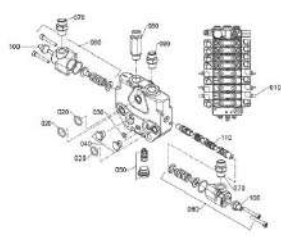


Fig.No. K010
阀体部件(推土)
SPOOL SECTION(BLADE)

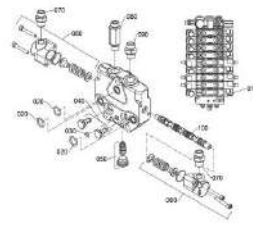


Fig.No. K011
端盖部件
END COVER COMPONENT



Fig.No. K012
限位端盖部件
LIMITING END COVER

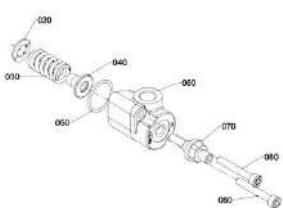


Fig.No. K013
柱塞泵和零件
PLUGER PUMP AND PARTS

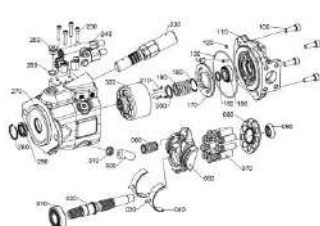


Fig.No. K014
回转马达
ROTARY MOTOR


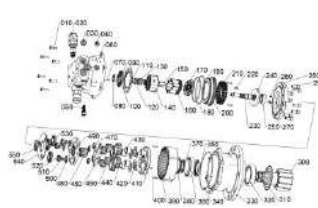


Fig.No. K015
行走马达
TRAVELING MOTOR

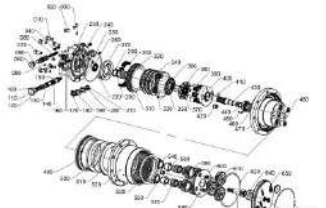

**L 油缸
CYLINDER**

Fig.No. L001
油缸（动臂）
BOOM CYLINDER

Fig.No. L002
油缸（斗杆）
ARM CYLINDER

Fig.No. L003
油缸（挖斗）
BUCKET CYLINDER

Fig.No. L004
油缸（动臂侧摆）
BOOM SWING CYLINDER

Fig.No. L005
油缸（推土铲）
DOZER BLADE CYLINDER

Fig.No. L006
油缸（伸缩）
DOZER BLADE CYLINDER

**M 标签
LABELS**


Fig.No. M001
标签
LABEL

Fig.No. M002
标签
LABEL

**N 标准附件
ACCESSORIES**

Fig.No. 001
标准附件
ACCESSORIES

A001 回转支撑 SWIVEL BEARING

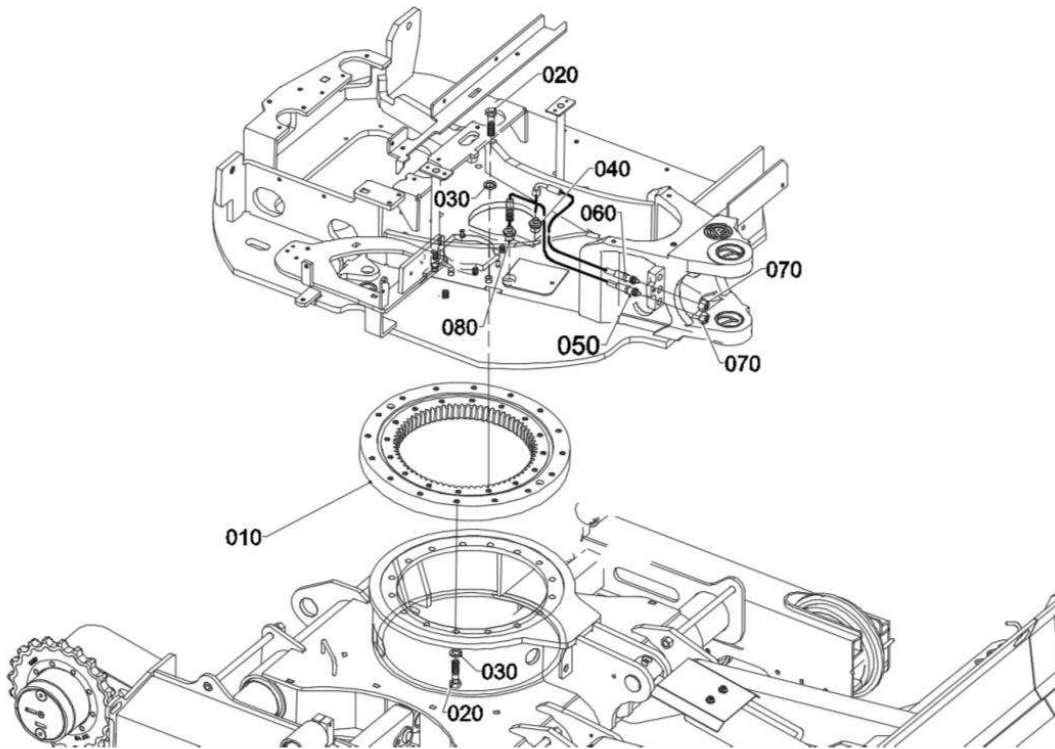


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0102040006	QNB445. 20Z1	回转支撑	BEARING, SWIVEL	1		
020	LP0116011688	M14*60	螺栓	BOLT	32		
030	LP0116011719	M14	弹垫	SPRING WASHER	32		
040	LP0115021625	14*1. 5C	对丝内丝	COUPLING NUT	1		
050	LP0115021864	6*1*710	黄油管	GREASE PIPE	1		
060	LP0115021865	6*1*760	黄油管	GREASE PIPE	1		
070	LP0115021672	M18	螺母	NUT	2		
080	LP0115021673	10*1. 5C-14*1. 5	对丝	COUPLING NUT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A002


动臂支架 BOOM BRACKET

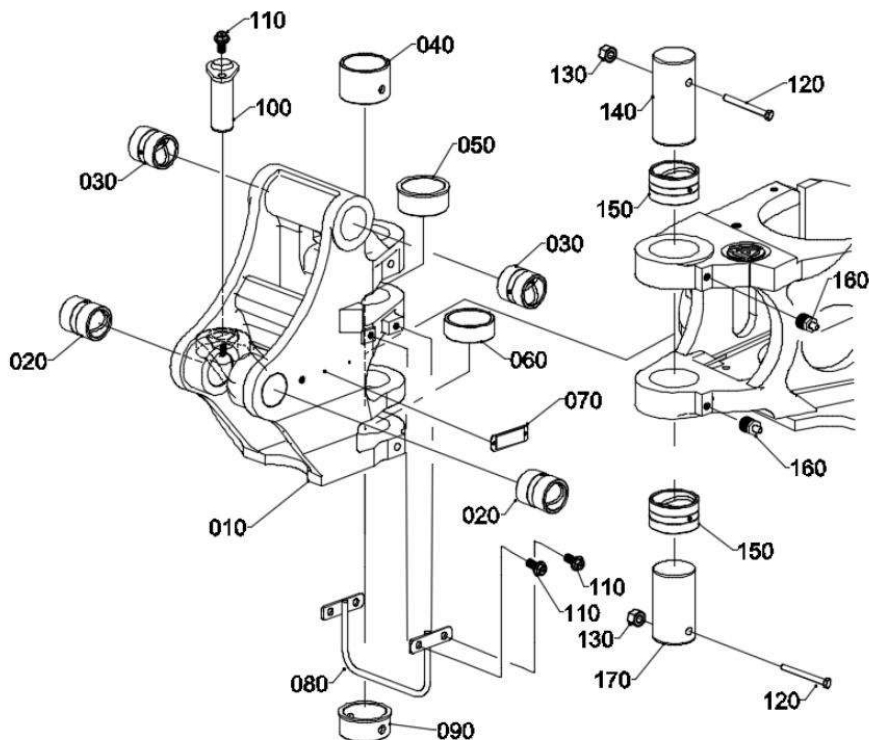

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112010166		动臂支架	BOOM BRACKET	1		
020	LP0107040041	40*50*55A	耐磨套	BUSHING	2		
030	LP0107040042	40*50*50A	耐磨套	BUSHING	2		
040	LP0107040043	60*70*50A	耐磨套	BUSHING	1		
050	LP0107040044	60*70/74*33	耐磨套	BUSHING	1		
060	LP0107040045	60*70*25	耐磨套	BUSHING	1		
070	LP0116012837		铭牌	NAMEPLATE	1		
080	LP0115040170		油管支架	OIL PIPE BRACKEET	1		
090	LP0107040046	60*70/74*33A	耐磨套	BUSHING	1		
100	LP0107021499	销轴TW-Φ40x167	销轴	PIN SHAFT	1		
110	LP0116012552	M10*20	法兰螺栓	FLANGE BOLT	3		
120	LP0116011632	M10*120	螺栓	BOLT	2		
130	LP0116011169	M10	螺母	NUT	2		
140	LP0107021497	GW-Φ60x128	销轴	PIN SHAFT	1		
150	LP0107040047	40*50*40A	耐磨套	BUSHING	2		
160	LP0116011085	M10*1	黄油嘴	NIPPLE, GREASE	2		
170	LP0107021498	GW-Φ60x106	销轴	PIN SHAFT	1		

↔ 可互换 ; ≠ 不可互换 ; ◀ 以新换旧 ; ▶ 以旧换新

A003

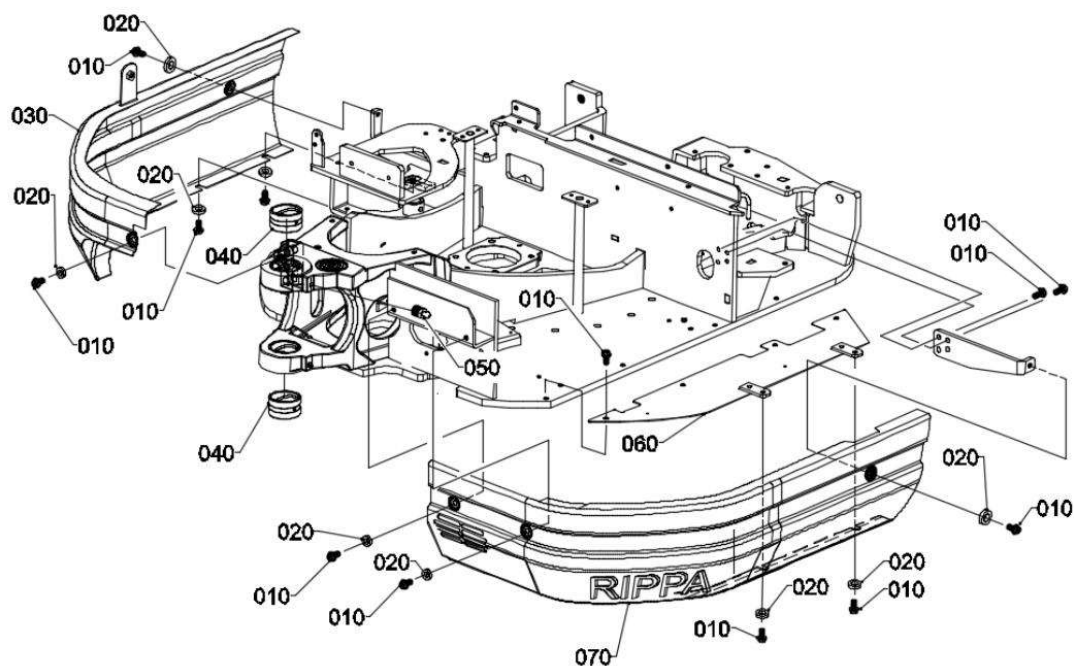
下围护罩
CABIN (PARTITION PLATE)

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0116012552	M10*20	法兰螺栓	FLANGE BOLT	15		
020	LP0116011715	M10	垫片	WASHER, PLAIN	9		
030	LP0112012688		右下围	COVER, RH	1		
040	LP0107040047	40*50*40A	耐磨套	BUSHING	2		
050	LP0116011085	M10*1	黄油嘴	NIPPLE, GREASE	2		
060	LP0115040169		左侧板	LEFT SIDE PANEL	1		
070	LP0112012687		左下围	COVER, LH	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A004

右护罩
REAR SHIELD

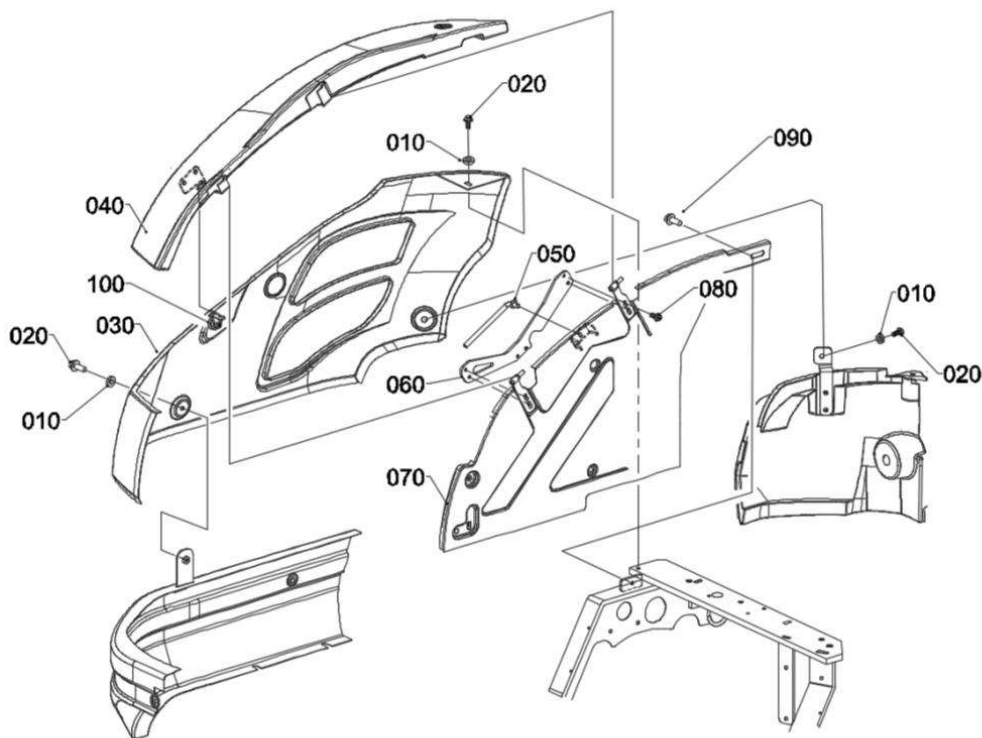


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.No.	互换性 I.C.	备注 REMARKS
010	LP0116011715	M10	垫片	WASHER, PLAIN	3		
020	LP0116012552	M10*20	法兰螺栓	FLANGE BOLT	3		
030	LP0112012690		护罩	SHIELD	1		
040	LP0105010015		塑料盖板	PLASTIC COVER PLATE	1		
050	LP0112014257		撑杆	MOUNTING PLATE	1		
060	LP0115040172		铰接固定板	HINGED MOUNTING PLATE	1		
070	LP0112012693		油箱护板	FUEL TANK CAP COVER	1		
080	LP0116011709	M8*20	法兰螺栓	FLANGE BOLT	4		
090	LP0116012527	M10*10	法兰螺栓	FLANGE BOLT	1		
010	LP0111080216		锁	LOCK	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A005

配重 COUNTERWEIGHT

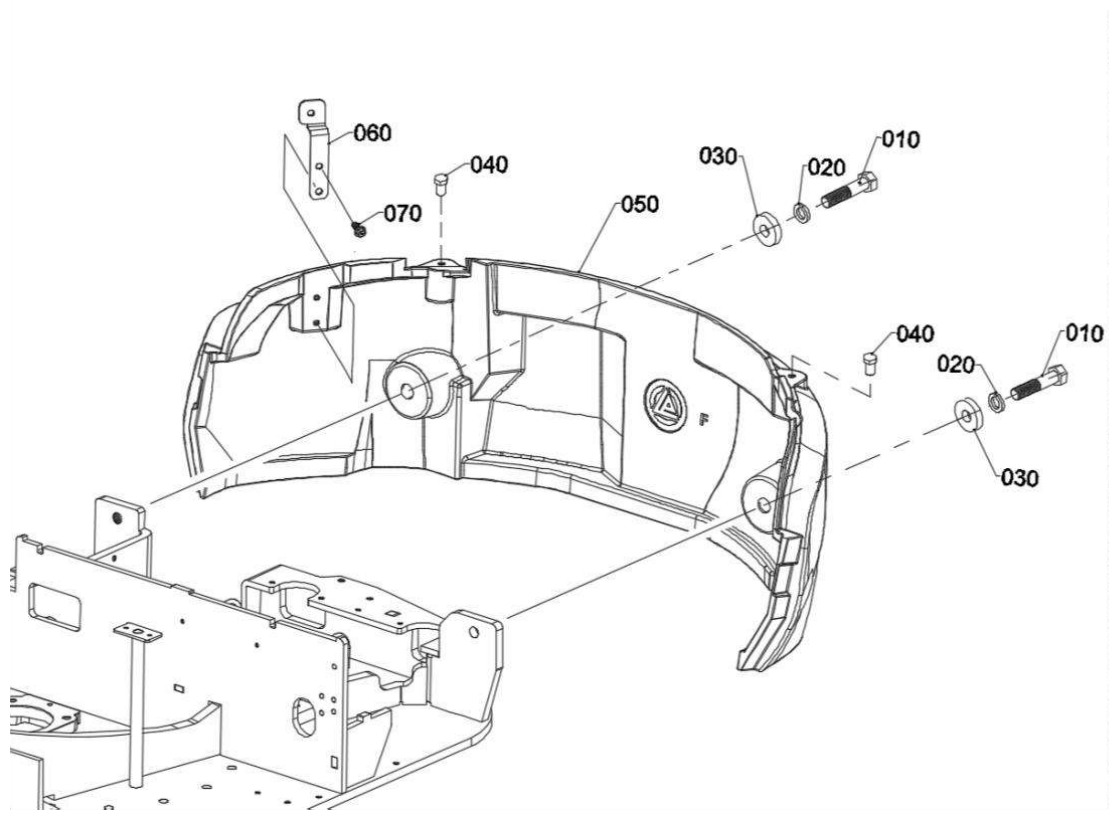


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互 换 性 I.C.	备注 REMARKS
010	LP0116011190	M20*90	螺栓	BOLT	2		
020	LP0116012612	M20	弹垫	SPRING WASHER	2		
030	LP0116011824	M20	垫片	WASHER	2		
040	LP0113040039		塞	PLUG	2		
050	LP0112020107		配重	PLUG	1		
060	LP0115040173		安装板	MOUNTING PLATE	1		
070	LP0116011205	M10*20	法兰螺栓	FLANGE BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A007


座椅支架 SEAT SUPPORT

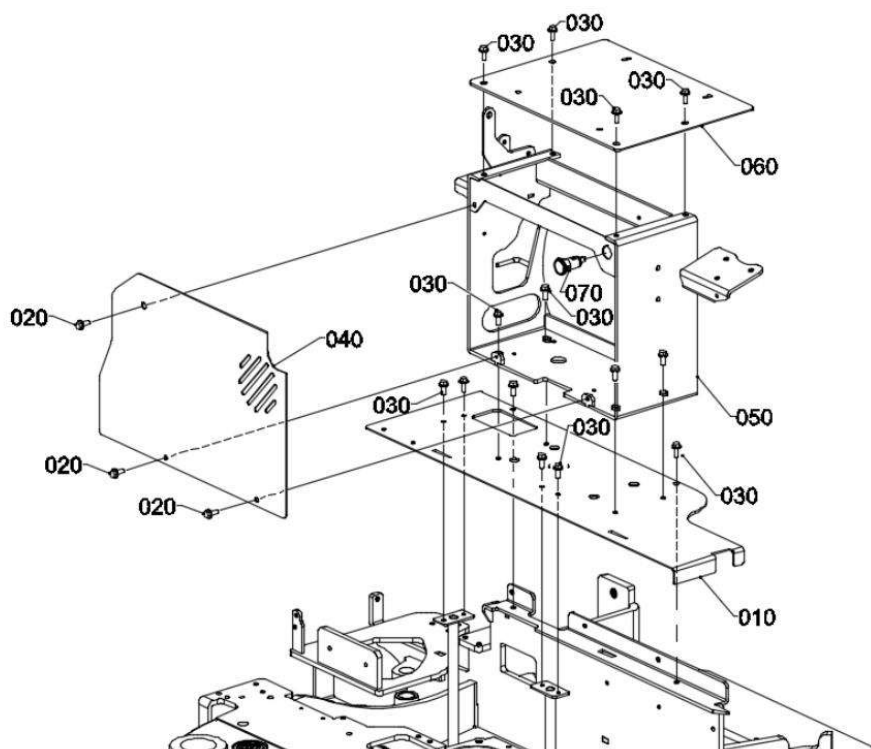

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I.C.	备注 REMARKS
010	LP0115040176		安装板	MOUNTING PLATE	1		
020	LP0116011660	M8*15	法兰螺栓	FLANGE BOLT	3		
030	LP0116012552	M10*15	法兰螺栓	FLANGE BOLT	14		
040	LP0115040177		前板	SEAT BRACKET COVER	1		
050	LP0112013202		座椅支架	SEAT BRACKET ASS.	1		
060	LP0115040178		安装板	MOUNTING PLATE	1		
070	LP0106040035		点烟器	12V AUX	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

A008

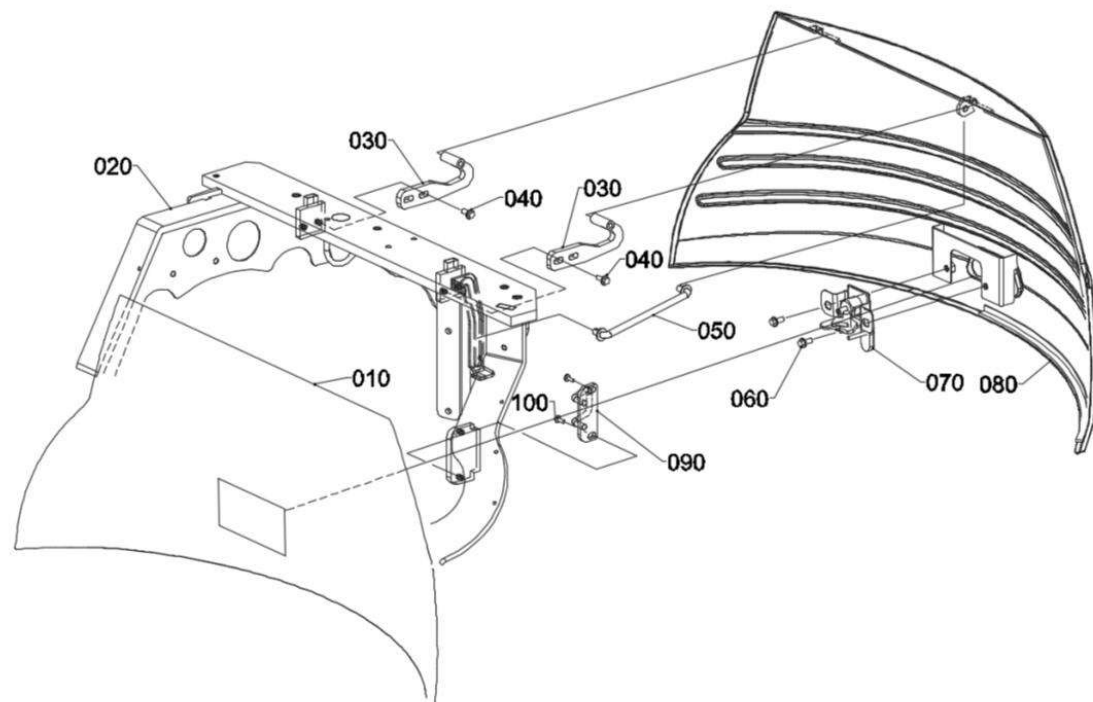
后护罩
REAR SHIELD

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互 换 性 I. C.	备注 REMARKS
010	LP0114020101		隔热棉	HEAT INSULATION	1		
020	LP0112012701		后支架	REAR BRACKET	1		
030	LP0112014783		安装板	MOUNTING PLATE	2		
040	LP0116011807	M10*25	螺栓	BOLT	4		
050	LP0114024258		撑杆	HEAT INSULATION	1		
060	LP0116012552	M10*15	法兰螺栓	FLANGE BOLT	2		
070	LP0111080011		锁	LOCK	1		
080	LP0112012691		后护罩	REAR COVER	1		
090	LP0112014659		安装板	MOUNTING PLATE	1		
100	LP0116011709	M8*20	法兰螺栓	FLANGE BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A009

座椅护罩, 左护罩
BOLT SHIELD, LEFT SHIELD

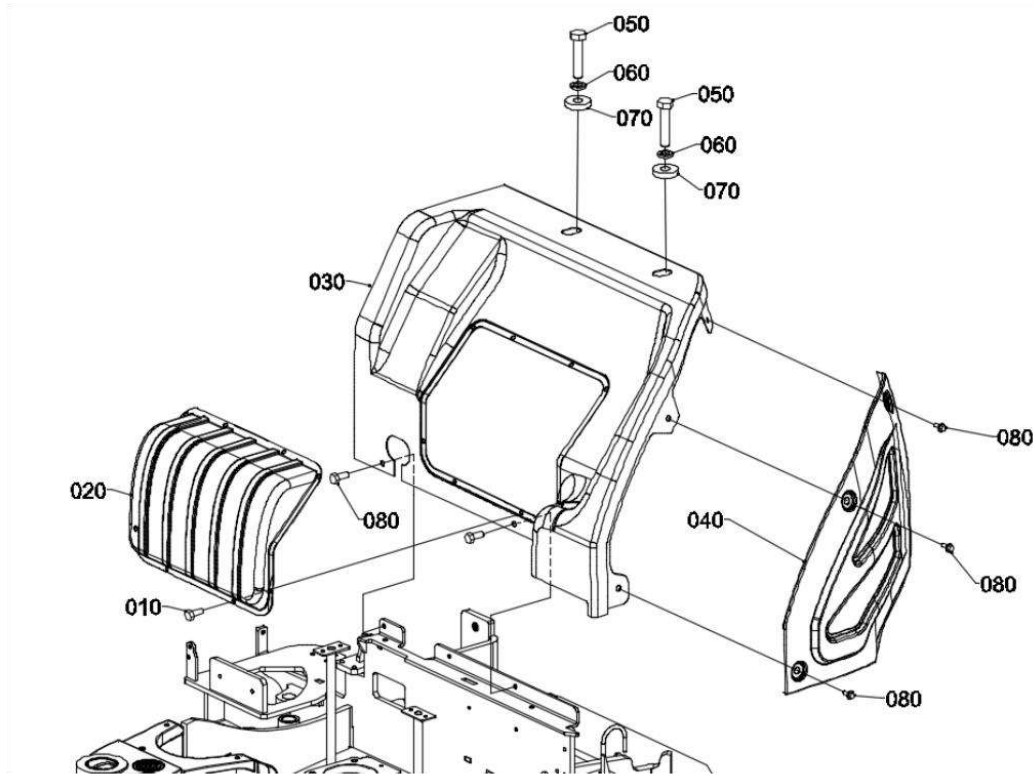


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.No.	互 换 性 I.C.	备注 REMARKS
010	LP0116011660	M8*15	法兰螺栓	FLANGE BOLT	8		
020	LP0112014792		检修板	FLANGE BOLT	1		
030	LP0112012692		座椅护罩	BOLT SHIELD	1		
040	LP0112012689		左护罩	LEFT SHIELD	1		
050	LP0116012469	M16*40	螺栓	BOLT	2		
060	LP0116011722	M16	弹垫	SPRING WASHER	2		
070	LP0116011882	M16	垫片	WASHER	2		
080	LP0116012552	M10*15	法兰螺栓	FLANGE BOLT	5		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

A010

座椅
SEAT

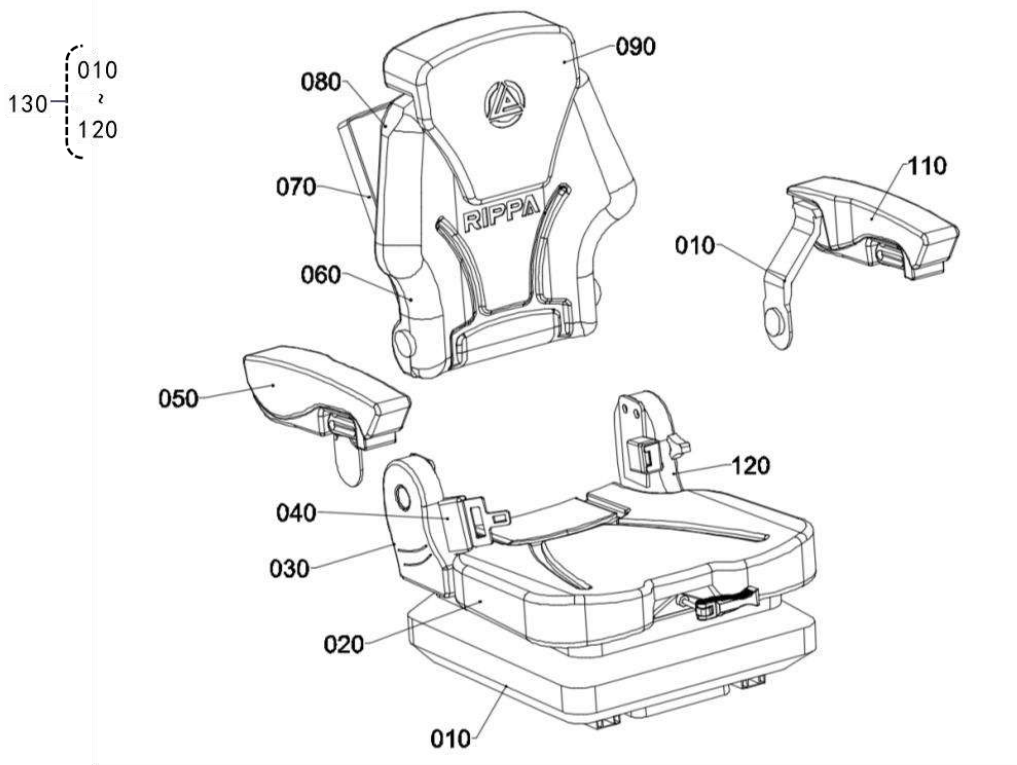


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互换性 I. C.	备注 REMARKS
010	LP1008040027-001		减震器总成	SHOCK ABSORBER ASSY	1		
020	LP1008040027-002		坐垫	SEAT CUSHION	1		
030	LP1008040027-003		右侧副调节器	RT SIDE AUX ADJ	1		
040	LP1008040027-004		安全带总成	SEAT BELT ASSY	1		
050	LP1008040027-005		右扶手	RIGHT ARMREST	1		
060	LP1008040027-006		靠背	SEAT BACKREST	1		
070	LP1008040027-007		储物盒	STORAGE BOX	1		
080	LP1008040027-008		后背外壳	REAR BACK SHELL	1		
090	LP1008040027-009		头枕	HEADREST	1		
100	LP1008040027-010		扶手支架	ARMREST BRACKET	1		
110	LP1008040027-011		左扶手	LEFT ARMREST	1		
120	LP1008040027-012		右侧调节器	RIGHT SIDE ADJUSTER	1		
130	LP0108040027		座椅总成	SEAT ASSEMBLY	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

B001


曲轴箱 CRANKCASE

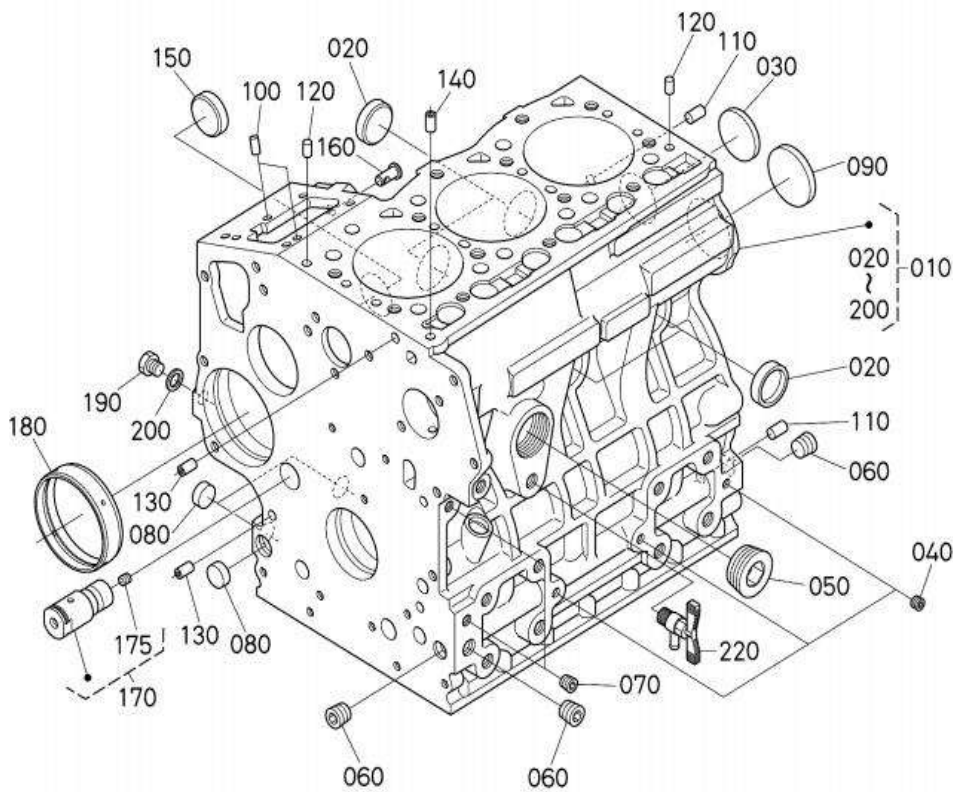

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-001	1J905-01014	曲轴箱组件	CRANKCASE	1		
020	LP1003020004-003	15451-96270	密封盖	SEALING COVER	4		
030	LP1003020004-004	15221-03490	密封盖	SEALING COVER	1		
040	LP1003020004-005	15261-96010	塞子	PLUG	3		
050	LP1003020004-006	16683-96020	塞	PLUG	1		
060	LP1003020004-007	16241-96010	塞	PLUG	3		
070	LP1003020004-041	15521-96020	塞子	PLUG	2		
080	LP1003020004-008	17391-96160	膨胀塞	EXPANSION PLUG	3		
090	LP1003020004-009	16271-96160	膨胀塞	EXPANSION PLUG	1		
100	LP1003020004-010	05012-00508	平行销	PARALLEL PIN	2		
110	LP1003020004-011	05012-00814	平行销	PARALLEL PIN	2		
120	LP1003020004-012	05012-00610	平行销	PARALLEL PIN	2		
130	LP1003020004-013	15231-33960	管状销	TUBULAR PIN	2		
140	LP1003020004-014	16241-33650	管销	TUBULAR PIN	1		
150	LP1003020004-015	16241-96262	塞	PLUG	1		
160	LP1003020006-002	16261-56280	起动弹簧销	STARTER SPRING PIN	1		
170	LP1003020006-003	16241-24060	轴部件	SHAFT ASSEMBLY	1		
175	LP1003020006-004	15521-93610	固定螺钉	SET SCREW	1		
180	LP1003020004-018	16271-55350	调速器齿轮衬套	GOVERNOR GEAR BUSHING	1		
190	LP1003020004-019	16896-33610	塞	PLUG	1		
200	LP1003020004-020	15021-33660	垫片	GASKET	1		
220	LP1003020004-021	16871-73020	排油旋塞组件	OIL DRAIN COCK	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B002 油盘 Oil Pan

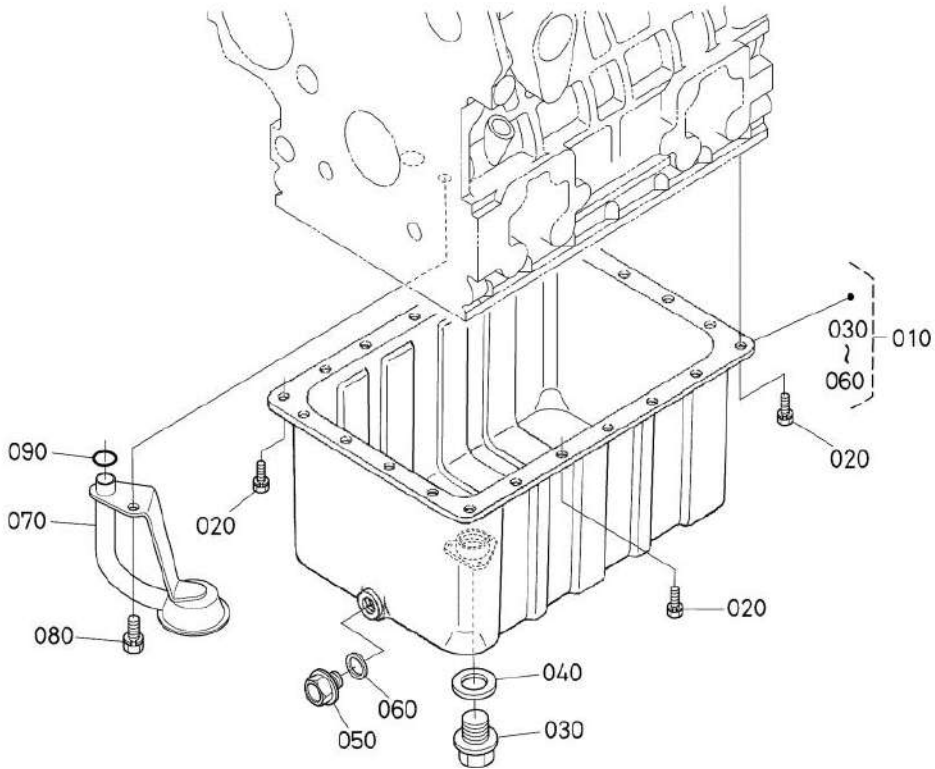


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-005	16613-01605	机油盘组件	OIL PAN ASSEMBLY	1		
020	LP1003020004-025	01023-50614	螺栓	BOLT	22		
030	LP1003020006-006	15707-33750	泄油塞	OIL DRAIN PLUG	1		
040	LP1003020004-426	16265-96670	密封垫片	SEALING GASKET	1		
050	LP1003020004-023	13901-33750	塞子	PLUG	1		
060	LP1003020004-425	6C090-58960	密封垫圈	SEALING WASHER	1		
070	LP1003020004-026	16226-32114	机油滤清器	OIL FILTER	1		
080	LP1003020004-027	01123-50816	螺栓	BOLT	1		
090	LP1003020004-028	04814-00160	O型密封圈	O-RING	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B003


**油缸头
CYLINDER HEAD**

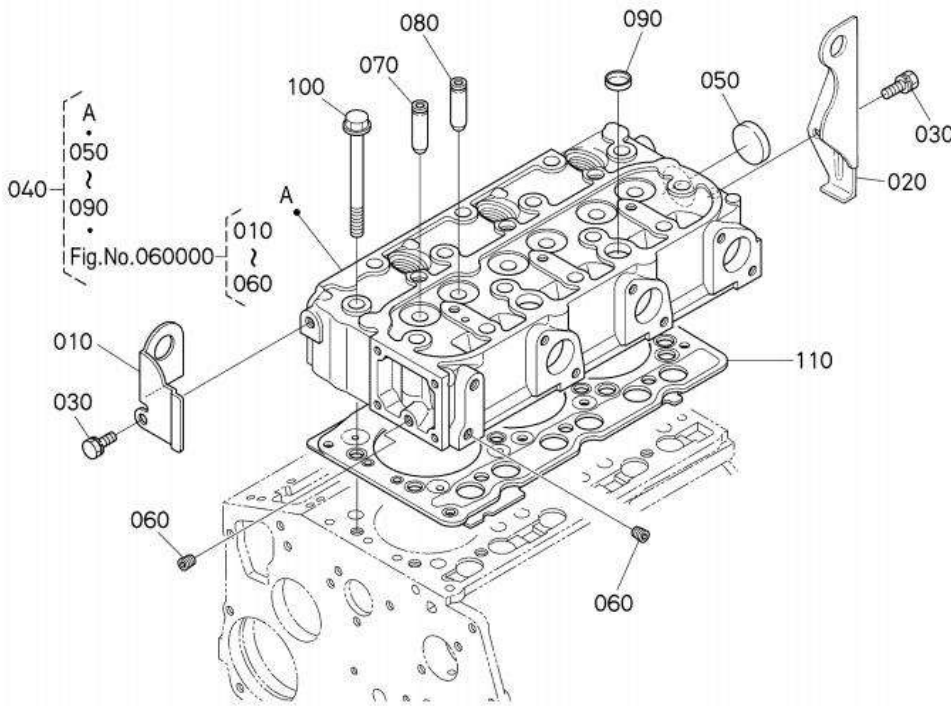

序号 REF. No.	存货编码 INV. No.	零件号 PARTNo.	零件名称	PART NAME	数量 Q'TY/S.No	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-030	16241-01753	发动机挂钩	ENGINE HOOK	1		
020	LP1003020004-031	16241-01770	发动机挂钩	ENGINE HOOK	1		
030	LP1003020004-032	01123-50814	螺栓	BOLT	2		
040	LP1003020006-007	1J096-03040	气缸盖组件	CYLINDER HEAD	1		
040	LP1003020006-008	1J096-03024	连接头组件	CONNECTOR ASSEMBLY	1		
050	LP1003020004-034	15321-96260	杯型塞	CUP PLUG	1		
060	LP1003020004-005	15261-96010	塞子	PLUG	2		
070	LP1003020004-035	16261-13540	进气阀套筒	INTAKE VALVE SLEEVE	3		
080	LP1003020004-036	16261-13560	出气阀套筒	EXHAUST VALVE SLEEVE	3		
090	LP1003020004-037	15261-03370	杯型塞	CUP PLUG	2		
100	LP1003020004-038	16241-03450	油缸头螺栓	CYLINDER HEAD BOLT	14		
110	LP1003020006-009	1G063-03310	油缸头衬垫	CYLINDER HEAD GASKET	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


B004 齿轮箱 GEARBOX

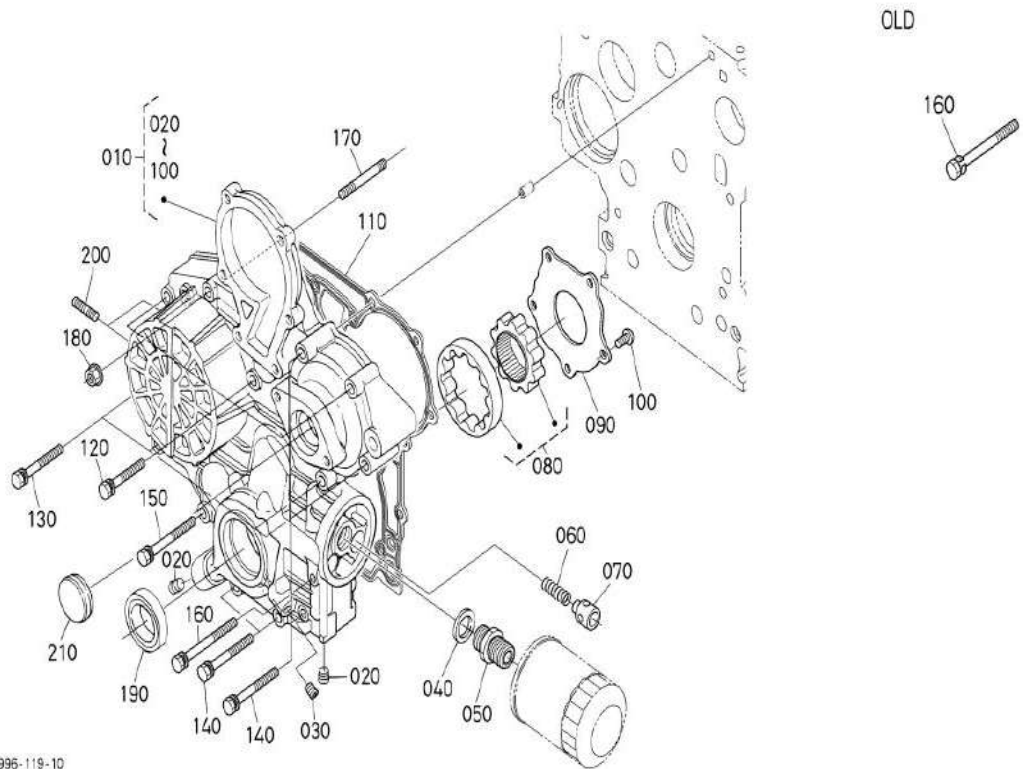

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-039	16252-04024	齿轮箱组件	GEARBOX ASSEMBLY	1		
020	LP1003020004-040	16241-96020	塞	PLUG	2		
030	LP1003020004-005	15521-96020	塞子	PLUG	1		
040	LP1003020004-042	04011-50180	平垫圈	FLAT WASHER	1		
050	LP1003020004-043	15241-32290	管接头	PIPE FITTING	1		
060	LP1003020004-044	1J050-36950	弹簧	SPRING	1		
070	LP1003020004-045	1J050-36930	溢流阀	RELIEF VALVE	1		
080	LP1003020004-046	1J050-35070	油泵转子组件	OIL PUMP ROTOR	1		
090	LP1003020004-047	1J050-35132	油泵盖	OIL PUMP COVER	1		
100	LP1003020004-048	03017-50614	球面圆柱头小螺丝	SCHSS	5		
110	LP1003020004-419	16264-04132	齿轮箱衬垫	GEARBOX GASKET	1		
120	LP1003020004-049	01023-50645	螺栓	BOLT	3		
120	LP1003020004-050	1J095-91010	螺栓	BOLT	3		
130	LP1003020004-051	01023-50650	螺栓	BOLT	4		
130	LP1003020004-052	1J095-91020	螺栓	BOLT	4		
140	LP1003020004-053	01023-50655	螺栓	BOLT	4		
140	LP1003020004-054	1J095-91030	螺栓	BOLT	4		
150	LP1003020004-055	01023-50665	螺栓	BOLT	1		
150	LP1003020004-056	1J095-91040	螺栓	BOLT	1		
160	LP1003020004-058	1J095-91050	螺栓	BOLT	1		
170	LP1003020004-059	16245-91530	双头螺栓	STUD BOLT	1		
180	LP1003020004-060	02751-50060	法兰螺母	FLANGE NUT	1		
190	LP1003020004-427	16241-04212	油封	OIL SEAL	1		
200	LP1003020004-179	16245-91540	双头螺栓	STUD BOLT	2		
210	LP1003020004-061	16264-83342	盖板	COVER PLATE	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

B005 顶盖 TOP COVER

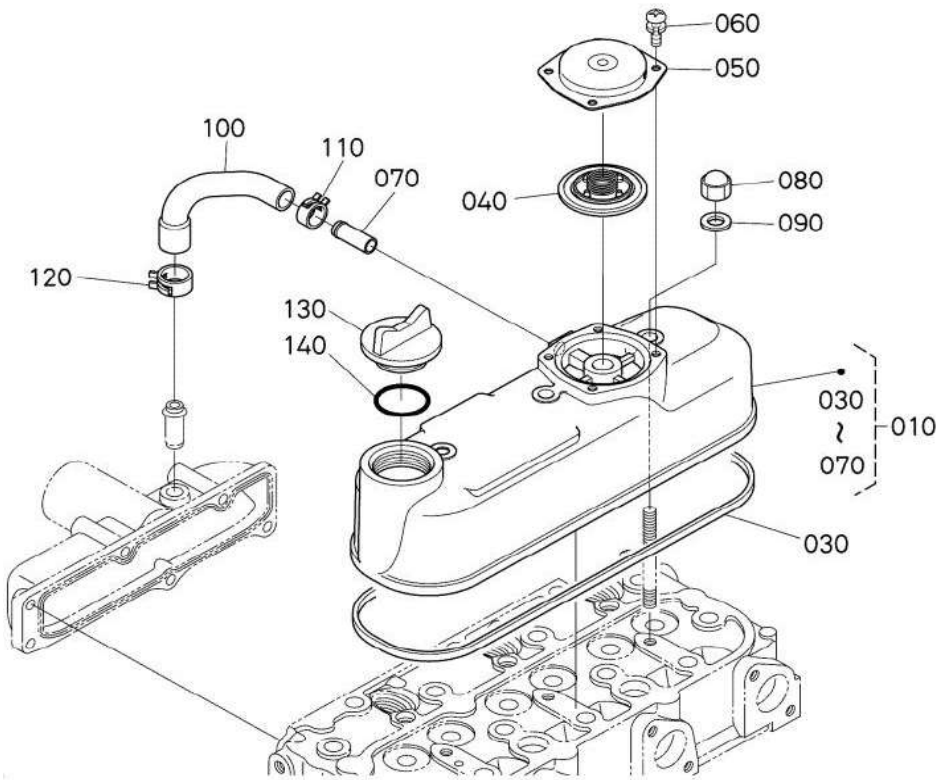


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No	互换性 I. C.	备注 REMARKS
010	LP1003020006-010	1G032-14580	缸盖, 组件	CYLINDER HEAD,	1		
030	LP1003020006-011	16261-14524	油缸顶盖衬垫	HEAD TOP COVER GASKET	1		
040	LP1003020004-063	1G911-05203	通气阀组件	BREATHER VALVE	1		
050	LP1003020004-064	1G801-05120	通气盖	BREATHER COVER	1		
060	LP1003020004-065	03024-50510	带垫圈小螺丝	SMALL SCREW WITH WASHER	4		
070	LP1003020004-066	17331-73342	管	PIPE	1		
080	LP1003020004-067	15952-92330	螺母	NUT	3		
090	LP1003020004-068	15951-96660	衬垫	GASKET	3		
100	LP1003020004-071	1G032-05512	管	PIPE	1		
110	LP1003020004-072	09318-88150	软管固定夹	HOSE RETAINING CLIP	1		
120	LP1003020004-073	16259-05580	软管夹	HOSE CLIP	1		
130	LP1003020004-069	E9151-33140	塞油 滤芯	OIL PLUG FILTER ELEMENT	1		
140	LP1003020004-070	1J001-96770	O型密封圈	O-RING	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B006

**机油滤清器
OIL FILTER**

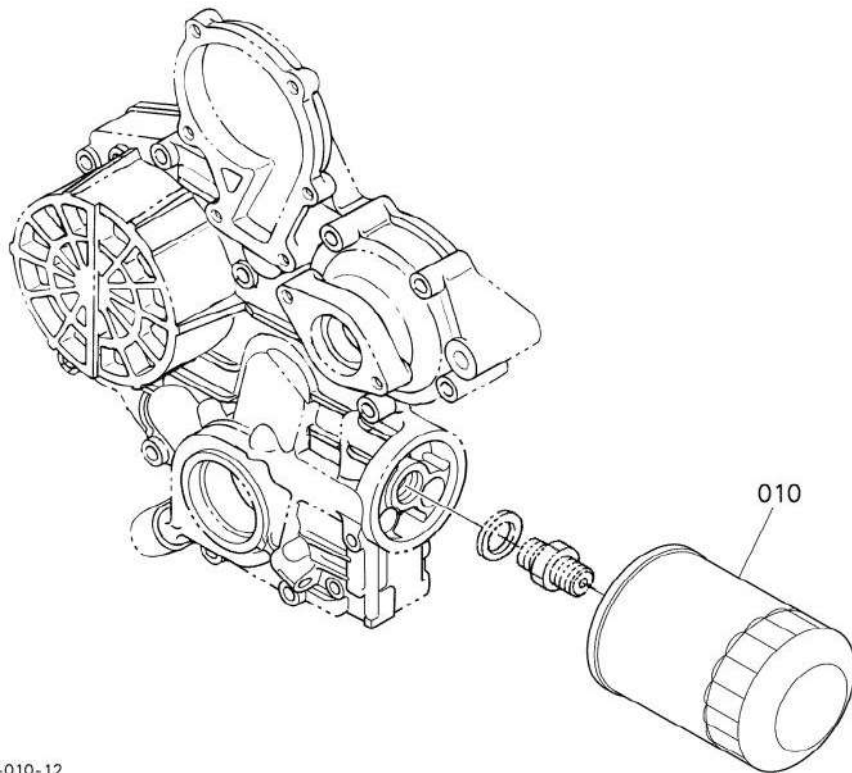


.010-12

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP0111020047	HH160-32093	机油滤清器滤芯	OIL FILTER ELEMENT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


**B007 油量计
OIL GAUGE**

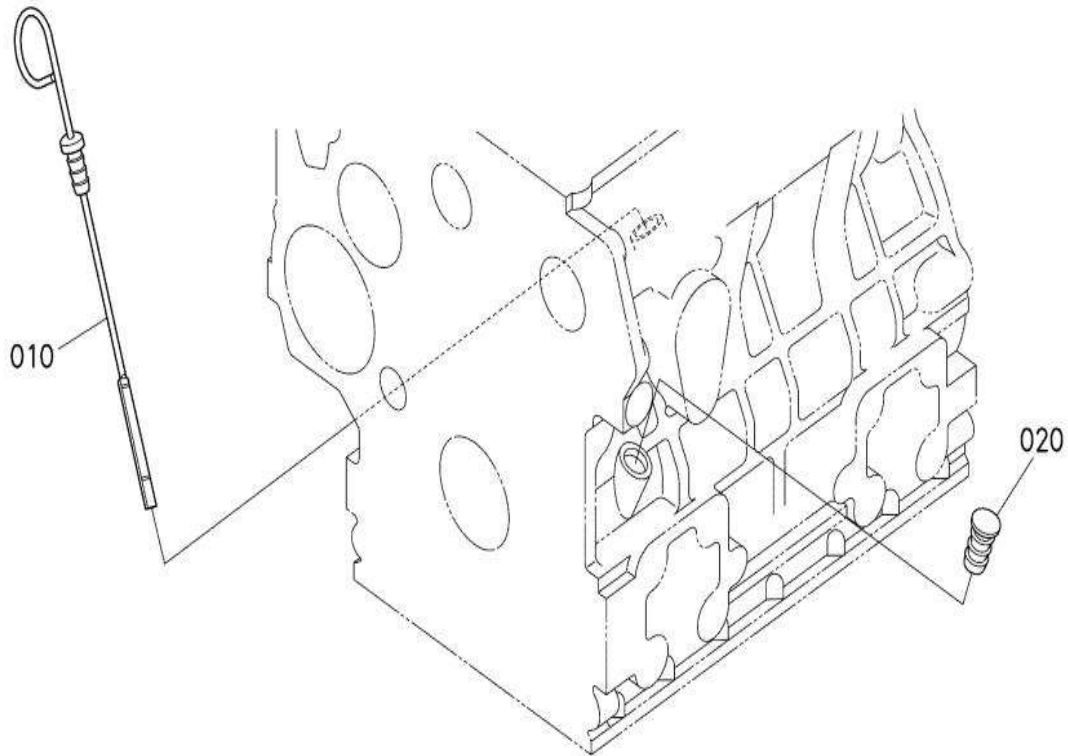

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-012	16259-36410	油量计	OIL LEVEL GAUGE	1		
020	LP1003020004-077	16513-36550	机油尺塞	OIL DIPSTICK PLUG	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B008 主轴承箱 MAIN BEARING HOUSING

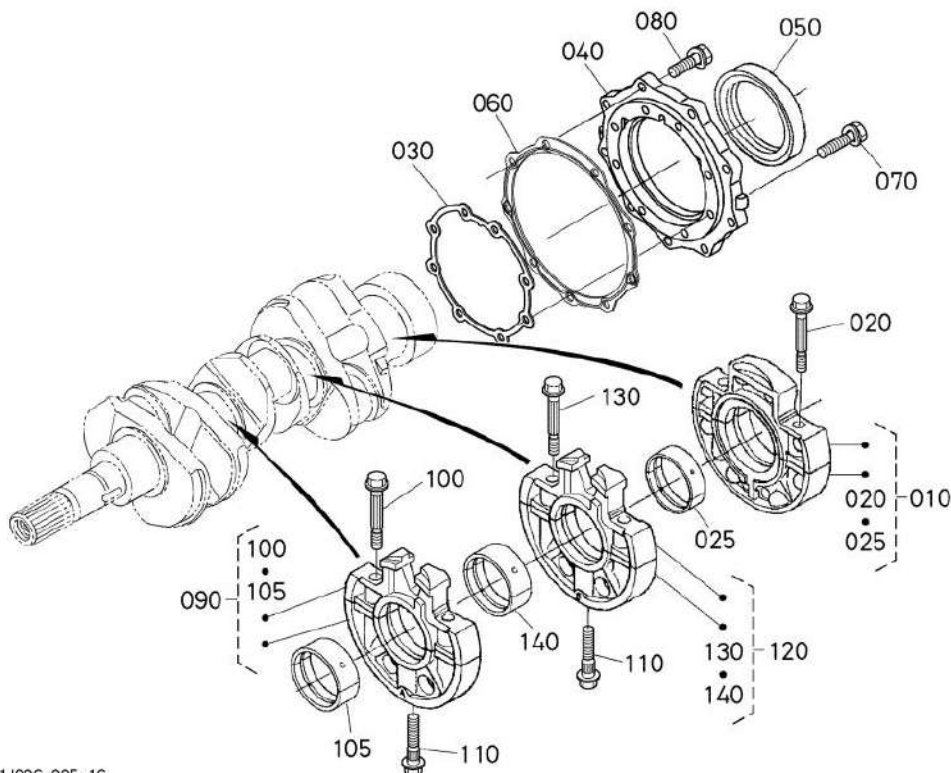


1J906-005-16

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I. C.	备注 REMARKS
010	LP1003020004-078	16292-07097	轮毂轴承箱总成	BEARING HOUSING	1		
020	LP1003020004-087	16241-04540	轴承箱螺栓	BEARING HOUSING BOLT	2		
025	LP1003020004-441	16292-23494	曲柄轴金属件	CRANKSHAFT BEARING	1		STD SET
025	LP1003020004-442	16292-23864	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.20mm SET
025	LP1003020004-443	16292-23874	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.40mm SET
030	LP1003020004-079	1J095-04360	衬垫	GASKET	1		
040	LP1003020004-080	16241-04815	轴承箱盖	BEARING HOUSING COVER	1		
050	LP1003020004-428	16285-04460	油封	OIL SEAL	1		
060	LP1003020004-420	16264-04822	箱盖衬垫	CASE COVER GASKET	1		
070	LP1003020004-081	1G679-91012	螺栓	BOLT	8		
080	LP1003020004-082	1G679-91022	螺栓	BOLT	9		
090	LP1003020004-083	16261-07047	曲轴瓦座组件	CRANKSHAFT BEARING CAP	1		
100	LP1003020004-087	16241-04540	轴承箱螺栓	BEARING HOUSING BOLT	2		
105	LP1003020004-438	16292-23483	曲柄轴金属件	CRANKSHAFT BEARING	1		STD SET
105	LP1003020004-439	16292-23933	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.20mm SET
105	LP1003020004-440	16292-23943	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.40mm SET
110	LP1003020004-084	16241-04560	轴承箱螺栓	BEARING HOUSING BOLT	2		
120	LP1003020004-085	16261-07057	曲轴瓦座组件	CRANKSHAFT BEARING CAP	1		
130	LP1003020004-087	16241-04540	轴承箱螺栓	BEARING HOUSING BOLT	2		
140	LP1003020004-438	16292-23483	曲柄轴金属件	CRANKSHAFT BEARING	1		STD SET
140	LP1003020004-439	16292-23933	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.20mm SET
140	LP1003020004-440	16292-23943	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.40mm SET

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B009 凸轮轴和中间齿轮轴
CAMSHAFT INTERMEDIATE GEAR SHAFT

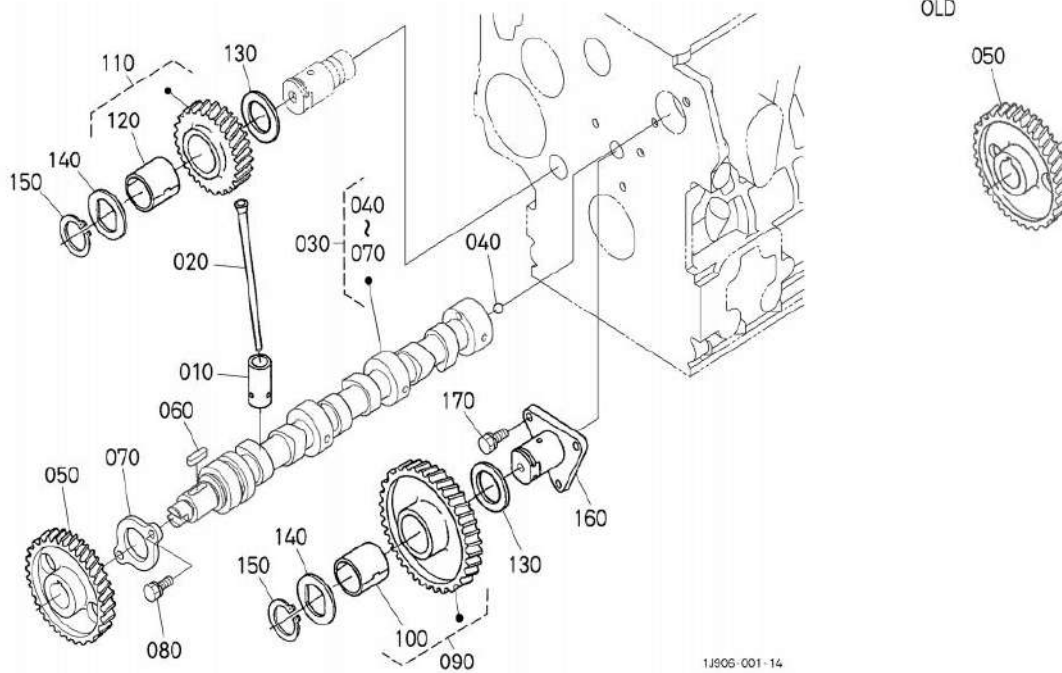


1J905-001-14

1J996-814-10

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-088	16673-15550	挺杆	TAPPET	6		
020	LP1003020004-089	16241-15114	推杆	PUSH ROD	6		
030	LP1003020006-013	1J096-16010	凸轮轴总成	CAMSHAFT ASSEMBLY	1		
040	LP1003020004-091	07715-00401	球	BALL	1		
050	LP1003020006-014	16241-16510	凸轮齿轮	CAM GEAR	1		
050	LP1003020004-092	16241-16515	凸轮轴齿轮	CAMSHAFT GEAR	1		
060	LP1003020004-093	05712-00518	滑键	SLIDING KEY	1		
070	LP1003020004-094	1J097-16270	凸轮轴挡块	CAMSHAFT STOP	1		
080	LP1003020004-095	01023-50616	螺栓	BOLT	2		
090	LP1003020004-096	16271-24012	中间齿轮组件	IDLER GEAR ASSEMBLY	1		
100	LP1003020004-097	16271-24982	中间齿轮衬套	IDLER GEAR BUSHING	1		
110	LP1003020006-015	16271-24022	齿轮机组件	GEAR UNIT ASSEMBLY	1		
120	LP1003020004-097	16271-24982	中间齿轮衬套	IDLER GEAR BUSHING	1		
130	LP1003020004-098	16241-24360	中间齿轮轴环	IDLER GEAR COLLAR	2		
140	LP1003020004-099	16241-24370	中间齿轮轴环	IDLER GEAR COLLAR	2		
150	LP1003020004-100	16241-24320	中间齿轮挡圈	GEAR RETAINING RING	2		
160	LP1003020004-101	16241-24250	中间齿轮轴	IDLER GEAR SHAFT	1		
170	LP1003020004-095	01023-50616	螺栓	BOLT	3		

↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

B010

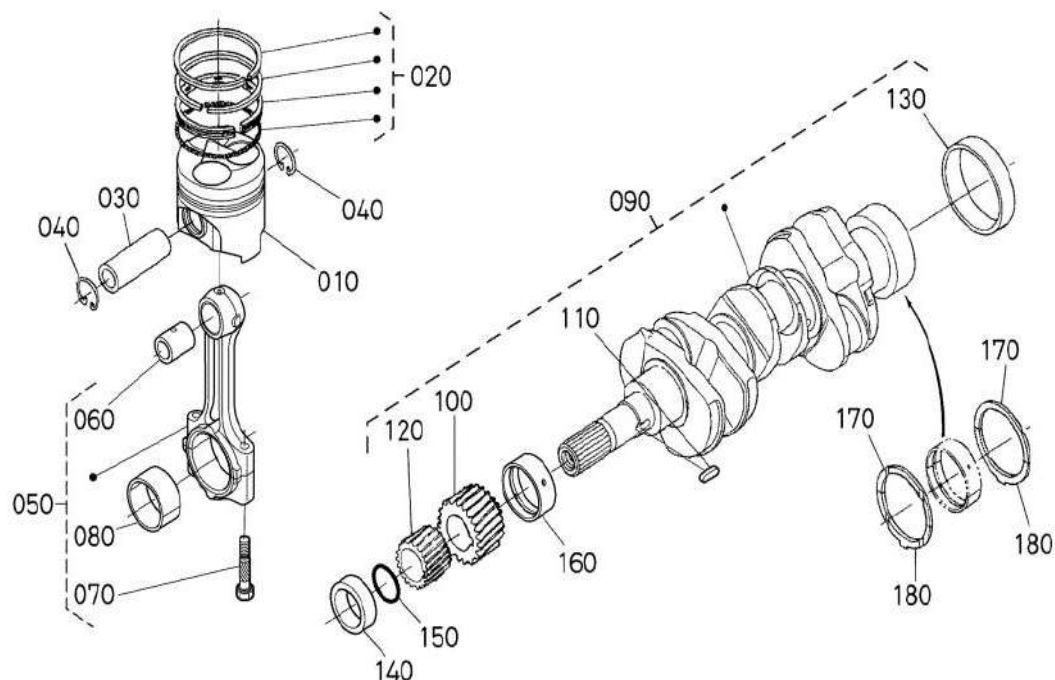
活塞和曲柄轴
PISTON CRANKSHAFT

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-452	1J097-21110	活塞	PISTON	3		STD
010	LP1003020006-016	1J097-21910	活塞	PISTON	3		+0.50mm
020	LP1003020004-102	1J050-21050	活塞环组件	PISTON RING ASSEMBLY	3		STD
020	LP1003020004-103	1J050-21090	活塞环组件	PISTON RING ASSEMBLY	3		+0.50mm
030	LP1003020004-453	16241-21310	活塞销	PISTON PIN	3		
040	LP1003020004-454	16241-21330	活塞销挡圈	RETAINING RING	6		
050	LP1003020004-104	16292-22016	连杆组件	CONNECTING ROD	3		
060	LP1003020004-455	1G700-21980	活塞销衬套	PISTON PIN BUSHING	3		
070	LP1003020004-105	16241-22142	连杆螺栓	CONNECTING ROD BOLT	6		
080	LP1003020004-435	16292-22310	连杆瓦	CRBS	3		STD SET
080	LP1003020004-436	16292-22972	连杆瓦	CRBS	3		-0.20mm SET
080	LP1003020004-437	16292-22982	连杆瓦	CRBS	3		-0.40mm SET
090	LP1003020006-017	1G065-23013	曲轴组件	CRANKSHAFT ASSEMBLY	1		
100	LP1003020004-107	1A055-24110	齿轮. 曲轴	CRANKSHAFT GEAR	1		
110	LP1003020004-108	16271-95230	键	KEY	1		
120	LP1003020004-109	1J050-35630	油泵传动齿轮	OIL PUMP DRIVE GEAR	1		
130	LP1003020004-110	16241-23280	曲柄轴套筒	CRANKSHAFT SLEEVE	1		
140	LP1003020004-111	1J050-23250	曲柄轴环	CRANKSHAFT RING	1		
150	LP1003020004-112	04814-10280	O型密封圈	O-RING	1		
160	LP1003020004-432	16292-23473	曲柄轴金属件	CRANKSHAFT BEARING	1		STD
160	LP1003020004-433	16292-23913	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.20mm
160	LP1003020004-434	16292-23923	曲柄轴金属件	CRANKSHAFT BEARING	1		-0.40mm
170	LP1003020004-444	15521-23533	金属侧	METAL SIDE	2		STD
170	LP1003020004-445	15521-23953	金属侧	METAL SIDE	2		+0.20mm
170	LP1003020004-446	15521-23963	金属侧	METAL SIDE	2		+0.40mm
180	LP1003020004-447	19202-23543	金属侧	METAL SIDE	2		STD
180	LP1003020004-448	19202-23973	金属侧	METAL SIDE	2		+0.20mm
180	LP1003020004-449	19202-23983	金属侧	METAL SIDE	2		+0.40mm

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B011


飞轮
FLYWHEEL

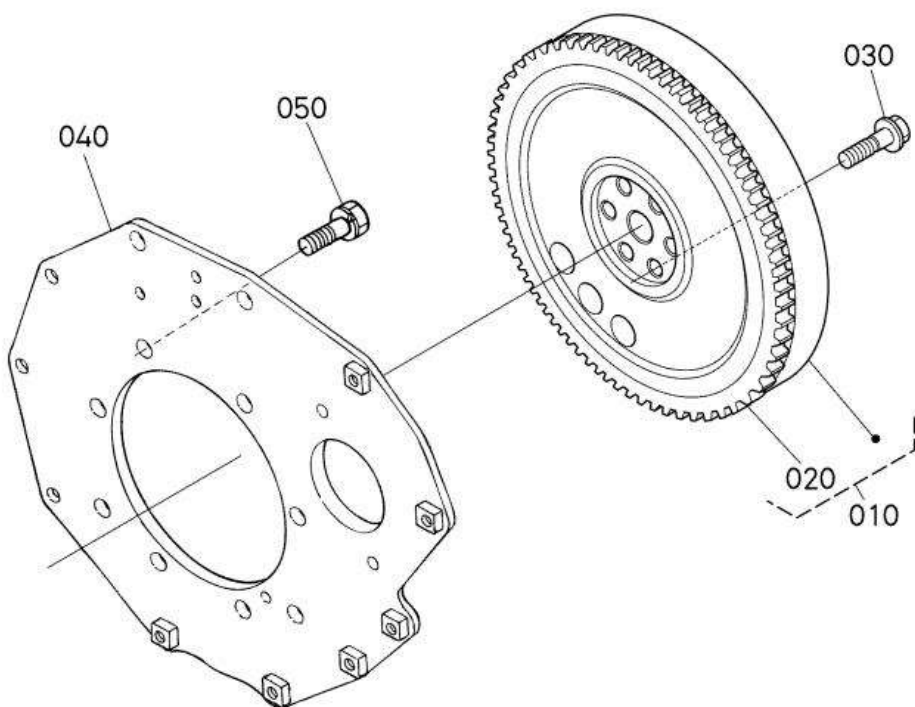

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I. C.	备注 REMARKS
010	LP1003020006-018	16692-25013	飞轮组件	FLYWHEEL ASSEMBLY	1		
020	LP1003020004-114	1G081-63820	环形齿轮	RING GEAR	1		
030	LP1003020004-115	16241-25160	飞轮螺栓	FLYWHEEL BOLT	6		
040	LP1003020004-116	16241-04620	后端板	REAR END PLATE	1		
050	LP1003020004-117	15261-91190	螺栓	BOLT	8		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B012

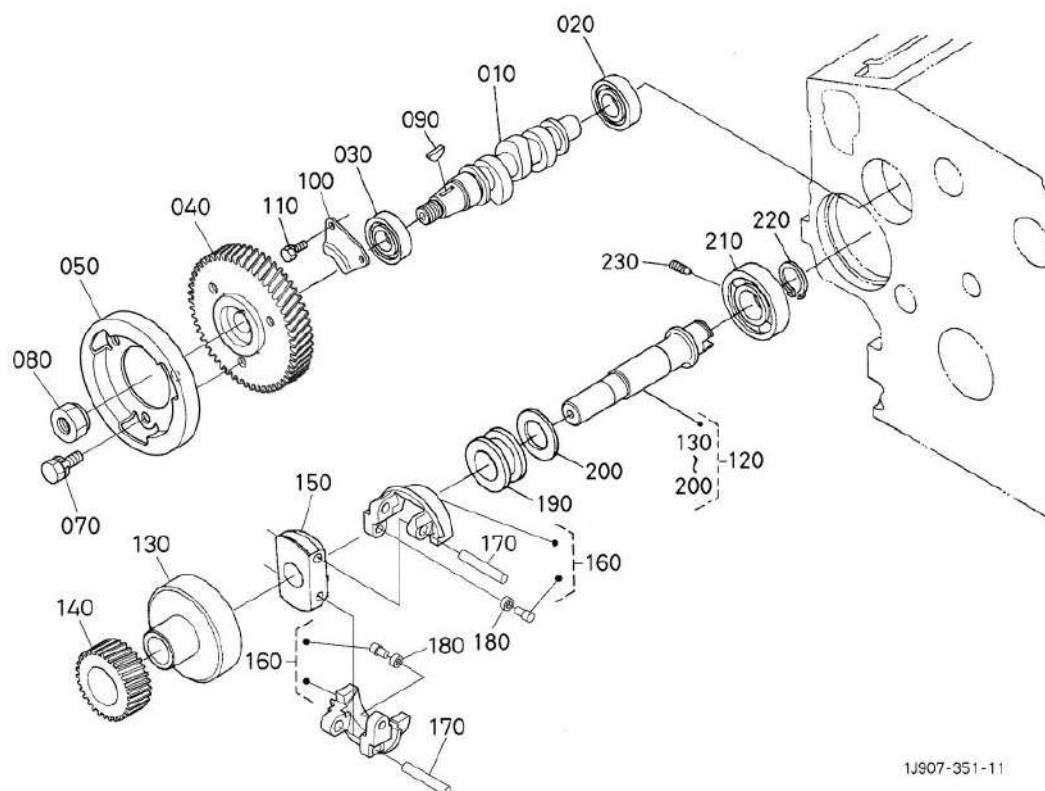燃油凸轮轴和调速器轴
FUEL CAMSHAFT GOVERNOR SHAFT


1J907-351-11

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互换性 I. C.	备注 REMARKS
010	LP1003020006-019	1620-16172	燃油凸轮轴	FUEL CAMSHAFT	1		
020	LP1003020004-119	16261-97300	球轴承	BALL BEARING	1		
030	LP1003020004-120	16261-97310	球轴承	BALL BEARING	1		
040	LP1003020006-020	16272-51150	喷射泵齿轮	INJECTION PUMP GEAR	1		
050	LP1003020004-122	16241-51114	燃油管	FUEL PIPE	1		
070	LP1003020004-229	01023-50612	螺栓	BOLT	3		
080	LP1003020004-123	1J050-92330	螺母	NUT	1		
090	LP1003020004-124	16241-95230	半月键	HALF-MOON KEY	1		
100	LP1003020004-125	16241-16320	燃油凸轮轴挡块	FUEL CAMSHAFT STOP	1		
110	LP1003020004-095	01023-50616	螺栓	BOLT	2		
120	LP1003020006-021	16261-55019	调速器轴总成	GOVERNOR SHAFT	1		
130	LP1003020004-127	16241-55392	调速器齿轮支座	GOVERNOR GEAR SUPPORT	1		
140	LP1003020006-022	16271-55320	调速器齿轮	GOVERNOR GEAR	1		
150	LP1003020004-129	16241-55270	调速器配重支座	WEIGHT SUPPORT	1		
160	LP1003020006-023	16271-55064	调节器部件重量	GOVERNOR WEIGHT	2		
170	LP1003020004-131	16241-55260	调速器配重轴	GOVERNOR WEIGHT SHAFT	2		
180	LP1003020004-220	19484-55440	滚子	ROLLER	2		
190	LP1003020004-132	16241-55450	调速器套筒	GOVERNOR SLEEVE	1		
200	LP1003020004-133	16241-55463	止推垫圈	THRUST WASHER	1		
210	LP1003020004-134	16261-97320	球轴承	BALL BEARING	1		
220	LP1003020004-135	16271-55410	调速器轴挡圈	RETAINING RING	1		
230	LP1003020004-136	16241-55554	固定螺钉	SET SCREW	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B013

怠速限制装置 IDLE SPEED LIMITING DEVICE

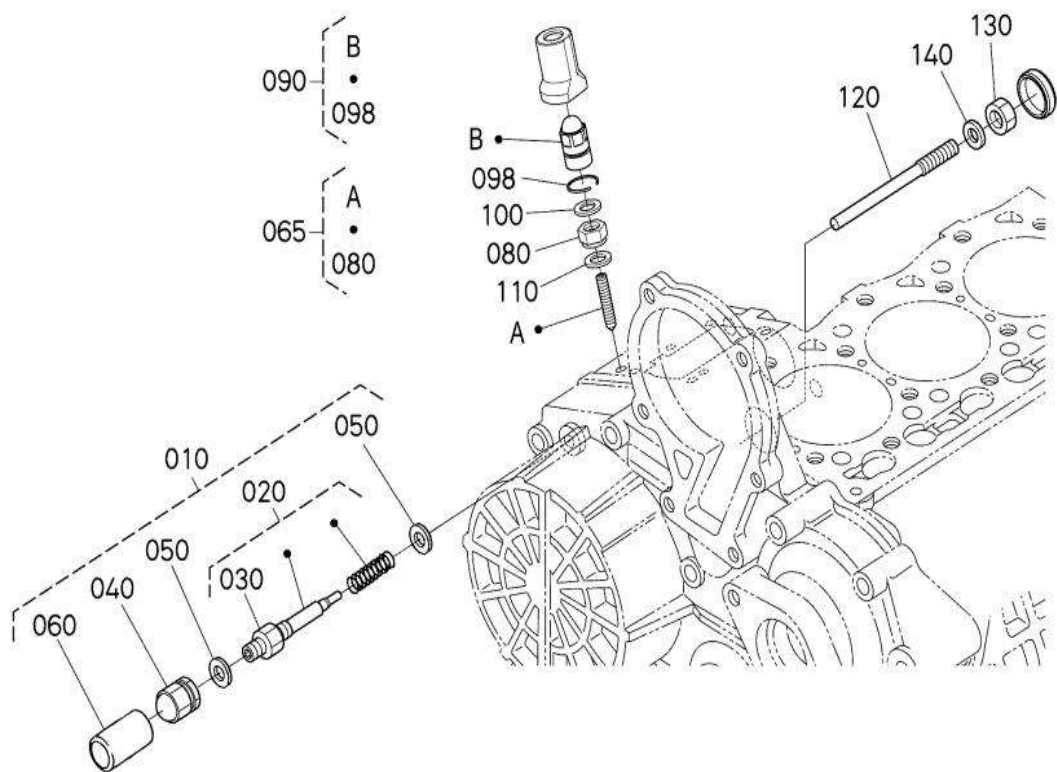


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-024	16285-54093	怠速装置	IDLE DEVICE	1		
020	LP1003020006-025	16285-54103	调节螺栓组件	ADJUSTING BOLT	1		
030	LP1003020004-139	15841-92020	螺帽	NUT	1		
040	LP1003020004-140	15852-92330	螺帽	NUT	1		
050	LP1003020004-141	15601-96650	垫片	GASKET	2		
060	LP1003020004-142	16221-54420	盖子	COVER	1		
065	LP1003020004-143	1J097-54350	调节螺栓组件	ADJUSTING BOLT	1		
080	LP1003020004-144	1J094-54210	螺母	NUT	1		
090	LP1003020004-145	1J097-54380	盖形螺母组件	CAP NUT ASSEMBLY	1		
098	LP1003020004-146	1J094-54280	内卡环	INTERNAL SNAP RING	1		
100	LP1003020004-141	15601-96650	垫片	GASKET	1		
110	LP1003020004-141	15601-96650	垫片	GASKET	1		
120	LP1003020006-026	16053-54150	螺栓	BOLT	1		
130	LP1003020004-148	02056-50060	螺母	NUT	1		
140	LP1003020004-141	15601-96650	垫片	GASKET	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B015

喷射泵

INJECTION PUMP

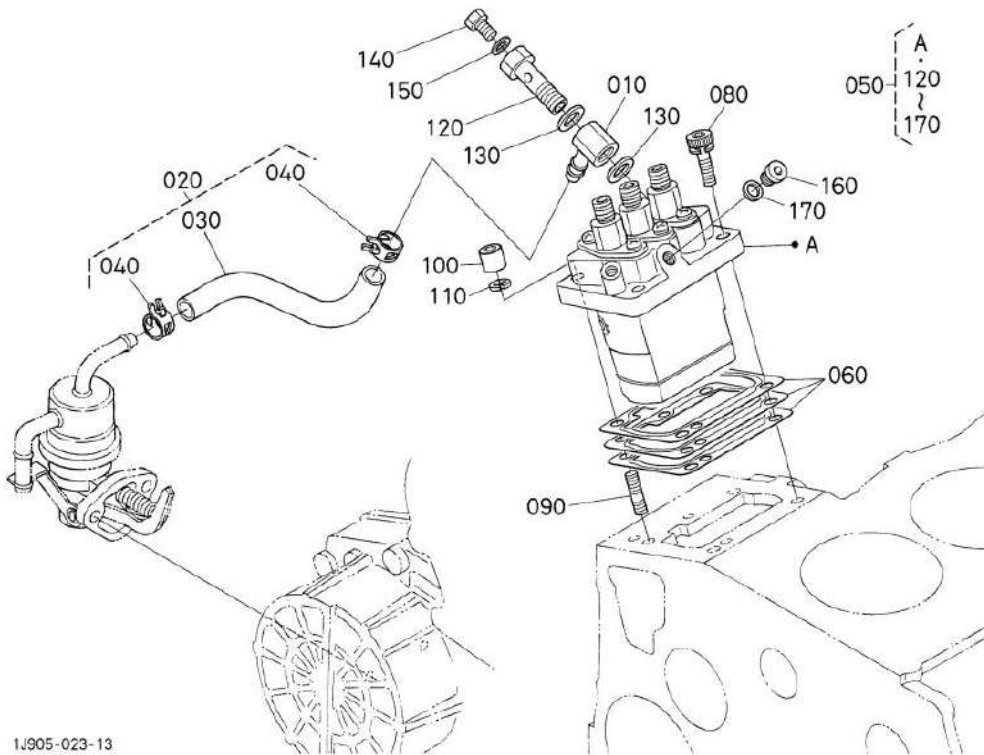


1J905-023-13

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-149	16241-95694	接头	CONNECTOR	1		
020	LP1003020006-029	16032-42010	机油管总成	OIL PIPE ASSEMBLY	1		
030	LP1003020006-030	09661-80075	燃油管	FUEL PIPE	1		
040	LP1003020004-151	14911-42750	管夹	PIPE CLIP	2		
050	LP1003020006-031	16030-51013	喷射泵总成	INJECTION PUMP ASSEMBLY	1		
060	LP1003020006-032	16700-52200	喷射泵垫片	INJECTION PUMP GASKET	1		0.175mm
060	LP1003020006-033	16006-52092	喷射泵垫片	INJECTION PUMP GASKET	1		0.200mm
060	LP1003020006-034	16006-52112	喷射泵垫片	INJECTION PUMP GASKET	1		0.250mm
060	LP1003020006-035	16006-52122	喷射泵垫片	INJECTION PUMP GASKET	1		0.300mm
060	LP1003020006-036	16700-52160	喷射泵垫片	INJECTION PUMP GASKET	1		0.350mm
080	LP1003020004-158	16871-91060	内六角螺栓	HEXAGON SOCKET BOLT	2		
090	LP1003020004-159	15841-91500	双头螺栓	STUD BOLT	2		
100	LP1003020004-160	15841-92320	盖形螺帽	CAP NUT	2		
110	LP1003020004-161	04512-50060	弹垫圈	SPRING WASHER	2		
120	LP1003020004-162	16030-51320	接头螺栓	CONNECTOR BOLT	1		
130	LP1003020004-163	15841-96650	密封垫片	SEALING GASKET	2		
140	LP1003020004-164	15841-51350	放气阀螺钉	BLEEDER VALVE SCREW	1		
150	LP1003020004-165	15841-96660	密封垫片	SEALING GASKET	1		
160	LP1003020006-037	16030-96010	塞	PLUG	1		
170	LP1003020006-038	15861-96650	密封垫片	SEALING GASKET	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

B016

调速器 GOVERNOR

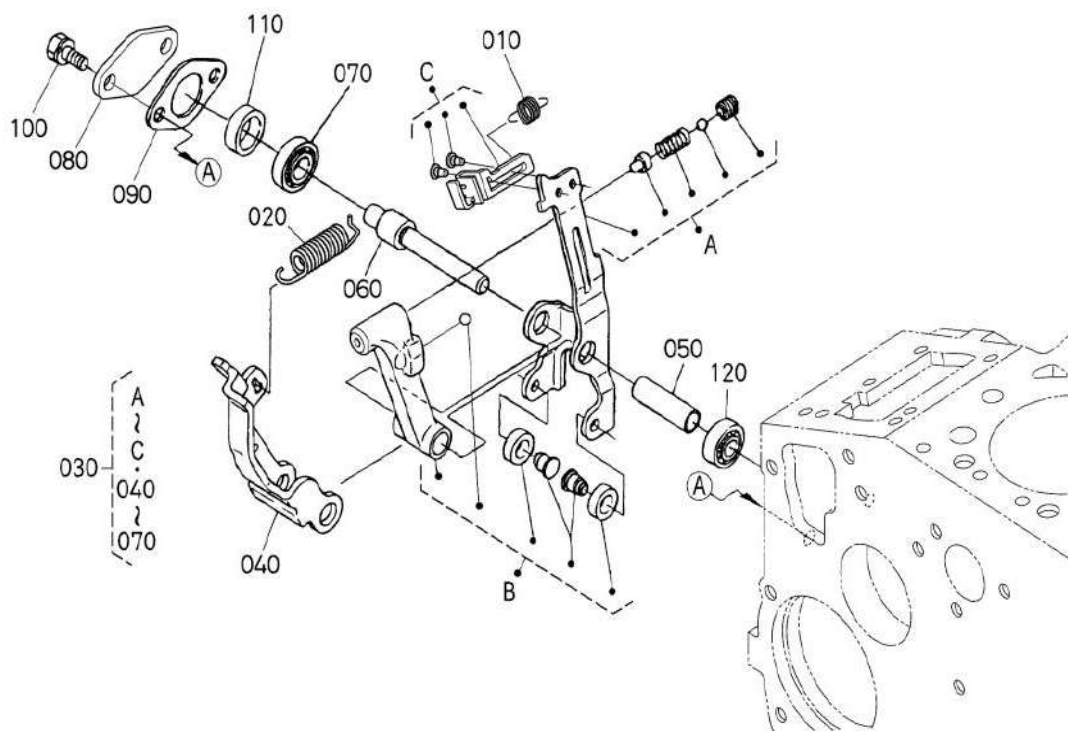


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY./S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-149	16241-95694	接头	CONNECTOR	1		
010	LP1003020006-039	16261-56480	起动弹簧	STARTER SPRING	1		
020	LP1003020006-040	16285-56412	调速器弹簧	GOVERNOR SPRING	1		
030	LP1003020006-041	1G673-56010	叉杆组件	FORK LEVER ASSEMBLY	1		
040	LP1003020004-222	1G032-56130	叉杆	FORK LEVER	1		
050	LP1003020004-225	1G032-56150	叉杆轴	FORK LEVER SHAFT	1		
060	LP1003020004-226	1G032-56470	叉杆轴	FORK LEVER SHAFT	1		
070	LP1003020004-227	16241-56330	小型轴承	SMALL BEARING	1		
080	LP1003020004-228	16241-56253	叉杆轴盖	FORK LEVER SHAFT COVER	1		
090	LP1003020004-424	16299-56260	衬垫	GASKET	1		
100	LP1003020004-229	01023-50612	螺栓	BOLT	2		
110	LP1003020004-230	16241-56210	轴环	COLLAR	1		
120	LP1003020004-231	16241-56340	小型轴承	SMALL BEARING	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B017

调速板 GOVERNOR BOARD

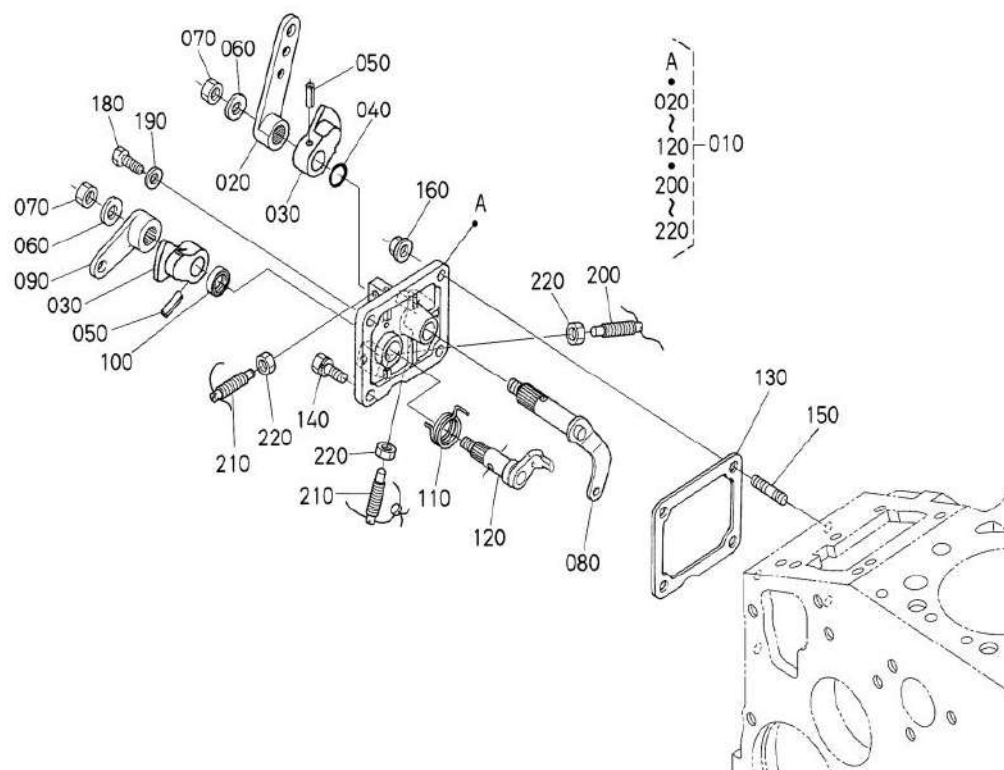


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY./S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-149	16241-95694	接头	CONNECTOR	1		
010	LP1003020004-166	16299-57015	控制板组件	CONTROL PANEL ASSEMBLY	1		
020	LP1003020004-167	16271-57150	调速手柄	GOVERNOR HANDLE	1		
030	LP1003020004-168	16241-57160	调速手柄	GOVERNOR HANDLE	2		
040	LP1003020004-169	04814-00100	O型密封圈	O-RING	1		
050	LP1003020004-170	05411-00420	弹簧销	SPRING PIN	2		
060	LP1003020004-171	16241-94020	平垫圈	FLAT WASHER	2		
070	LP1003020004-172	16241-92020	螺母	NUT	2		
080	LP1003020004-173	16271-56023	调速器组件	GOVERNOR ASSEMBLY	1		
090	LP1003020004-174	16271-57720	发动机停机杆	ENGINE STOP LEVER	1		
100	LP1003020004-175	15471-57980	油封	OIL SEAL	1		
110	LP1003020004-176	16222-57510	回位弹簧	RETURN SPRING	1		
120	LP1003020004-177	16271-57740	停机杆轴	STOP LEVER SHAFT	1		
130	LP1003020004-422	16264-57210	衬垫	GASKET	1		
140	LP1003020004-095	01023-50616	螺栓	BOLT	1		
150	LP1003020004-179	16245-91540	双头螺栓	STUD BOLT	2		
160	LP1003020004-060	02751-50060	法兰螺母	FLANGE NUT	2		
180	LP1003020004-178	01053-50616	螺栓	BOLT	1		
190	LP1003020004-141	15601-96650	垫片	GASKET	1		
200	LP1003020004-181	1G263-57630	调节螺栓	ADJUSTING BOLT	1		
210	LP1003020004-180	16241-57632	调节螺栓	ADJUSTING BOLT	2		
220	LP1003020004-148	02056-50060	螺母	NUT	3		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

B018

喷嘴座和电热塞

NOZZLE HOLDER GLOW PLUG

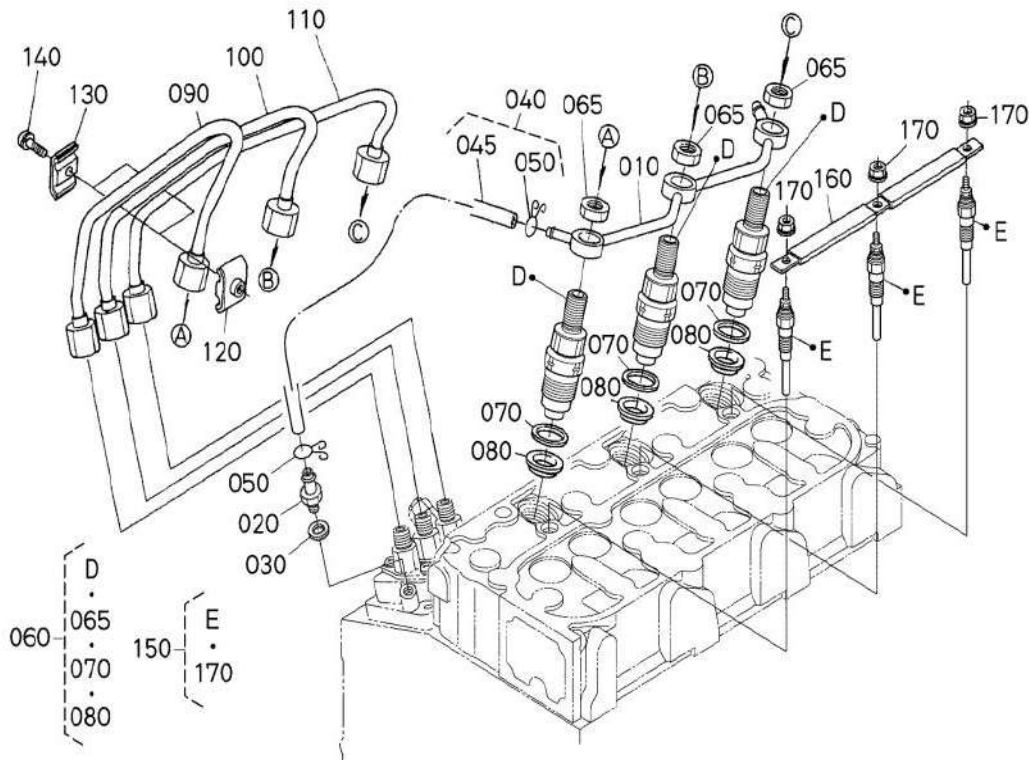


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-042	16261-42502	溢流管组件	OVERFLOW PIPE ASSEMBLY	1		
020	LP1003020004-183	15841-51360	螺钉	SCREW	1		
030	LP1003020004-141	15601-96650	垫片	GASKET	1		
040	LP1003020004-184	15841-42502	管, 组件	PIPE ASSEMBLY	1		
045	LP1003020004-185	15841-42522	燃油管	FUEL PIPE	1		
050	LP1003020004-186	14971-42750	管夹	PIPE CLIP	2		
060	LP1003020004-197	1G677-53903	喷嘴套件固定器	NOZZLE KIT RETAINER	3		
065	LP1003020004-198	1G826-92032	螺母	NUT	3		
070	LP1003020004-416	15841-53622	垫片	GASKET	3		
080	LP1003020004-415	19077-53650	密封	SEAL	3		
090	LP1003020004-187	16271-53712	喷射管	INJECTION PIPE	1		
100	LP1003020004-188	16271-53722	喷射管	INJECTION PIPE	1		
110	LP1003020004-189	16271-53732	喷射管	INJECTION PIPE	1		
120	LP1003020004-191	15841-53850	管夹	PIPE CLIP	2		
130	LP1003020004-192	15841-53860	管夹	PIPE CLIP	2		
140	LP1003020004-193	03024-50520	带垫圈小螺丝	SMALL SCREW WITH WASHER	2		
150	LP1003020004-194	1G679-65512	预热塞	GLOW PLUG	3		
160	LP1003020006-043	16261-65560	电热塞软线	GLOW PLUG CORD	1		
170	LP1003020004-196	02761-50040	法兰螺母	FLANGE NUT	3		
210	LP1003020004-180	16241-57632	调节螺栓	ADJUSTING BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B019

喷嘴座和电热塞 NOZZLE HOLDER

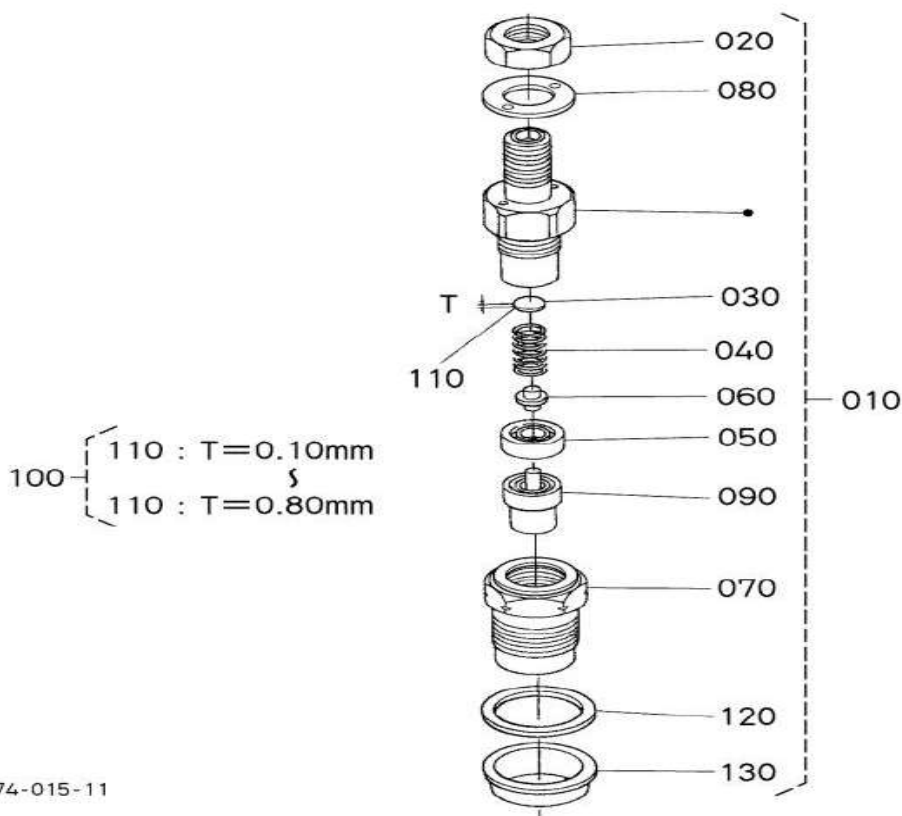


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-197	1G677-53903	喷嘴套件固定器	NOZZLE KIT RETAINER	3		
020	LP1003020004-198	1G826-92032	螺母	NUT	3		
030	LP1003020004-199	16032-53230	调节垫圈	ADJUSTING WASHER	3		
040	LP1003020004-200	16032-53170	喷嘴弹簧	NOZZLE SPRING	3		
050	LP1003020004-201	16032-53350	隔片	SPACER	3		
060	LP1003020004-202	16032-53160	推杆	PUSH ROD	3		
070	LP1003020004-203	16032-53280	喷嘴螺母	NOZZLE NUT	3		
080	LP1003020004-204	16032-94040	平垫圈	FLAT WASHER	3		
090	LP1003020004-205	1G677-53612	喷嘴部件	NOZZLE COMPONENT	3		
100	LP1003020004-206	16032-98100	调节垫圈组件	ADJUSTING WASHER	3		OPTION
110	LP1003020004-207	16032-98500	调节垫圈	ADJUSTING WASHER	3		0.10mm
110	LP1003020004-208	16032-98510	调节垫圈	ADJUSTING WASHER	3		0.20mm
110	LP1003020004-209	16032-98520	调节垫圈	ADJUSTING WASHER	3		0.30mm
110	LP1003020004-210	16032-98530	调节垫圈	ADJUSTING WASHER	3		0.40mm
110	LP1003020004-211	16032-98540	调节垫圈	ADJUSTING WASHER	3		0.50mm
110	LP1003020004-212	16032-98550	调节垫圈	ADJUSTING WASHER	3		0.52mm
110	LP1003020004-213	16032-98560	调节垫圈	ADJUSTING WASHER	3		0.54mm
110	LP1003020004-214	16032-98570	调节垫圈	ADJUSTING WASHER	3		0.56mm
110	LP1003020004-215	16032-98580	调节垫圈	ADJUSTING WASHER	3		0.58mm
110	LP1003020004-216	16032-98590	调节垫圈	ADJUSTING WASHER	3		0.80mm
120	LP1003020004-416	15841-53622	垫片	GASKET	3		
130	LP1003020004-415	19077-53650	密封	SEAL	3		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B020

**燃油滤清器
FUEL FILTER**

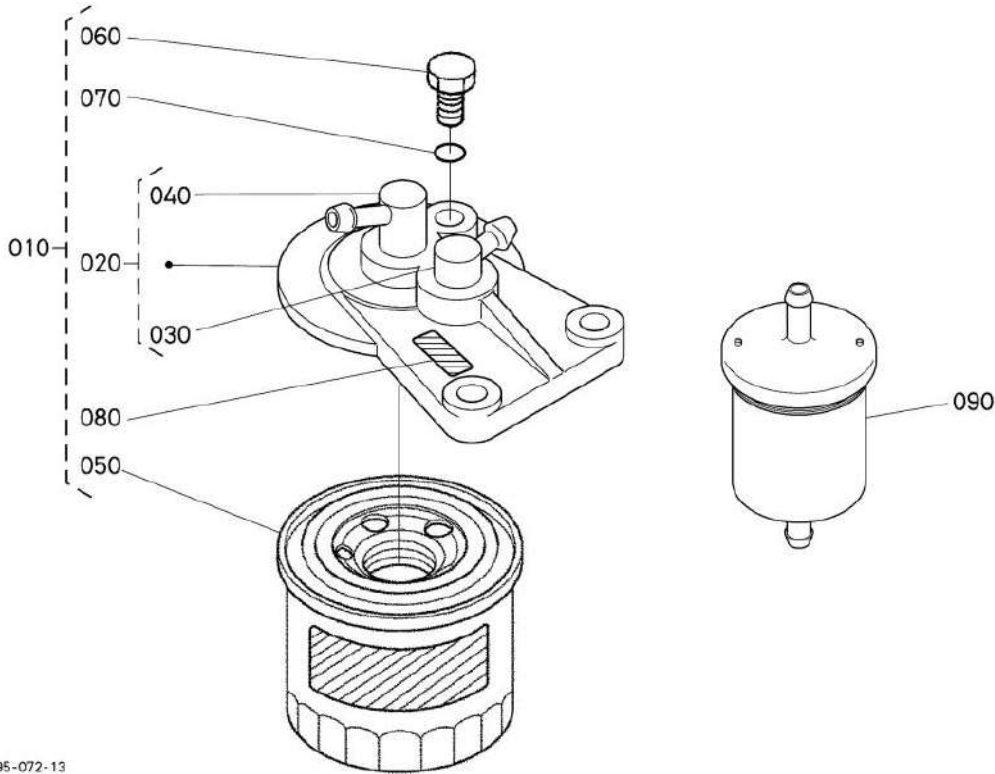


1G995-072-13

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-232	15224-43010	燃油滤清器组件	FUEL FILTER ASSEMBLY	1		
020	LP1003020004-233	15224-43200	滤清器盖组件	FILTER COVER ASSEMBLY	1		
030	LP1003020004-234	15108-43610	管接头	PIPE FITTING	1		
040	LP1003020004-235	15108-43780	管接头	PIPE FITTING	1		
050	LP0111020179	15221-43170	滤清器滤芯	FILTER ELEMENT	1		
060	LP1003020004-237	19222-43280	塞子(过滤通风器)	FILTER VENT PLUG	1		
070	LP1003020004-238	15108-43290	O型环	O-RING	1		
080	LP1003020004-239	15224-87760	型号标志	MODEL PLATE	1		
090	LP1003020004-392	12581-43012	过滤器	FILTER	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


B021

**燃油泵 (机械式)
MECHANICAL FUEL PUMP**

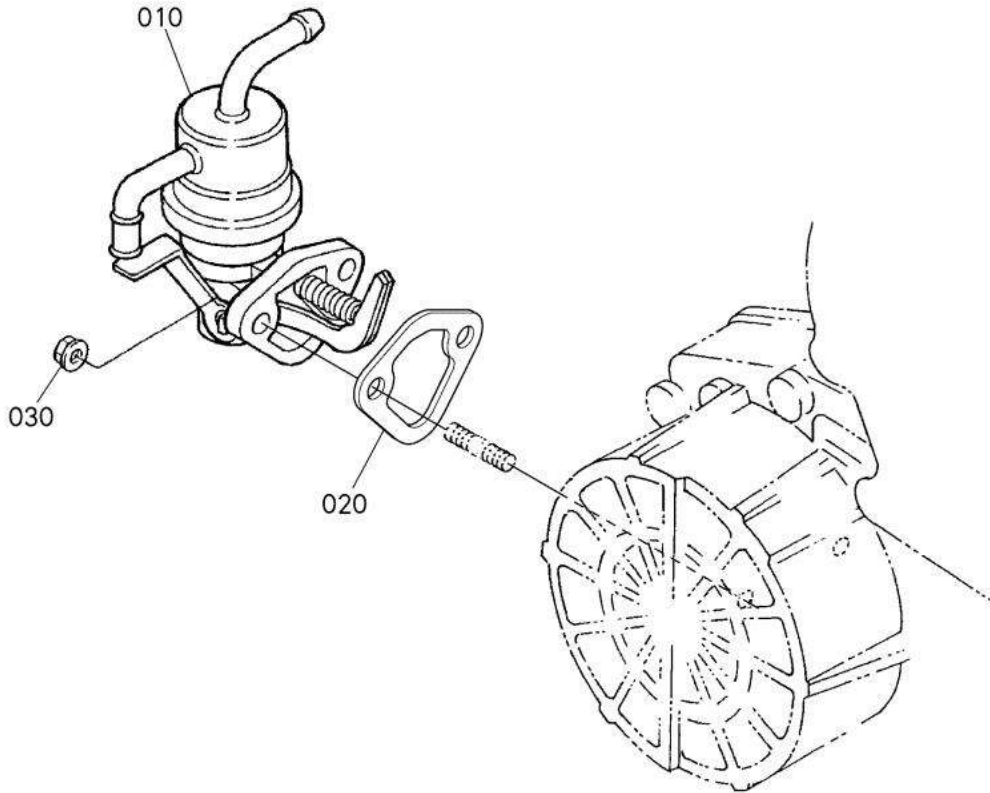

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY./S. No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-240	16285-52033	泵, 组件	PUMP ASSEMBLY	1		
020	LP1003020004-421	16261-52140	燃油泵衬垫	FUEL PUMP GASKET	1		
030	LP1003020004-060	02751-50060	法兰螺母	FLANGE NUT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

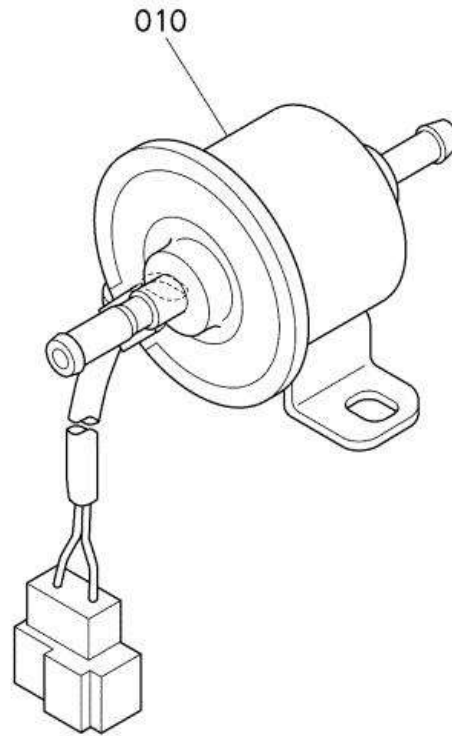
B022
燃油泵（电磁式）
ELECTROMAGNETIC FUEL PUMP


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互 换 性 I.C.	备注 REMARKS
010	LP1003020004-397	1G377-52030	泵, 组件	PUMP ASSEMBLY	1		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

B023

**燃油泵盖
FUEL PUMP COVER**

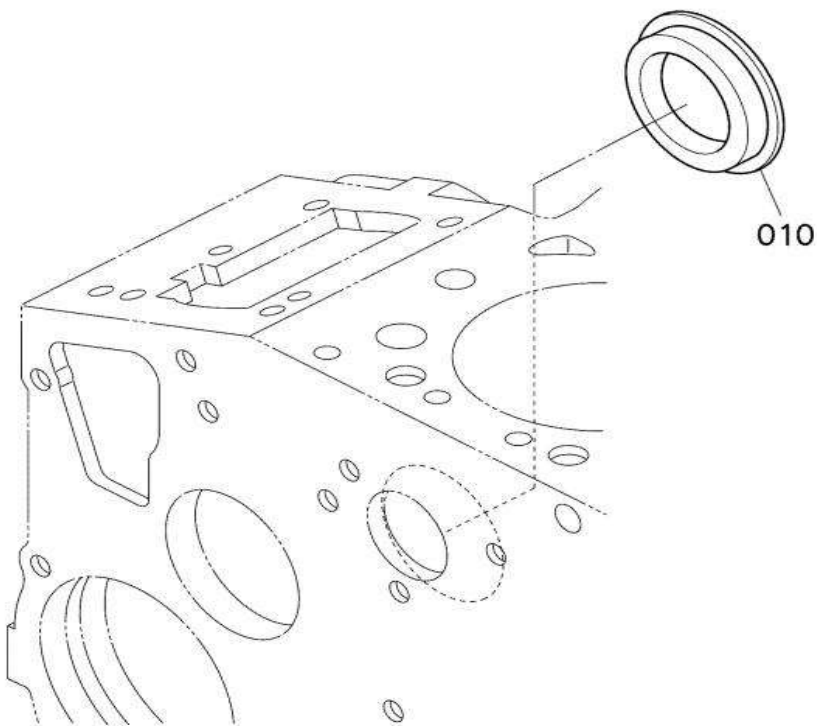


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-387	16264-83153	液压泵盖	HYDRAULIC PUMP COVER	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B024


油水分离器 (组成部分)
OIL-WATER SEPARATOR

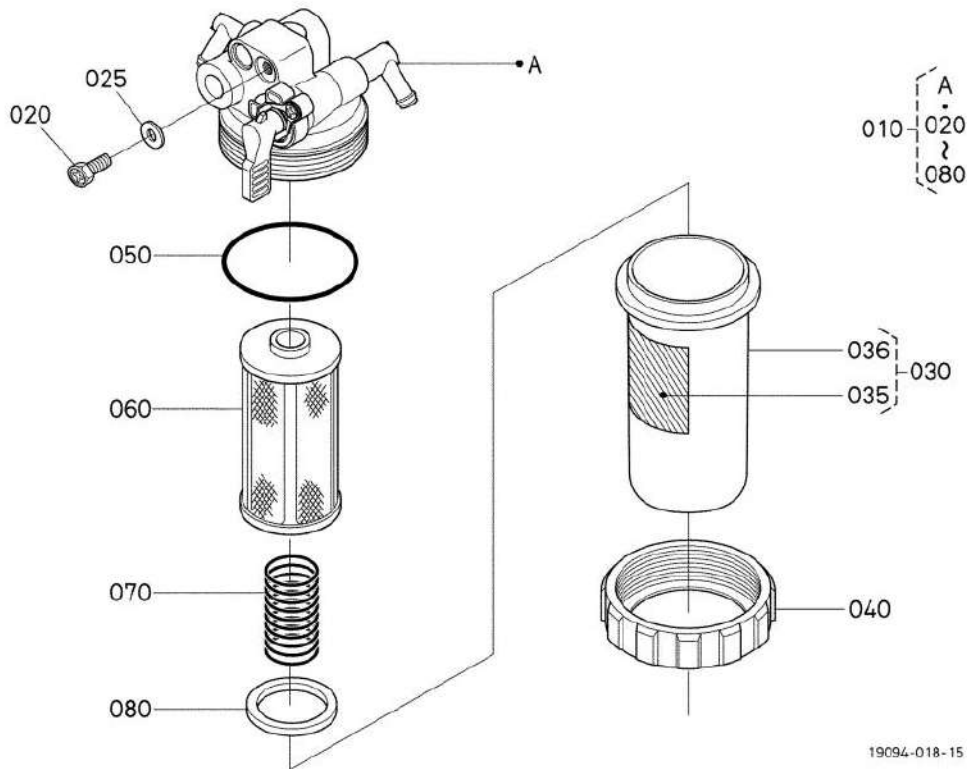

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-044	1G311-43350	油水分离器组件	OIL-WATER SEPARATOR	1		
020	LP1003020006-045	1G311-43280	塞	PLUG	1		
025	LP1003020006-046	1G311-43340	垫片	GASKET	1		
030	LP1003020006-047	1G311-43100	滤清器滤杯组件	FILTER BOWL ASSEMBLY	1		
035	LP1003020006-048	1G311-87460	标签	LABEL	1		
036	LP1003020006-049	1G311-43580	滤清器滤杯	FILTER BOWL	1		
040	LP1003020006-050	1G311-43590	卡环	CIRCLIP	1		
050	LP1003020006-051	1G311-43570	O型密封圈	O-RING SEAL	1		
060	LP1003020006-052	1G311-43380	滤芯	FILTER ELEMENT	1		
070	LP1003020006-053	1G311-43930	弹簧	SPRING	1		
080	LP1003020006-054	1G311-43250	浮子	FLOAT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B025

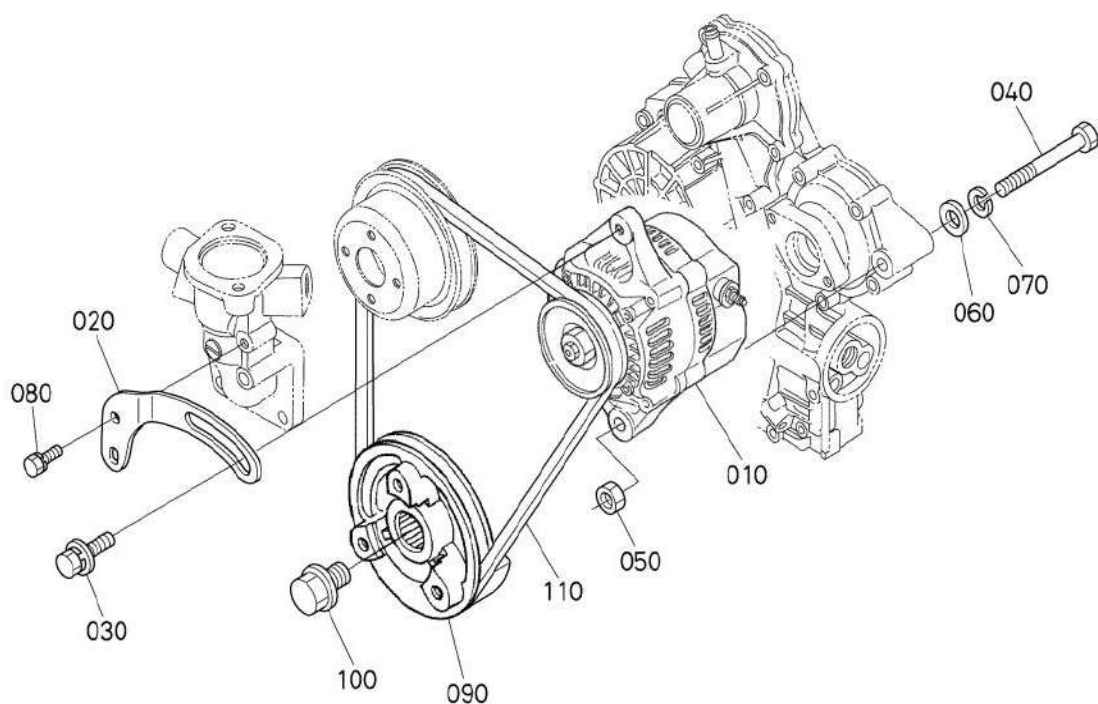
交流发电机和皮带轮
ALTERNATOR PULLEY

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-055	16678-64014	交流发电机	ALTERNATOR	1		12V 40A
010	LP1003020006-056	1E994-64010	组件 交流发电机	ALTERNATOR ASSEMBLY	1		12V 40A
020	LP1003020006-057	16241-64422	发电机撑条	GENERATOR STAY	1		
030	LP1003020004-242	01127-50830	螺栓	BOLT	1		
040	LP1003020004-243	01173-51085	螺栓	BOLT	1		
050	LP1003020004-244	02176-50100	螺母	NUT	1		
060	LP1003020004-245	04011-50100	平垫圈	FLAT WASHER	1		
070	LP1003020004-246	04512-50100	弹垫圈	SPRING WASHER	1		
080	LP1003020004-095	01023-50616	螺栓	BOLT	1		
090	LP1003020006-058	16218-74280	风扇驱动皮带轮	FAN DRIVE PULLEY	1		
100	LP1003020004-248	16241-91020	风扇驱动螺栓	FAN DRIVE BOLT	1		
110	LP1003020006-059	16062-97012	风扇皮带	FAN BELT	1		37.5in

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B026


**交流发电机 (组成部分)
ALTERNATOR**

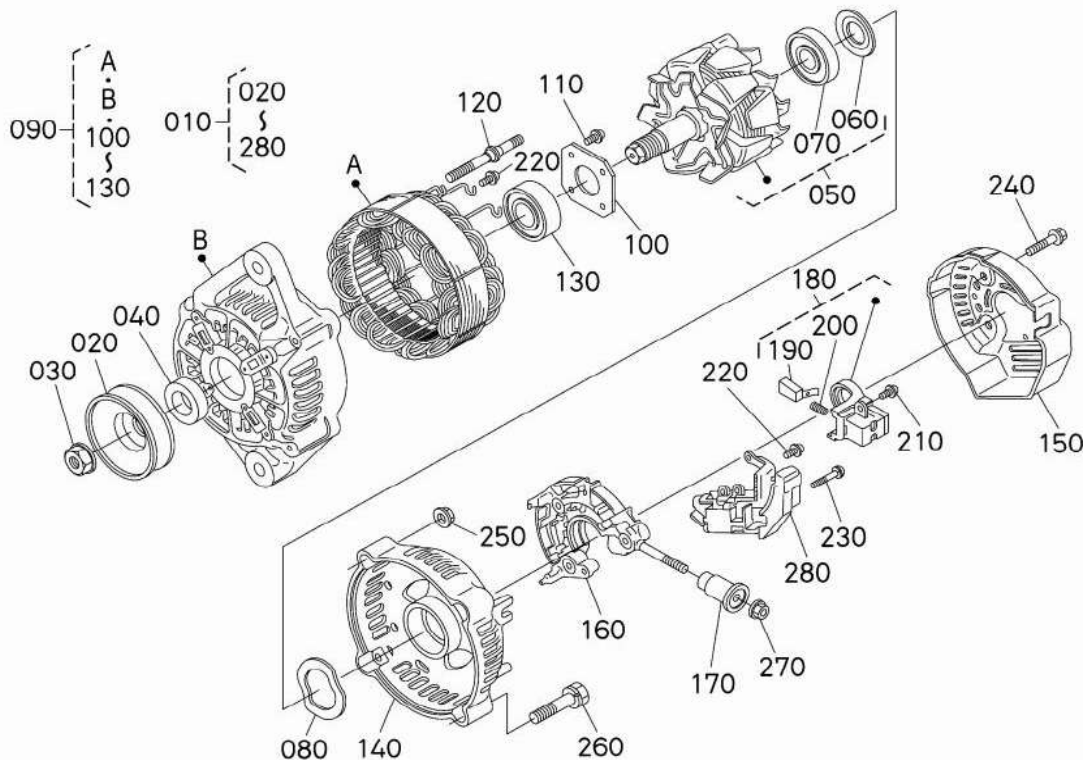

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S . No.	互换性 I. C.	备注 REMARKS
170	LP1003020004-265	15881-64900	绝缘衬套	INSULATING BUSHING	1		
170	LP1003020004-293	1G386-64900	衬套	BUSHING	1		
180	LP1003020004-266	16652-64310	电刷支架	BRUSH HOLDER	1		
180	LP1003020004-294	1G355-64310	刷子	BRUSH	1		
190	LP1003020004-267	15881-64090	电刷	BRUSH	2		
190	LP1003020004-295	1G386-64090	刷子	BRUSH	2		
200	LP1003020004-268	15881-64330	电刷弹簧	BRUSH SPRING	2		
200	LP1003020004-296	1G386-64330	电刷弹簧	BRUSH SPRING	2		
210	LP1003020004-269	15881-93040	半圆头螺钉	PAN HEAD SCREW	1		
210	LP1003020004-299	1G386-93040	圆头小螺丝	SMALL ROUND HEAD SCREW	1		
220	LP1003020004-271	15881-93030	半圆头螺钉	PAN HEAD SCREW	6		
220	LP1003020004-298	1G386-93030	圆头小螺丝	SMALL ROUND HEAD SCREW	6		
230	LP1003020004-270	15881-93020	半圆头螺钉	PAN HEAD SCREW	2		
230	LP1003020004-297	1G386-93020	圆头小螺丝	SMALL ROUND HEAD SCREW	2		
240	LP1003020004-300	1G386-91040	螺栓	BOLT	3		
250	LP1003020004-273	15881-92020	螺母	NUT	2		
250	LP1003020004-301	1G386-92020	螺母	NUT	2		
260	LP1003020004-274	15881-91050	螺栓	BOLT	2		
260	LP1003020004-302	1G386-91050	螺栓	BOLT	2		
270	LP1003020004-275	14182-92030	螺母	NUT	1		
270	LP1003020004-303	1E994-92030	螺母	NUT	1		
280	LP1003020004-276	16652-64602	调节器	REGULATOR	1		
280	LP1003020004-304	1G355-64600	调节器, 组件	REGULATOR ASSEMBLY	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B028

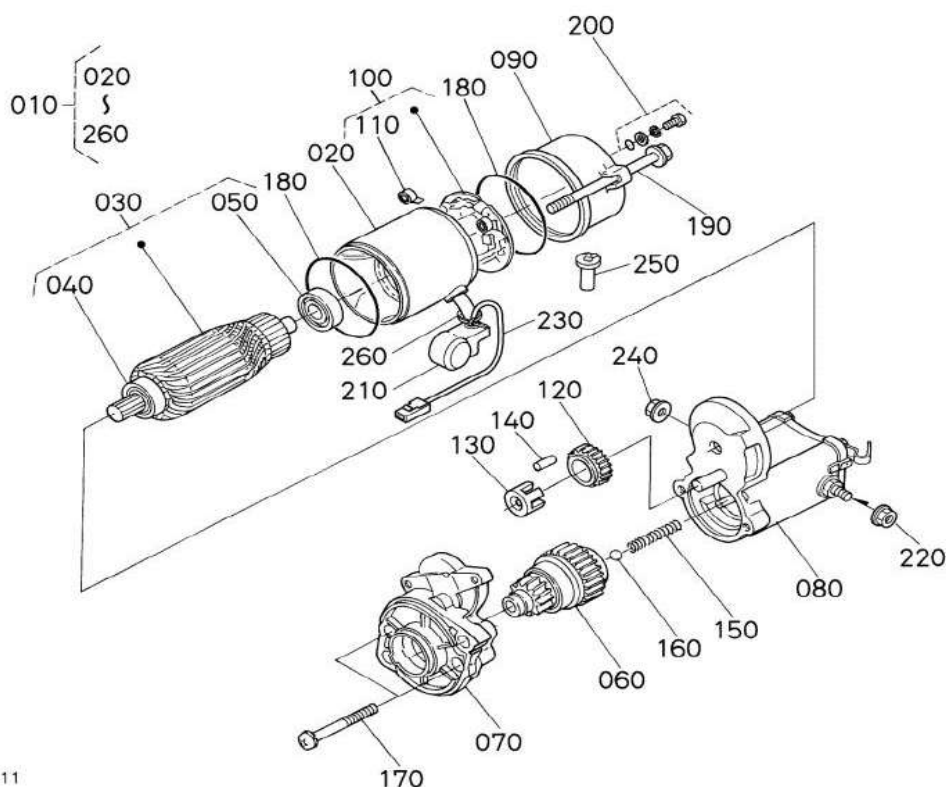 起动器(组成部分)
 STARTER MOTOR


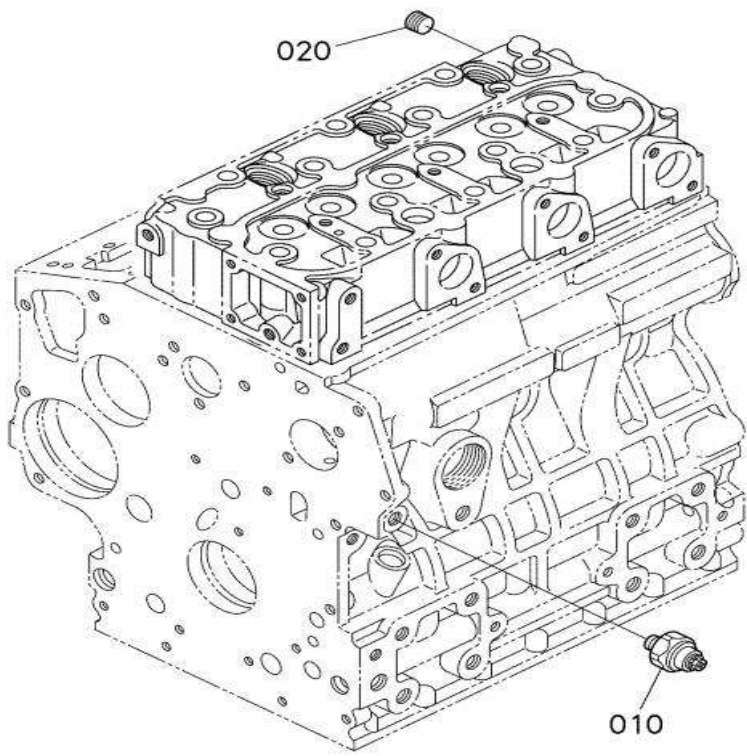
-097-11

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-309	16611-63010	起动器组件	STARTER ASSEMBLY	1		
020	LP1003020004-310	16661-63080	轭组件	YOKE ASSEMBLY	1		
030	LP1003020004-311	11197-63070	电枢组件	ARMATURE ASSEMBLY	1		
040	LP1003020004-312	11460-63500	轴承	BEARING	1		
050	LP1003020004-313	11460-63530	轴承	BEARING	1		
060	LP1003020004-314	16611-63040	超速离合器	OVERRUNNING CLUTCH	1		
070	LP1003020004-315	16611-63030	驱动端框架	DRIVE END FRAME	1		
080	LP1003020004-316	16611-63020	电磁开关组件	SOLENOID SWITCH	1		
090	LP1003020004-317	17341-63200	端架	END FRAME	1		
100	LP1003020004-318	11197-63380	炭刷固定夹组件	RETAINING CLIP	1		
110	LP1003020004-319	15401-63390	炭刷弹簧	CARBON BRUSH SPRING	4		
120	LP1003020004-320	11460-63270	齿轮	GEAR	1		
130	LP1003020004-321	11460-63110	定位器	LOCATOR	1		
140	LP1003020004-322	19212-63100	滚轴	ROLLER	5		
150	LP1003020004-323	11460-63120	弹簧	SPRING	1		
160	LP1003020004-324	19212-97130	钢珠	STEEL BALL	1		
170	LP1003020004-325	11460-93310	螺栓	BOLT	2		
180	LP1003020004-326	15511-96660	O型环	O-RING	2		
190	LP1003020004-327	11197-63320	螺栓	BOLT	2		
200	LP1003020004-328	15511-63760	螺栓组件	BOLT ASSEMBLY	2		
210	LP1003020004-329	16611-63450	盖	COVER	1		
220	LP1003020004-330	16611-92020	螺母	NUT	1		
230	LP1003020004-331	16611-63660	停止电磁阀线缆	STOP SOLENOID CABLE	1		
240	LP1003020004-332	16285-92010	六角螺母	HEX NUT	1		
250	LP1003020004-333	16285-63570	线缆管	CABLE TUBE	1		
260	LP1003020004-334	16612-63100	盖箍	COVER CLAMP	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B029

**机油开关
OIL SWITCH**




序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互换性 I. C.	备注 REMARKS
010	LP1003020004-337	15841-39013	开关	SWITCH	1		
020	LP1003020004-336	15841-96020	塞	PLUG	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


B030

进出水法兰和节温器

WATER INLET AND OUTLET FLANGES THERMOSTAT

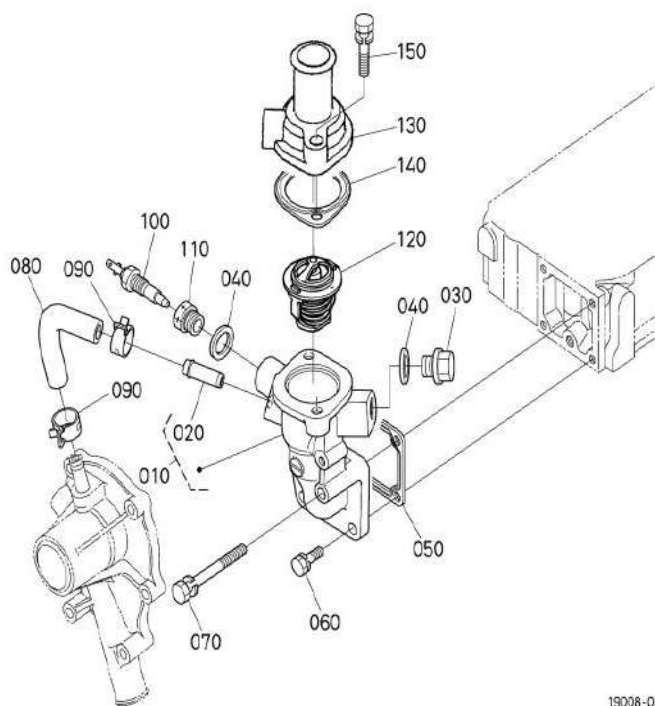

19008-019-30

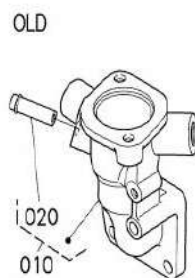


1,906-806-11

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-072	19008-72700	进出水法兰组件	WATER INLET	1		
010	LP1003020004-338	19008-72702	进出水法兰组件	WATER INLET	1		
020	LP1003020004-339	16241-73370	回水管	RETURN WATER PIPE	1		
030	LP1003020004-340	06311-55030	塞	PLUG	1		
040	LP1003020004-341	16261-96710	衬垫	GASKET	2		
050	LP1003020004-411	16264-72920	进出水法兰衬垫	WATER INLET	1		
060	LP1003020004-095	01023-50616	螺栓	BOLT	3		
070	LP1003020004-053	01023-50655	螺栓	BOLT	1		
080	LP1003020004-342	16241-73350	回水管	RETURN WATER PIPE	1		
090	LP1003020004-343	16687-73362	软管固定夹	HOSE RETAINING CLIP	2		
100	LP1003020004-344	16222-83043	开关	SWITCH	1		
110	LP1003020004-345	16067-72842	转接器	ADAPTER	1		
120	LP1003020004-346	19434-73015	恒温器, 组件	THERMOSTAT ASSEMBLY	1		
130	LP1003020004-347	16219-73260	节温器盖	THERMOSTAT COVER	1		
140	LP1003020004-412	16221-73270	节温器垫片	THERMOSTAT GASKET	1		
150	LP1003020004-348	01123-50835	螺栓	BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B031

水泵
WATER PUMP

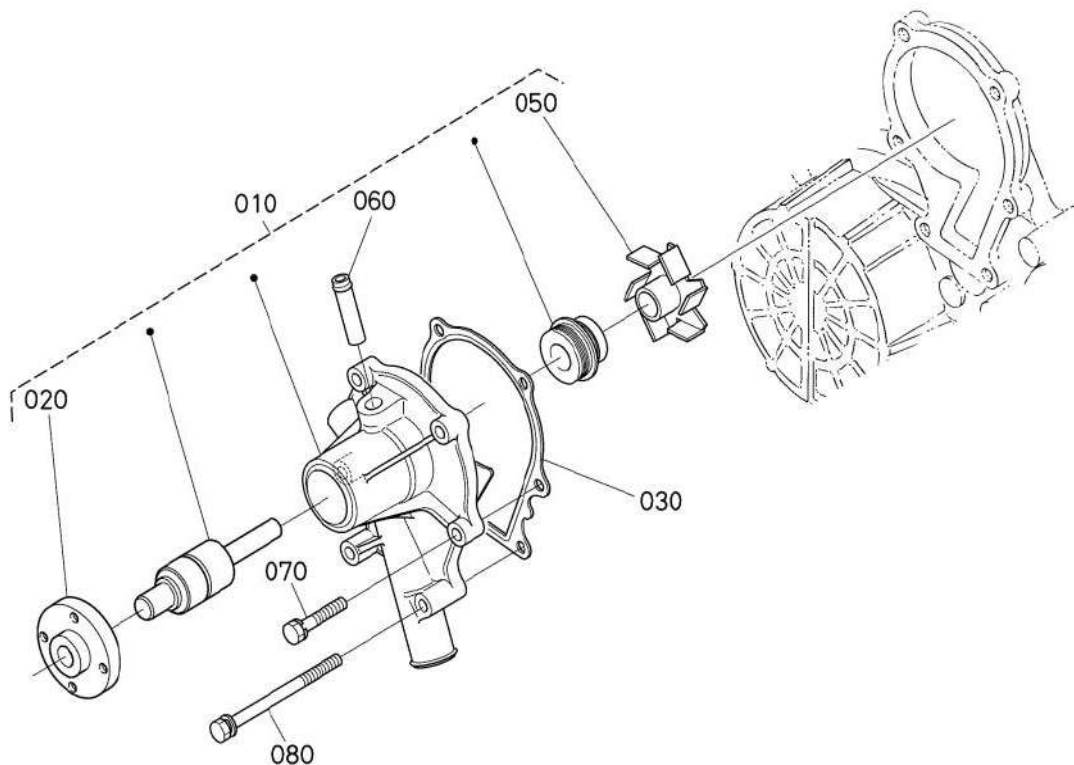


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-349	16251-73037	水泵总成	WATER PUMP ASSEMBLY	1		
020	LP1003020004-350	16259-73520	水泵法兰	WATER PUMP FLANGE	1		
030	LP1003020004-423	16239-73430	水泵衬垫	WATER PUMP GASKET	1		
050	LP1003020004-351	16259-73512	水泵叶轮	WATER PUMP IMPELLER	1		
060	LP1003020004-352	15852-73340	回水管	RETURN WATER PIPE	1		
070	LP1003020004-353	01023-50630	螺栓	BOLT	4		
080	LP1003020004-354	01023-50685	螺栓	BOLT	2		
080	LP1003020004-355	1J095-91060	螺栓	BOLT	2		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

B032

水管
WATER PIPE

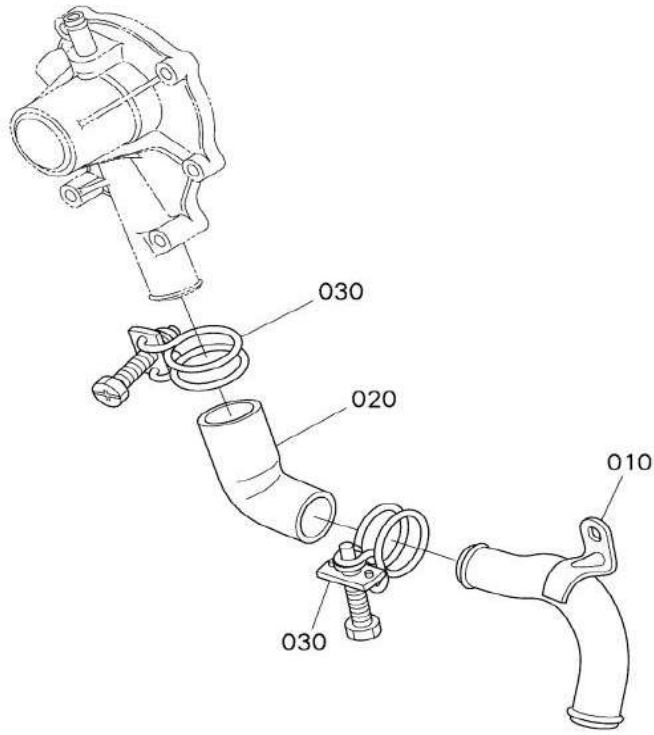


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-356	16285-72860	水管	WATER PIPE	1		
020	LP1003020004-357	1G680-72870	水管	WATER PIPE	1		
030	LP1003020004-358	1G677-72960	软管固定夹	HOSE RETAINING CLIP	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B033


风扇 FAN

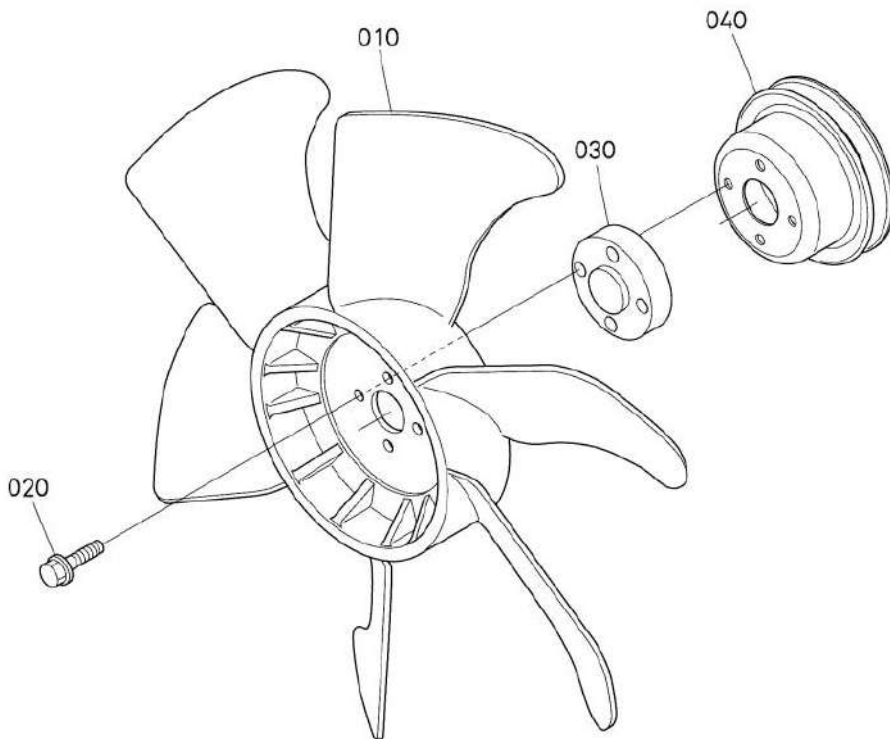

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-073	17218-74110	风扇	FAN	1		
020	LP1003020004-362	01754-50625	法兰螺栓	FLANGE BOLT	4		
030	LP1003020004-361	16261-74152	风扇轴环	FAN SHAFT COLLAR	1		
040	LP1003020004-360	16241-74250	风扇皮带轮	FAN PULLEY	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

B034

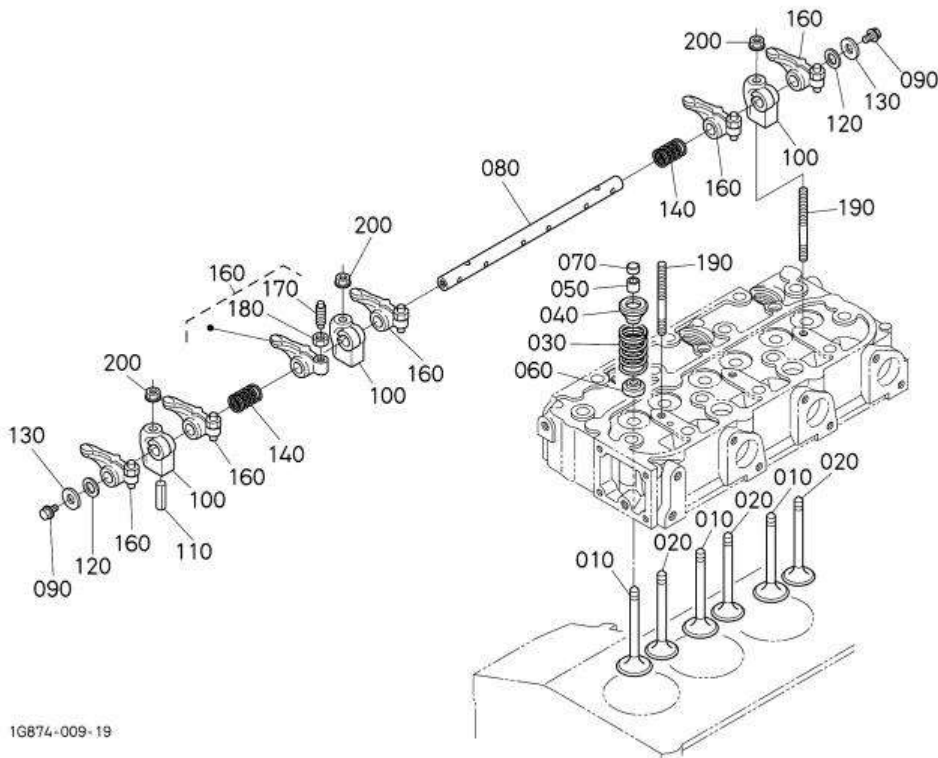气门和摇臂
VALVE ROCKER ARM


1G874-009-19

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020004-363	1G673-13112	阀	VALVE	3		
020	LP1003020004-364	1G673-13122	阀	VALVE	3		
030	LP1003020004-365	16271-13240	气门弹簧	VALVE SPRING	6		
040	LP1003020004-366	16261-13330	弹簧限位器	SPRING RETAINER	6		
050	LP1003020004-367	15261-13980	气阀弹簧夹头	SPRING RETAINER CLIP	6		
060	LP1003020004-414	1C010-13150	气门杆油封	VALVE STEM OIL SEAL	6		
070	LP1003020004-368	16241-13280	气门盖	VALVE COVER	6		
080	LP1003020006-074	16261-14266	摇臂轴	ROCKER ARM SHAFT	1		
090	LP1003020004-370	01754-50610	法兰螺栓	FLANGE BOLT	2		
100	LP1003020004-371	16241-14350	摇臂支架	ROCKER ARM BRACKET	3		
110	LP1003020004-374	05411-00428	弹簧销	SPRING PIN	1		
120	LP1003020004-375	16241-14430	摇臂轴垫圈	ROCKER ARM SHAFT WASHER	2		
130	LP1003020004-376	15841-94022	平垫圈	FLAT WASHER	2		
140	LP1003020004-377	16241-14310	摇臂弹簧	ROCKER ARM SPRING	2		
160	LP1003020004-378	16241-14032	摇臂组件	ROCKER ARM ASSEMBLY	6		
170	LP1003020004-379	16241-14230	调节螺钉	ADJUSTING SCREW	6		
180	LP1003020004-380	16241-14240	螺母	NUT	6		
190	LP1003020004-372	16241-14410	双头螺栓	STUD BOLT	3		
200	LP1003020004-373	1J095-92010	凸缘螺母	FLANGE NUT	3		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

B036

**排气歧管
EXHAUST MANIFOLDD**

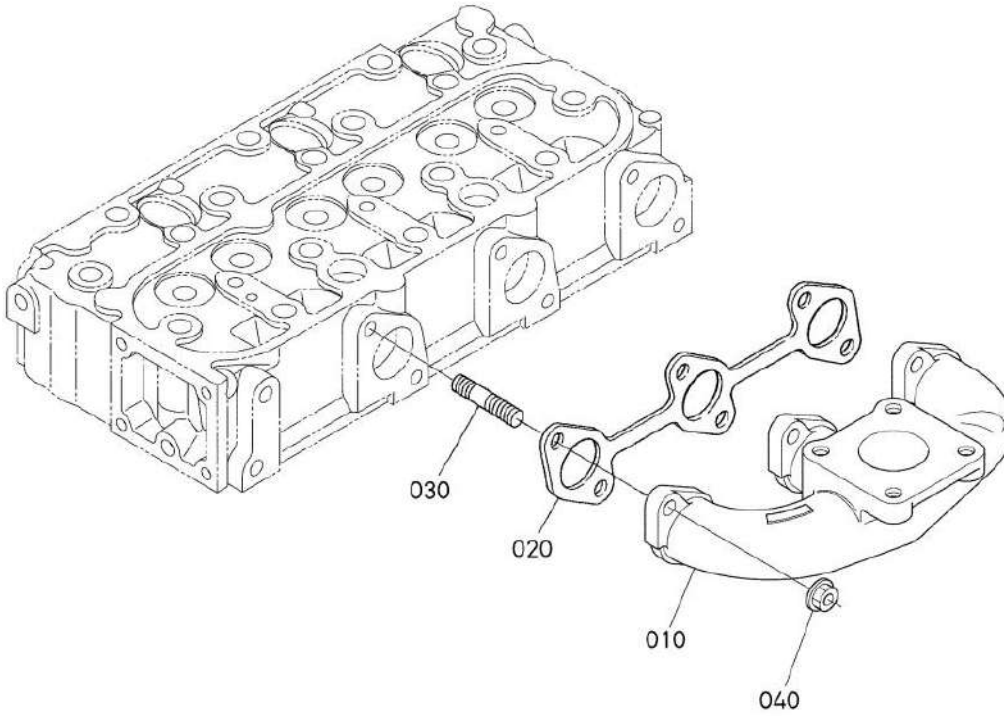


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-077	16700-12310	排气歧管	EXHAUST MANIFOLD	1		
020	LP1003020006-078	16261-12350	排气歧管衬垫	EXHAUST MANIFOLD GASKET	1		
030	LP1003020004-385	16241-91490	双头螺栓	STUD BOLT	6		
040	LP1003020004-386	16271-92010	螺母	NUT	6		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


B038

标签和使用说明书
LABEL USER MANUAL

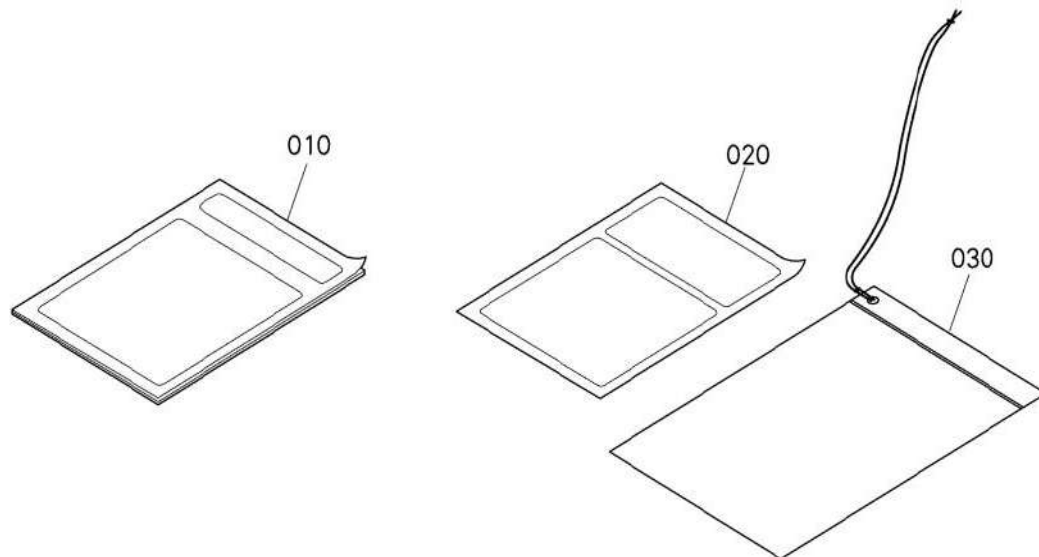

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1003020006-079	1J412-89114	使用说明书	OPERATION MANUAL	1		
010	LP1003020006-080	1J412-89115	使用说明书	OPERATION MANUAL	1		
010	LP1003020006-081	1K517-89160	使用说明书	OPERATION MANUAL	1		
020	LP1003020006-082	1J018-89810	说明书	INSTRUCTION MANUAL	1		
020	LP1003020004-400	1J019-89810	说明书	INSTRUCTION MANUAL	1		
020	LP1003020004-401	1J020-89810	说明书	INSTRUCTION MANUAL	1		
020	LP1003020004-402	1J021-89810	说明书	INSTRUCTION MANUAL	1		
020	LP1003020004-403	1J022-89810	说明书	INSTRUCTION MANUAL	1		
020	LP1003020004-404	1J023-89810	说明书	INSTRUCTION MANUAL	1		
030	LP1003020004-405	1J500-08180	乙烯塑料袋	PLASTIC BAG	1		


B039 发动机支座 ENGINE MOUN

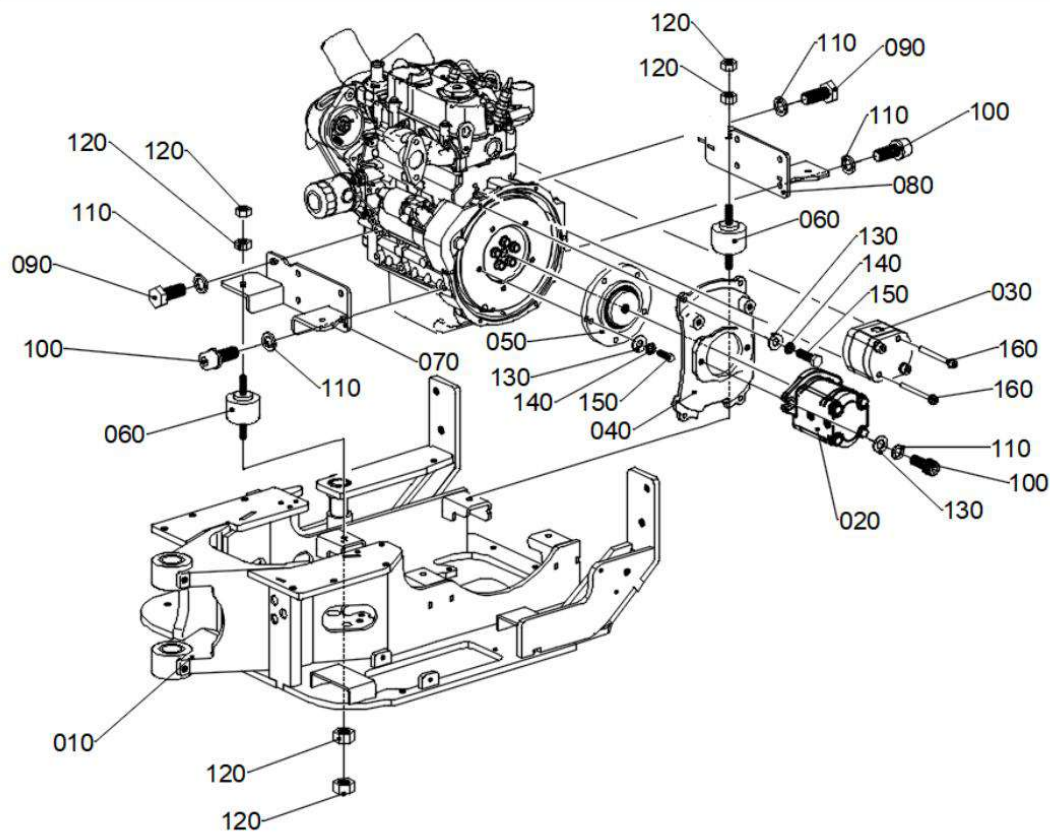

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互换性 I.C.	备注 REMARKS
010	LP0112012191		上盘	UPPER CASE	1		
020	LP0101010021		齿轮泵	GEAR PUMP	1		
030	LP0101010028		齿轮泵	GEAR PUMP	1		
040	LP0102010070		飞轮壳	FLYWHEEL HOUSING	1		
050	LP0102010038		联轴器	COUPLING	1		
060	LP0111020035		发动机减震垫	SHOCK ABSORBER PAD	4		
070	LP0112014852		发动机支座	ENGINE MOUNT	1		
080	LP0112014853		发动机支座	ENGINE MOUNT	1		
090	LP0116011673	M10x25	螺栓	BOLT	8		
100	LP0116011179	M10x30	螺栓	BOLT	4		
110	LP0116011720	M10	弹垫	SPRING WASHER	14		
120	LP0116011712	M10	螺母	NUT	16		
130	LP0116011718	M8	垫片	WASHER	9		
140	LP0116011724	M8	弹垫	SPRING WASHER	9		
150	LP0116011664	M8*30	螺栓	BOLT	9		
160	LP1001010028-001	M8*90	螺栓	BOLT	2		

↔ 可互换 ; ≠ 不可互换 ; ↶ 以新换旧 ; ↷ 以旧换新


C001 **燃油箱**
FUEL TANK

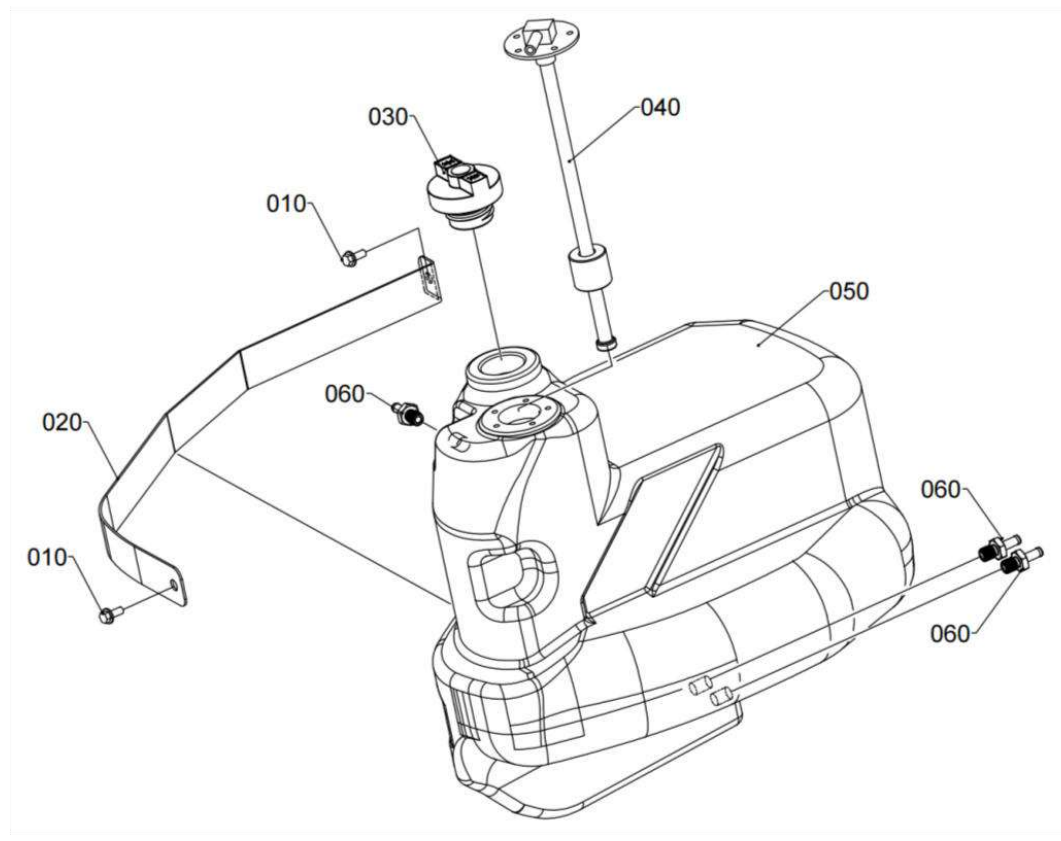

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I.C.	备注 REMARKS
010	LP0116011735	M8*10	法兰螺丝	FILTER	2		
020	LP0112014714		油箱卡箍	FUEL TANK CLAMP	1		
030	LP0115040113		燃油箱盖	TANK CAP, FUEL	1		
040	LP0111040011		油位传感器	OIL LEVEL	1		
050	LP0115040091		燃油箱	FULE TANK	1		
060	LP0115040171		油口预埋对丝	SILK	3		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

C002 燃油系统 FUEL SYSTEM

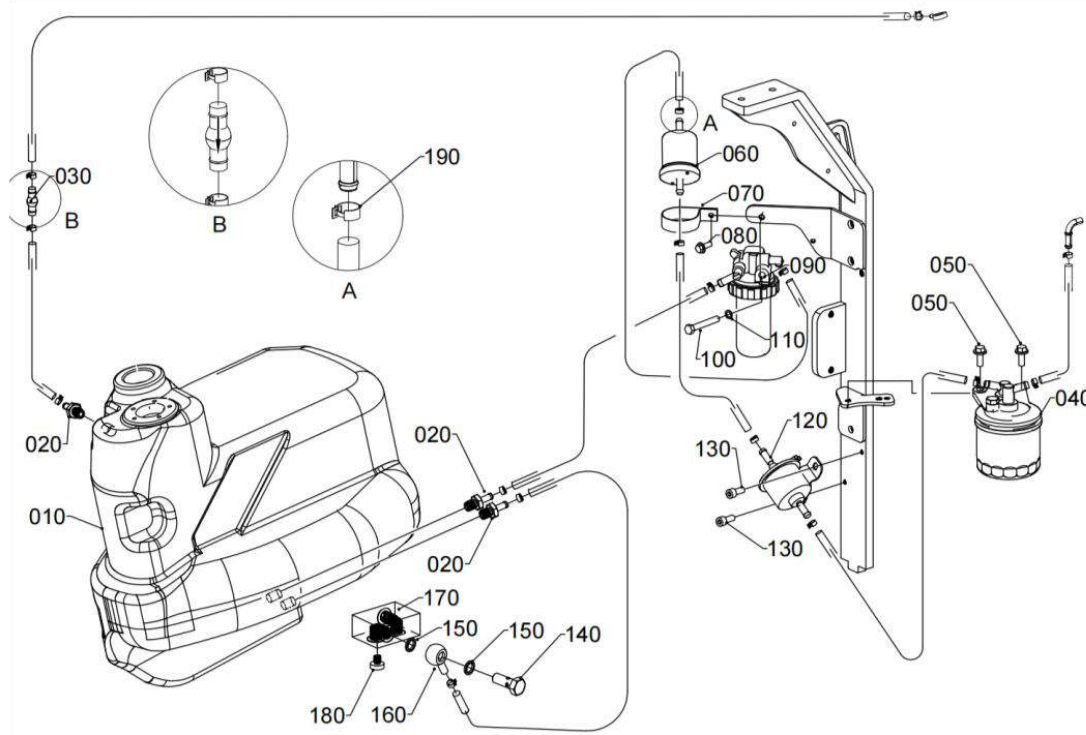


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115040091		燃油箱	FUEL TANK	1		
020	LP0115040171		油口预埋对丝	SILK	3		
030	LP0111020010		单向阀	CHECK VALVE	1		
040	LP1003020004-456	1A001-43010	精滤	SECONDARY FILTER	1		
050	LP0116011709	M8*20	螺栓	BOLT	2		
060	LP1003020004-392	12581-43012	粗滤	PRIMARY FILTER	1		
070	LP0113040016		安装架	MOUNTING BRACKET	1		
080	LP0116011735	M8*10	螺栓	BOLT	1		
090	LP0111020089		油水分离器	SEPARATOR	1		
100	LP0116011727	M8*60	螺栓	BOLT	1		
110	LP0116011718	M8	垫片	WASHER	1		
120	LP1003020004-397	1G377-52030	打油泵	FUEL FEED PUMP	1		
130	LP0116011864	M6*10	螺栓	BOLT	2		
140	LP0115020714		空心螺丝	HOLLOW BOLT	1		
150	LP0116011092		组合垫	COMBINATION GASKET	2		
160	LP0115021133		球头	BALL JOINT	1		
170	LP0115030036		放油阀块	OIL DRAIN VALVE BLOCK	1		
180	LP0115020214	14H	堵	PLUG	1		
190	LP0116010712		管卡	PIPE CLIP	15		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

D001


驾驶室 (主体)
CABIN (BODY)

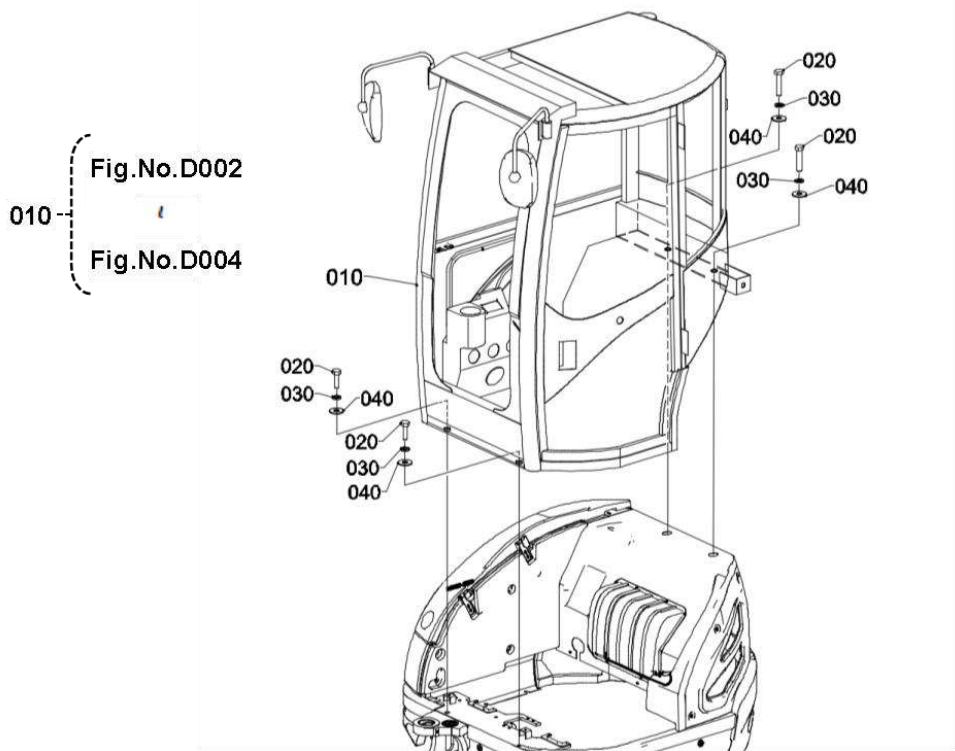

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP0108010246		驾驶室总成	CAB ASSEMBLY	1		
020	LP0116012469	M16*40	螺栓	BOLT	4		
030	LP0116011722	M16	弹垫	SPRINGWASHER	4		
040	LP0116011882	M16	垫片	WASHER	4		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

D002

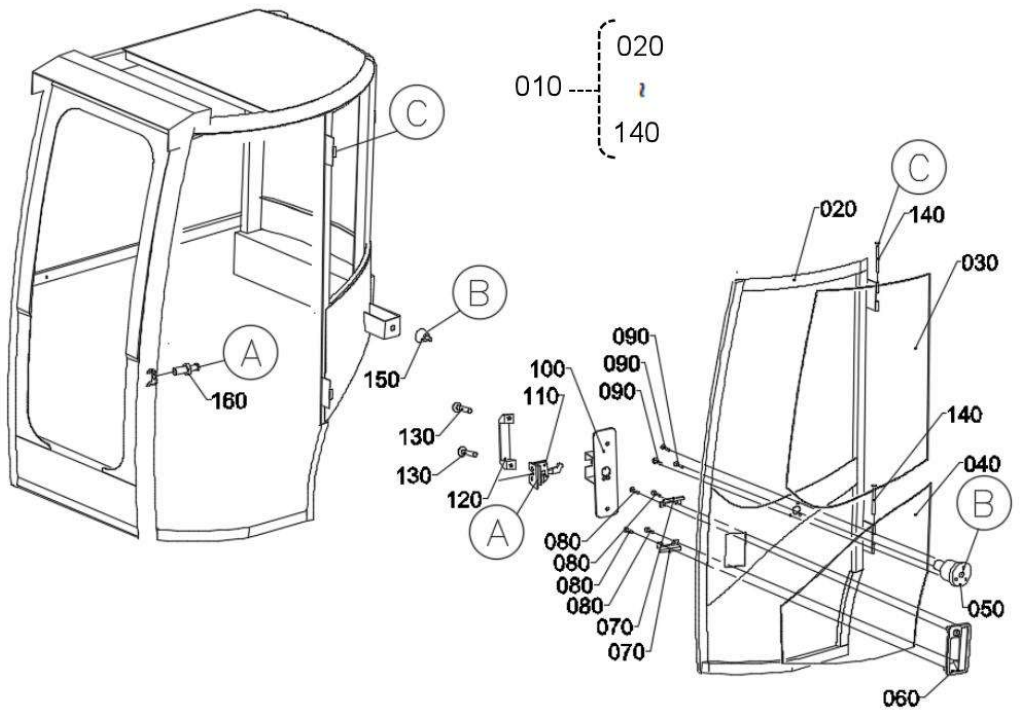
驾驶室门
CAB DOOR

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP1008010117-011		门总成	DOOR	1		
020	LP1008010117-012		门框	DOOR FRAME	1		
030	LP1008010117-013		玻璃	GLASS	1		
040	LP1008010117-014		玻璃	GLASS	1		
050	LP1008010117-015		门锁组件	LOCK COMPONENTS	1		
060	LP1008010117-016		门锁组件	LOCK COMPONENTS	1		
070	LP1008010117-017		压片	TABLETING	2		
080	LP0116060001	M5*10	螺栓	BOLT	4		
090	LP0116012804	M4*20	螺栓	BOLT	3		
100	LP1008010117-018		盖板	COVER PLATE	1		
110	LP1008010117-019		门锁组件	LOCK COMPONENTS	1		
120	LP011603244		门把手	DOOR HANDLE	1		
130	LP0116011841	M8*30	螺栓	BOLT	2		
140	LP1008010117-020		平头销	FLAT HEAD SALES	2		
150	LP1008010117-021		锁销	LOCKING PIN	1		
160	LP1008010117-022		锁销	LOCKING PIN	1		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新


D003

驾驶室（玻璃） CAB (GLASS)

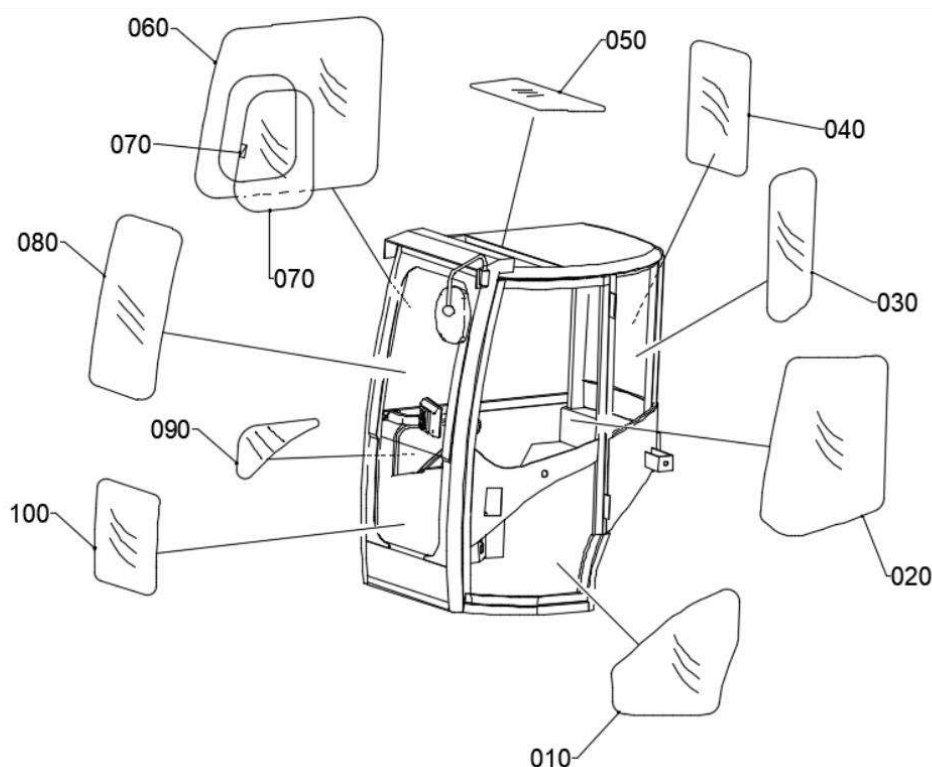

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I. C.	备注 REMARKS
010	LP1008010117-023		左下玻璃	LOWER LEFT GLASSY	1		
020	LP1008010117-024		左上玻璃	UPPER LEFT GLASSY	1		
030	LP1008010117-025		左后玻璃	LEFT REAR GLASSY	1		
040	LP1008010117-026		后侧玻璃	REAR GLASSY	1		
050	LP1008010117-027		顶部玻璃	TOP GLASSY	1		
060	LP1008010117-028		右上玻璃	UPPER RIGHT GLASSY	1		
070	LP1008010117-029		右上推拉玻璃	TOP-RIGHT GLASSY	1		
080	LP1008010117-030		前侧玻璃	FRONT GLASSY	1		
090	LP1008010117-031		右下玻璃	LOWER RIGHT GLASSY	1		
100	LP1008010117-032		前侧下玻璃	FRONT LOWER GLASSY	1		

D004

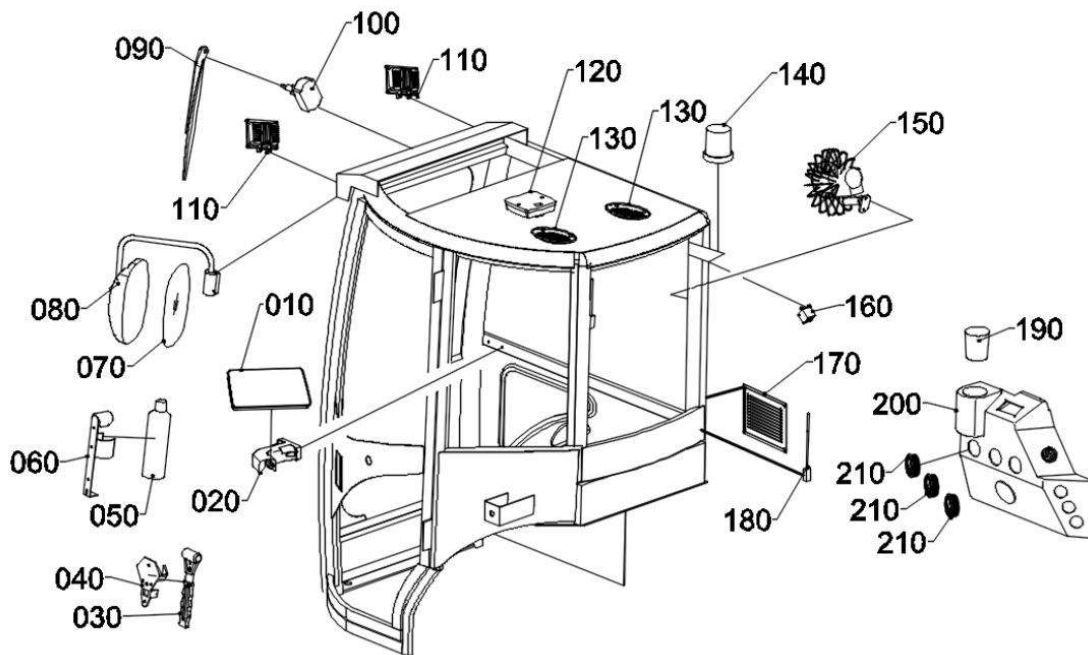
驾驶室配件
CAB PARTS

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互 换 性 I. C.	备注 REMARKS
010	LP0106040079		显示屏	DISPLAY	1		
020	LP1006040079-001		显示屏支架	DISPLAY BRACKET	1		
030	LP1008010246-054		安全锤	SAFETY HAMMER	1		
040	LP1008010246-053		安全锤支座	HAMMER BRACKET	1		
050	LP1008010246-056		灭火器	FIRE EXTINGUISHER	1		
060	LP1008010246-055		灭火器支架	BRACKET	1		
070	LP1008010117-001		后视镜	SPIEGELGLAS	1		
080	LP1008010117-002		后视镜支架	REARVIEW MIRROR BRACKET	1		
090	LP1008010117-003		雨刷刮片	WIPER BLADE	1		
100	LP1008010117-004		马达	MOTOR	1		
110	LP1008010117-005		前灯	HEADLIGHT	2		
120	LP1008010117-006		顶灯	DOME LIGHT	1		
130	LP0106040086		扬声器	AUDIO SYSTEM	2		
140	LP1008010117-007		警示灯	WARNING LIGHT	1		
150	LP1008010117-008		电风扇	ELECTRIC FAN	1		
160	LP011109048		倒车摄像头	REVERSE CAMERA	1		
170	LP1008010246-064		通风过滤网组	VENT FILTER	1		
180	LP1008010117-009		天线	ANTENNA	1		
190	LP1008010117-010		收纳盒	STORAGE BOX	1		
200	LP0108010141		内饰	INTERIOR TRIM	1		
210	LP1008010246-062		空调出风口	VENT, A/C	3		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

E001

履带架
TRACK FRAME

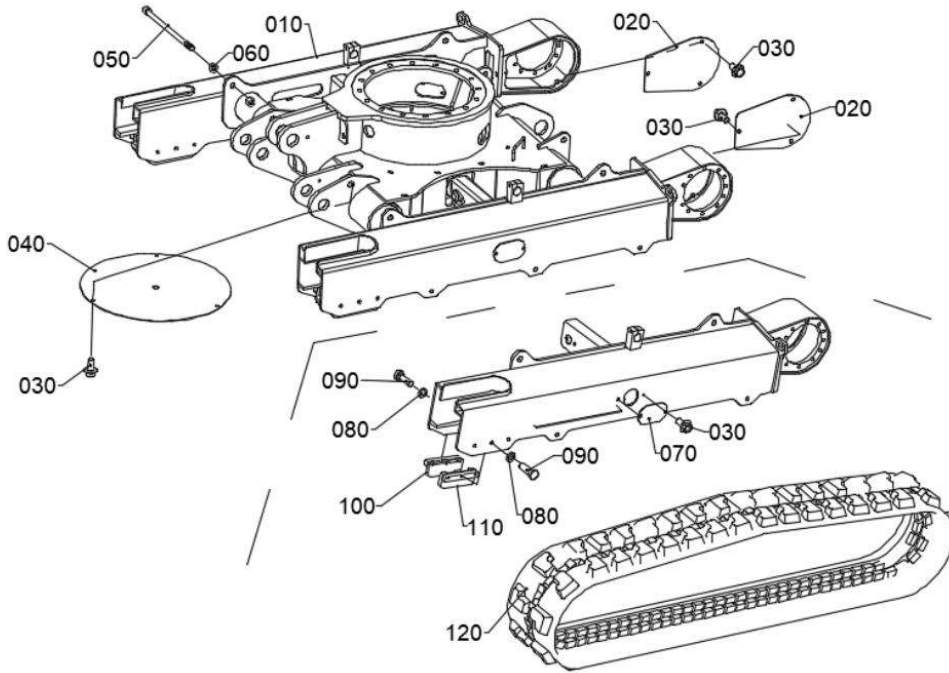


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112012700		履带架	TRACK FRAME	1		
020	LP0112014696		马达盖板	MOTOR COVER	2		
030	LP0116012271	M10*15	法兰螺栓	FIANGE BOLT	13		
040	LP0112014509		检修板	MAINTENANCE PANEL	1		
050	LP0116012455	M16	伸缩限位杆	TELESCOPIC LIMIT ROD	4		
060	LP0116011741	M16	螺母	NUT	8		
070	LP0112014436		黄油嘴护板	BUTTER SPOUT GUARD	2		
080	LP0116011715	M10	弹垫	SPRING WASHER	12		
090	LP0116011675	M10*30	螺栓	BOLT	12		
100	LP0112013480		防脱链板L	ANTI-DROP PLATE R	2		
110	LP0112013481		防脱链板R	ANTI-DROP PLATE L	2		
120	LP0102110014		履带	CRAWLER TRACK	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

E003


推土铲
BULLDOZER BLADE

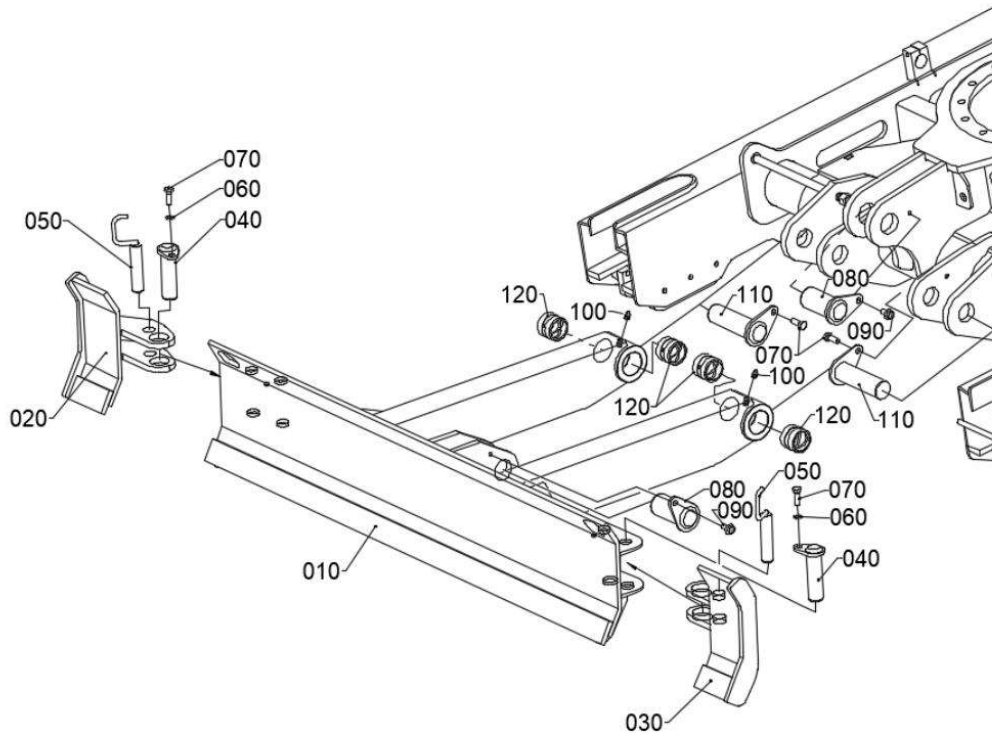

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互换性 I. G.	备注 REMARKS
010	LP0112014672		推土铲	DOZER BLADE	1		
020	LP0112014031		加宽推土铲L	WIDENED BLADE L	1		
030	LP0112014032		加宽推土铲R	WIDENED BLADE R	1		
040	LP0107021582	Φ40x135	销轴	SHAFT	2		
050	LP0107021584	Φ24x110	销轴	SHAFT	2		
060	LP0116011715	M10	弹垫	SPRING WASHER	2		
070	LP0116011675	M10*30	螺栓	BOLT	2		
080	LP0107021581	Φ45x92	销轴	SHAFT	2		
090	LP0116012271	M10*15	法兰螺栓	FLANGE BOLT	2		
100	LP0116011085	M10*1	黄油嘴	GREASE FITTING	2		
110	LP0107021582	Φ40x135	销轴	SHAFT	2		
120	LP0107021605	50x40x40	耐磨套	WEAR BUSHING	4		


↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

E004

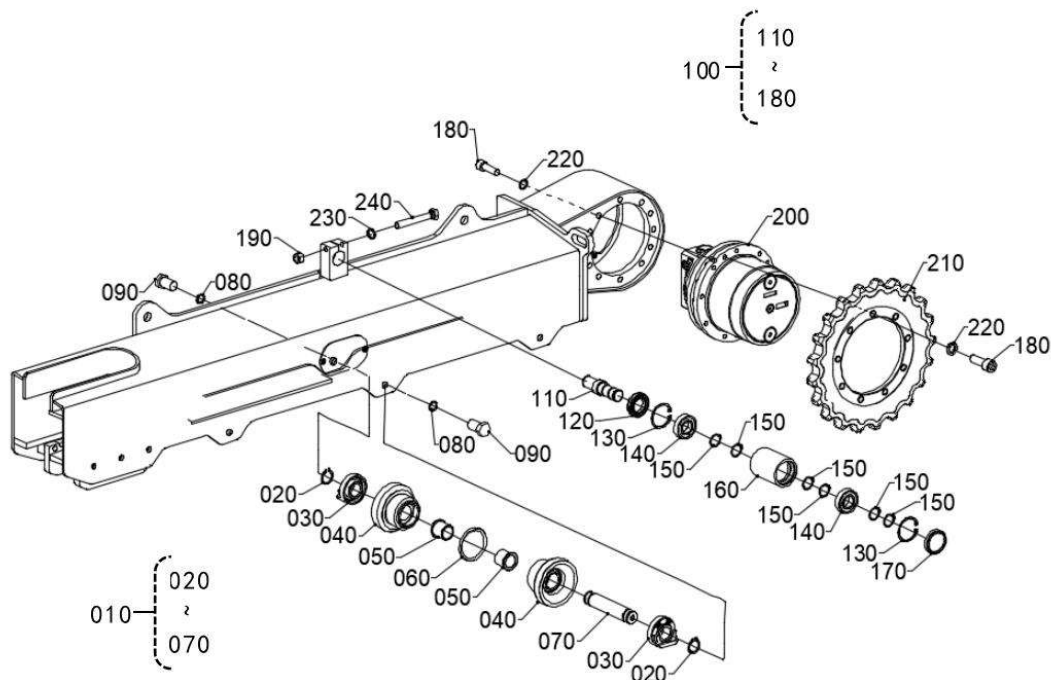支重轮
ROLLER

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP0102060009		支重轮总成	ROLLER ASSEMBLY	6		
020	LP1002060009-001		卡簧	CLAMP	12		
030	LP1002060009-002		轮盖	WHEEL COVER	12		
040	LP1002060009-003		轮	WHEEL	12		
050	LP1002060009-004		密封	SEAL	12		
060	LP1002060009-005		中间环	MIDDLE RING	6		
070	LP1002060009-006		轴	SHAFT	6		
080	LP0116011721	M12	弹垫	SPRING WASHER	12		
090	LP0116011624	M12*30	螺栓	BOLT	12		
100	LP0102080001		拖链轮	TOP ROLLER	2		
110	LP1002080001-001		轴	SHAFT	2		
120	LP1002080001-002		油封	OIL SEAL	2		
130	LP1002080001-003	Φ 57	卡簧	CLAMP	4		
140	LP1002080001-004	6206	轴承	BEARING	4		
150	LP1002080001-005	Φ 28	卡簧	CLAMP	12		
160	LP1002080001-006		拖链轮	TOP ROLLER	2		
170	LP1002080001-007		塞	PLUG	2		
180	LP0116012618	M10*30	螺栓	BOLT	18		
190	LP0116011729	M8	螺母	NUT	2		
200	LP0102020018		行走马达	TRAVEL MOTOR	2		
210	LP0102090015		驱动链轮	DRIVE SPROCKET	2		
220	LP0116012327	M10	弹垫	SPRING WASHER	18		
230	LP0116011724	M8	弹垫	SPRING WASHER	2		
240	LP0116011727	M8*60	螺栓	BOLT	2		

E005 引导轮 IDLER WHEEL

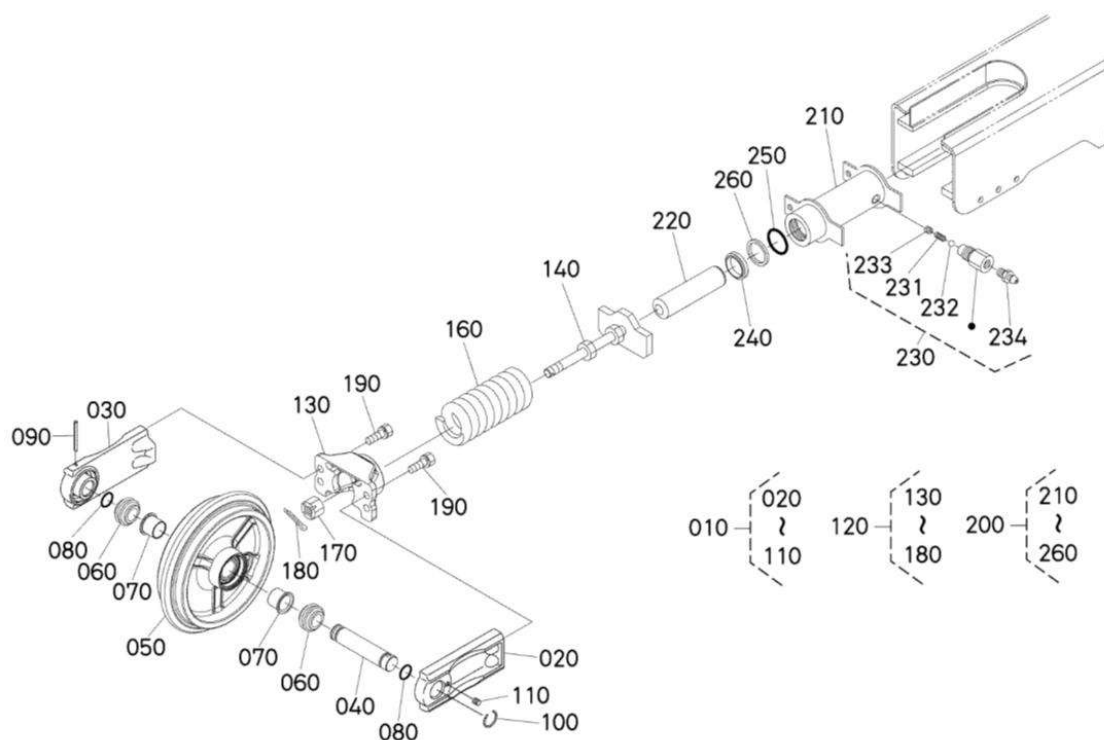


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0102070013		引导轮组件	IDLER WHEEL ASSEMBLY	2		
020	LP1002070013-001		左侧支架	LEFT BRACKET	2		
030	LP1002070013-002		右侧支架	RIGHT BRACKET	2		
040	LP1002070013-003		引导轮轴	IDLER WHEEL SHAFT	2		
050	LP1002070013-004		引导轮轮	IDLER WHEEL	2		
060	LP1002070013-005		密封接头	SEALING JOINT	4		
070	LP1002070013-006		环套	BUSHING	4		
080	LP1002070013-007		O型圈	O-RING	4		
090	LP1002070013-008		弹簧销	SPRING PIN	2		
100	LP1002070013-009		钢丝	WIRE	2		
110	LP1002070013-010		塞	PLUG	2		
120	LP0102070014		弹簧总成	SPRING ASSEMBLY	2		
130	LP1002070014-001		涨紧弹簧板	TENSION SPRING PLATE	2		
140	LP1002070014-002		弹簧保持架	SPRING RETAINER	2		
160	LP1002070014-003		弹簧	SPRING	2		
170	LP1002070014-004		螺母	NUT	2		
180	LP1002070014-005		开口销	SPLIT PIN	2		
190	LP0116011842	M12-1.75*30	螺栓	BOLT	8		
200	LP0102070015		涨紧油缸	TENSION CYLINDER	2		
210	LP1002070015-001		缸筒	CYLINDER TUBE	2		
220	LP1002070015-002		杆	ROD	2		
230	LP1002070015-003		接头总成	JOINT ASSEMBLY	2		
231	LP1002070015-004		弹簧	SPRING	2		
232	LP1002070015-005		球	BALL	2		
233	LP1002070015-006		塞子	PLUG	2		
234	LP1016011085	M10*1	黄油嘴	NIPPLE, GREASE	2		
240	LP1002070015-007		防尘	DUST PROOF	2		
250	LP1002070015-008	35*41.5*2	O型圈	O-RING	2		
260	LP1002070015-009		支撑环	BACKUP RING	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

F001


工作装置 (动臂)
WORK DEVICE (BOOM)

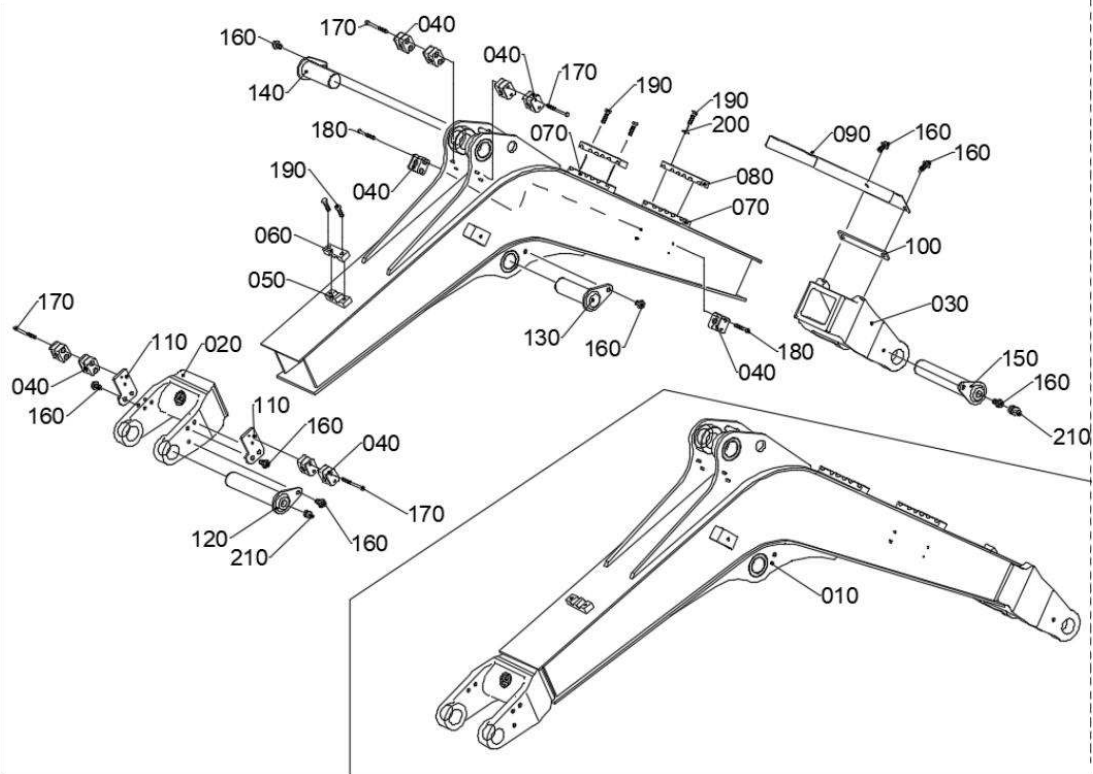

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112012694		动臂	BOOM	1		
020	LP0117020031		动臂前叉	BOOM FRONT	1		
030	LP0117020032		动臂后叉	BOOM AFTER	1		
040	LP0111080475		单孔管夹	1-HOLE PIPE CLAMP	10		
050	LP0111070022		双孔管夹	2-HOLE PIPE	1		
060	LP0111070023		双孔管夹	2-HOLE PIPE	1		
070	LP0111070026		六孔管夹	6-HOLE PIPE	2		
080	LP0111070027		六孔管夹	6-HOLE PIPE	2		
090	LP0112013391		护板	BACKPLATE	1		
100	LP0112013392		压板	PRESSURE PLATE	1		
110	LP0112014731		支架	BRACKET	2		
120	LP0107021503	60×217×40×205	销轴	PIN SHAFT	1		
130	LP0107021502	60×139×40×127	销轴	PIN SHAFT	1		
140	LP0107021504	60×125×40×113	销轴	PIN SHAFT	1		
150	LP0107021501	60×241×40×229	销轴	PIN SHAFT	1		
160	LP0116012552	M10×20	螺栓	BOLT	10		
170	LP0116011754	M6×80	螺栓	BOLT	8		
180	LP0116012658	M6×50	螺栓	BOLT	4		
190	LP0116011664	M8×30	螺栓	BOLT	2		
200	LP0116011718	M8	垫圈	WASHER	2		
210	LP0116011085	M10*1	黄油嘴	GREASE NIPPLE	2		

F002

工作装置（斗杆）
WORK DEVICE (BUCKET ROD)

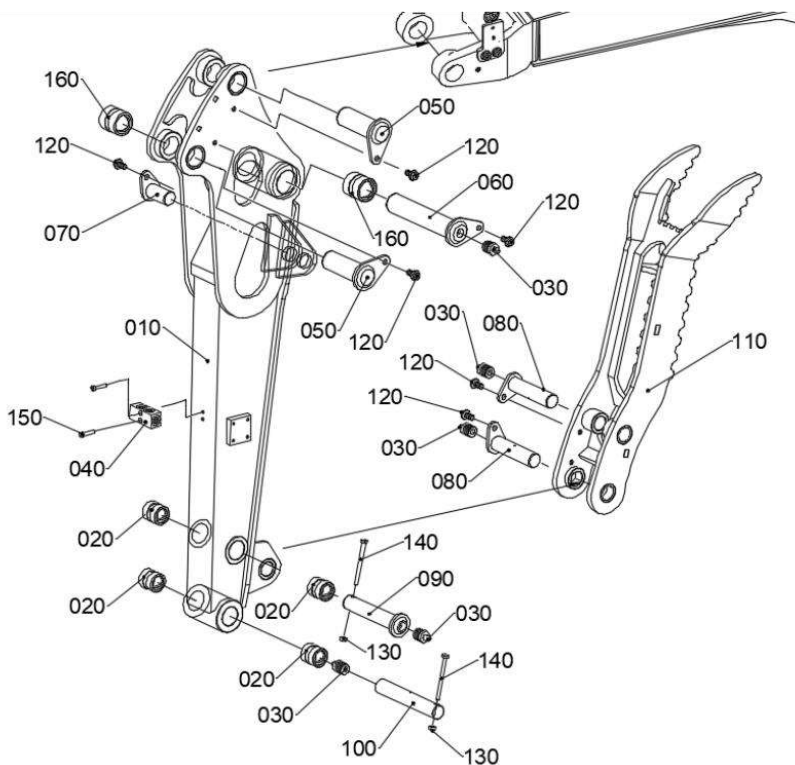


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112012695		斗杆	BUCKET ARM	1		
020	LP011108068	40×30×40	耐磨套	WEAR BUSHING	4		
030	LP1016011085	M10*1	黄油嘴	GREASE FITTING	5		
040	LP0115030082		快换工艺块	QC PROCESS BLOCK	1		
050	LP0107021504	60×125×40×113	销轴	PIN SHAFT	2		
060	LP0107021503	60×205×40×217	销轴	PIN SHAFT	1		
070	LP0107021583	45×72×30×60	销轴	PIN SHAFT	1		
080	LP0107021580	45×137×30×125	销轴	PIN SHAFT	2		
090	LP0107021505	50×176×30×164	销轴	PIN SHAFT	1		
100	LP1004011792-01	30×188	销轴	PIN SHAFT	1		
110	LP02080108		拇指夹	THUMB CLIP	1		
120	LP0116011205	M10×20	螺栓	BOLT	6		
130	LP0116011169	M10	螺母	NUT	2		
140	LP0116011633	M10×90	螺栓	BOLT	2		
150	LP0116011750	M6×30	螺栓	BOLT	2		
160	LP011108069	50×40×50	耐磨套	WEAR BUSHING	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

F003

工作装置 (连遥杆和快换)
WORK DEVICE (CONNECTING ROD & QUICK-CHANGE)

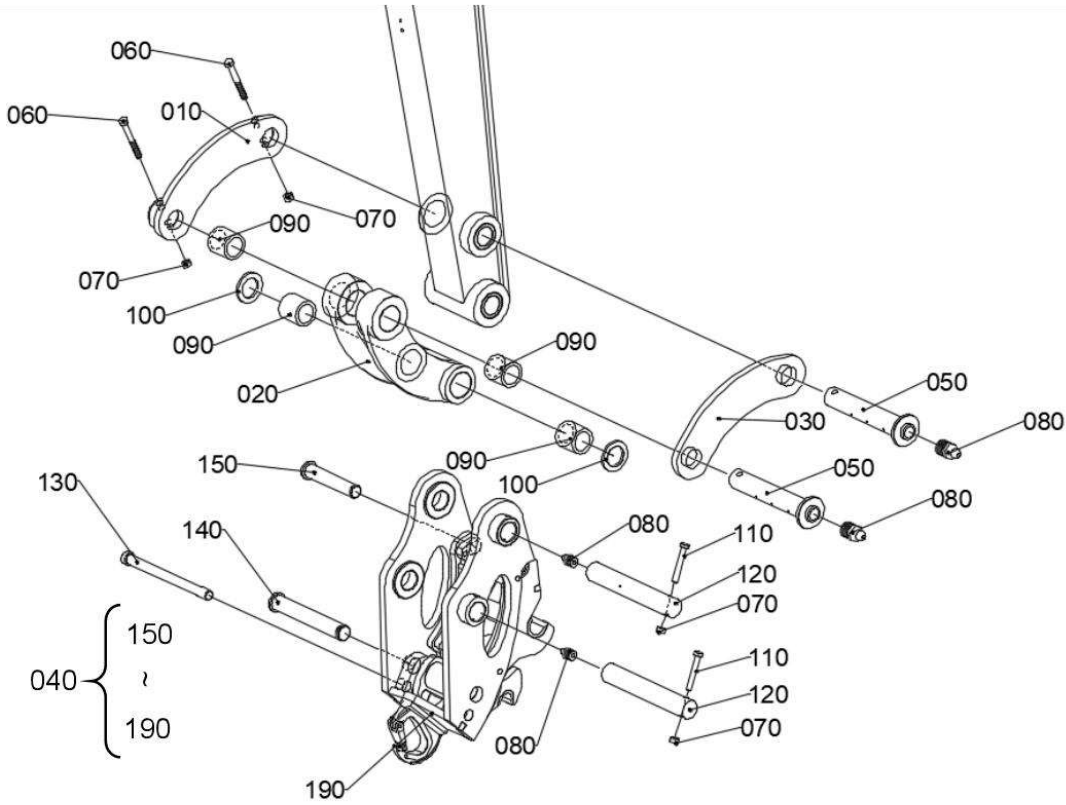


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0112013194		摇杆	ROCKER ARM	1		
020	LP0112012696		连杆	CONNECTING ROD	1		
030	LP0112012697		摇杆	ROCKER ARM	1		
040	LP0104011792		液压快换	QUICK-CHANGE ASS	1		
050	LP0107021505	50×170×30×164	销轴	PIN SHAFT	1		
060	LP0107021506	60×176×40×164	销轴	PIN SHAFT	1		
070	LP0116011633	M10×90	螺栓	BOLT	2		
080	LP0116011712	M10	螺母	NUT	2		
090	LP0116011085	M10*1	黄油嘴	GREASE FITTING	4		
100	LP1012012696-001	48*30*40	耐磨套	WEAR BUSHING	2		
110	LP1012012696-002		防尘圈	DUST SEAL	2		
120	LP1012012696-003	45*40*30	耐磨套	WEAR BUSHING	2		
130	LP0116011667	M8×55	螺栓	BOLT	2		
140	LP0116011711	M8	螺母	NUT	2		
150	LP1004011792-01	30*188	销轴	PIN SHAFT	2		
160	LP1004011792-04	20*110	销轴	PIN SHAFT	1		
170	LP1004011792-06	24*159	销轴	PIN SHAFT	1		
180	LP1004011792-03	17.8*193	销轴	PIN SHAFT	1		
190	LP0104011792-07		主体	MAIN BODY	1		

↔ 可互换 ; ⇌ 不可互换 ; ← 以新换旧 ; → 以旧换新

F004

工作装置(挖斗) WORK DEVICE (BUCKET)

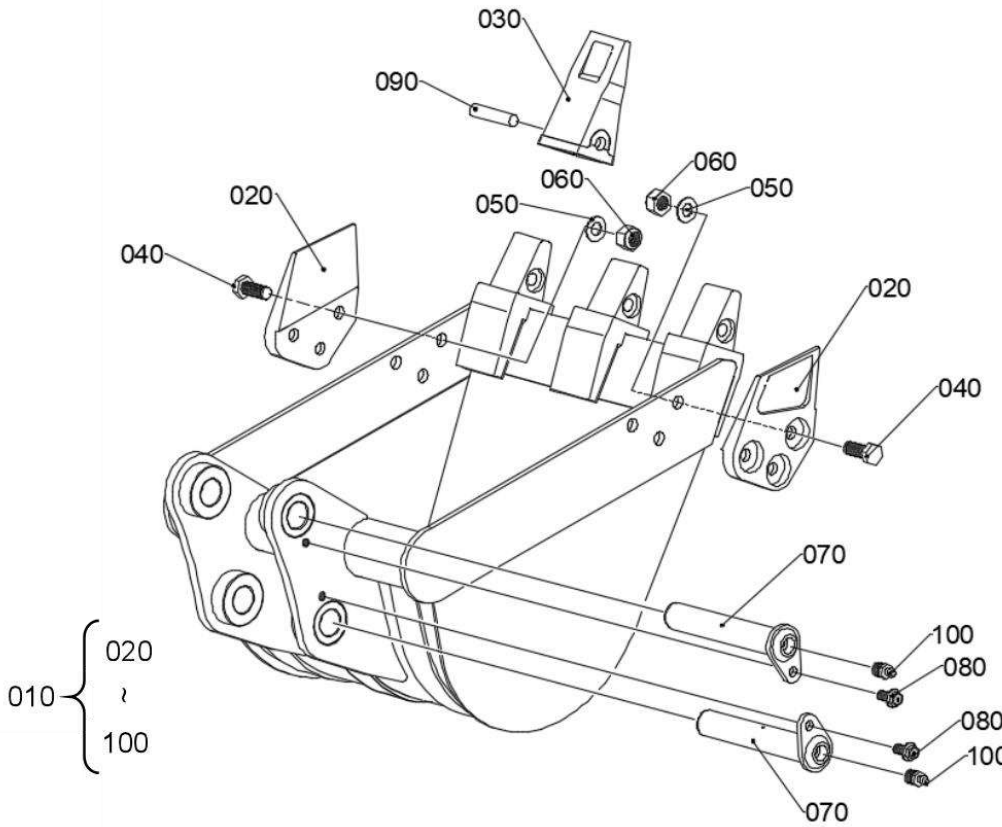


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0104010970		挖斗	BUCKET	1		
020	LP011109078		侧齿	SIDE TEETH	2		
030	LP0111080116		齿尖	TOOTH TIPFITTING	3		
040	LP0116011623	M14×30	螺栓	BOLT	6		
050	LP0116011719	M14	垫片	GASKET	6		
060	LP0116011731	M14	螺母	NUT	6		
070	LP0107021507	45×189×30×177	销轴	PIN SHAFT	2		
080	LP0116012552	M10×20	螺栓	BOLT	2		
090	LP0111080117		齿销	TOOTH PIN	3		
100	LP0116011085	M10×1	黄油嘴	GREASE ITTING	2		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

G001


液压系统（主进油） HYDRAULIC SYSTEM (MAIN OIL INLET)

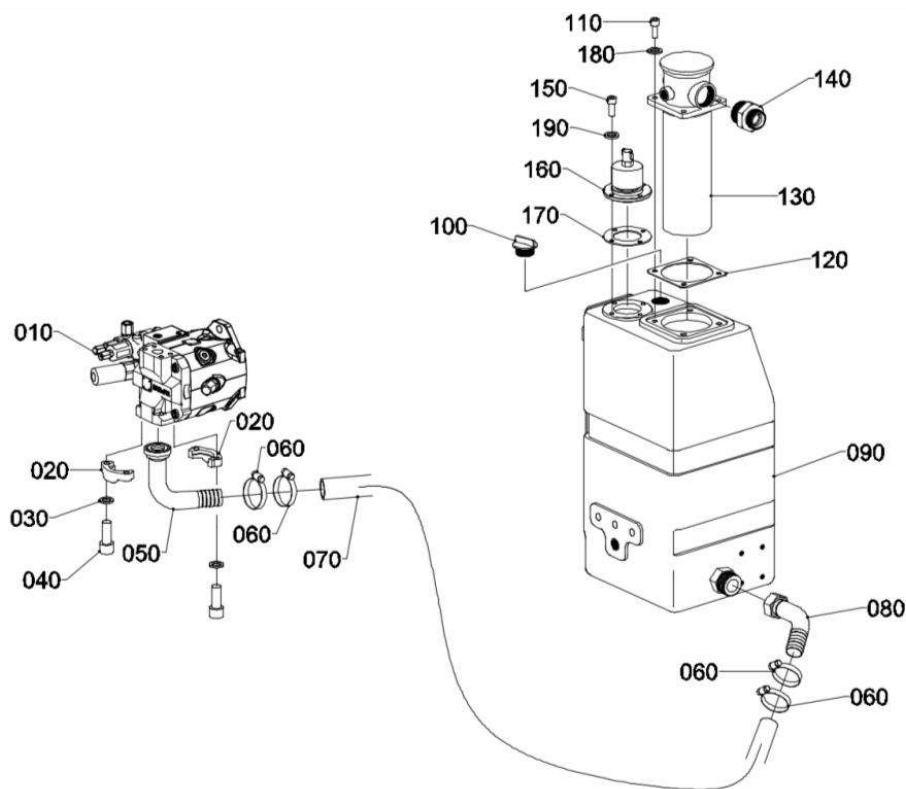

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP0101020017		柱塞泵	PLUNGER PUMP	1		
020	LP0115021425		法兰夹	FLANGE	2		
030	LP0116011720	M10	弹垫	GASKET	4		
040	LP0116011179	M10*30	螺栓	BOLT	4		
050	LP0115021776		管接头	PIPE JOINT	1		
060	LP0111080143		卡簧	CIRCLIP	4		
070	LP0115021777	32*1*950	油管	OIL PIPE	1		
080	LP0115021777		管接头	PIPE JOINT	1		
090	LP0115040092		液压油箱	HYDRAULIC OIL TANK	1		
100	LP0111080216		油箱盖	TANK COVER	1		
110	LP0116011860	M8*20	螺栓	BOLT	8		
120	LP0111080228		石棉垫	ASBESTOS GASKET	1		
130	LP0116020012		回油滤芯	FILTER ELEMENT	1		
140	LP0115021554		对丝	COUPLING NUT	1		
150	LP0116011801	M6*16	螺栓	BOLT	1		
160	LP0115030035		呼吸阀	BREATHER VALVE	1		
170	LP0111080411		石棉垫	ASBESTOS GASKET	1		
180	LP0116011724	M8	弹垫	GASKET	4		
190	LP0116011723	M6	弹垫	GASKET	4		

G002 液压系统 (输出)


HYDRAULIC SYSTEM (DELIVERY)

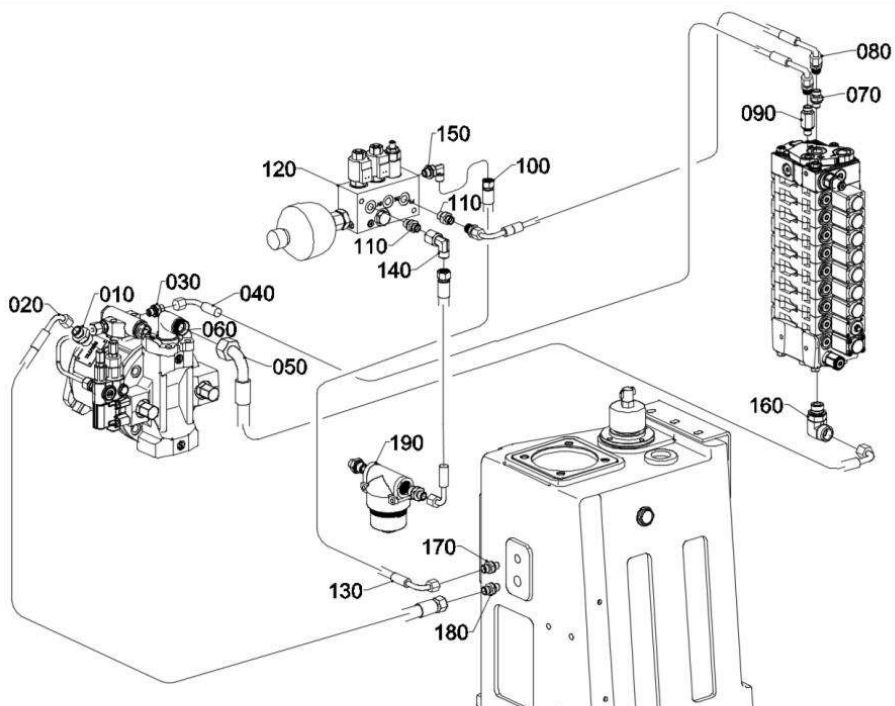

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.No.	互换性 I.C.	备注 REMARKS
010	LP0115020331	22ED*18H	对丝	JOINT, PIPE	1		
020	LP0115021684	10*2*400	油管	OIL PIPE	1		Z-W90 · 18H-0
030	LP0115020374	14ED*14H	对丝	JOINT, PIPE	1		
040	LP0115021607	6*2*970	油管	OIL PIPE	1		W90-W90 · 14H-F
050	LP0115021685	19*2*950XL	油管	OIL PIPE	1		W90-W90 · 26H-T
060	LP0111080330		出油法兰	OIL OUTLET FLANGE	1		
070	LP0115020853	1/2ED*14H	对丝	JOINT, PIPE	1		
080	LP0115021686	6*2*530	油管	OIL PIPE	1		W90-W90 · 14H-Y
090	LP0115020837	1/4ED*14H	对丝	JOINT, PIPE	1		
100	LP0115021687	6*1*390	油管	OIL PIPE	1		W90-W90 · 14H-T
110	LP0115020371	1/4ED*14H	对丝	JOINT, PIPE	2		
120	LP0115030017		油源阀	OIL SOURCE VALVE	1		
130	LP0115021688	6*1*280	油管	OIL PIPE	1		Z-W90 · 14H-0
140	LP0115020844	14H	直角活螺母	RIGHT-ANGLE NUT	1		
150	LP0115020840	1/4*14H-90°	对丝	JOINT, PIPE	1		
160	LP0115021557	1/2*26H-90°	对丝	JOINT, PIPE	1		
170	LP0115020374	14ED*14H	对丝	JOINT, PIPE	1		
180	LP0115020325	18ED*18H	对丝	JOINT, PIPE	1		
190	LP0115030049		先导过滤	PILOT FILTER	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

G003 液压系统 (回流) HYDRAULIC SYSTEM (DELIVERY)

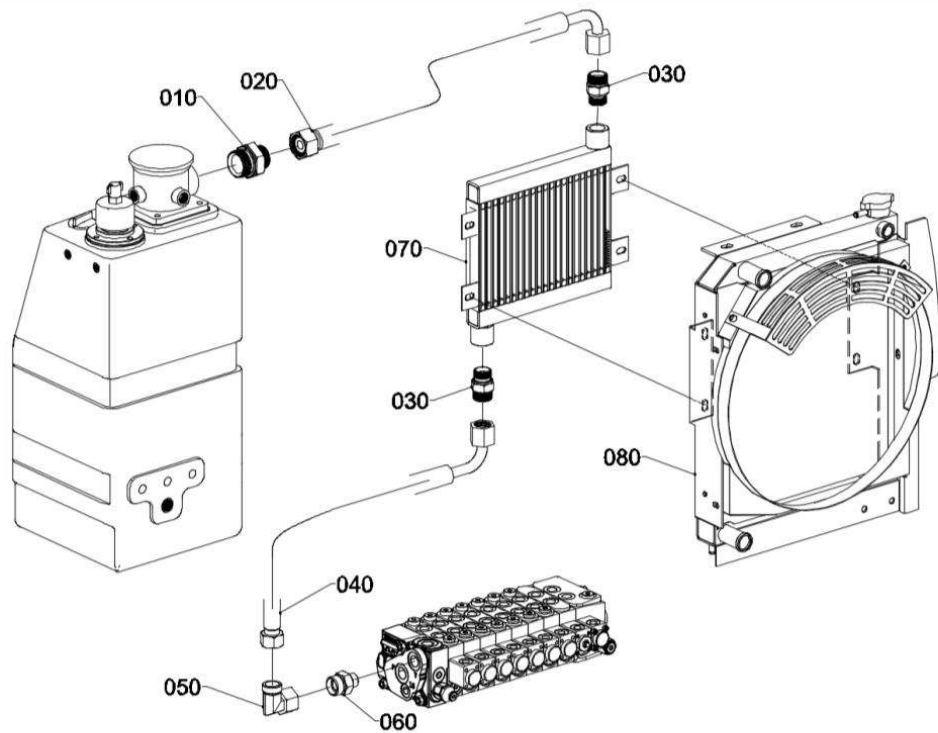


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
010	LP0115021554	42ED*36H*2	对丝	JOINT, PIPE	1		
020	LP0115021796	19*2*300	油管	OIL PIPE	1		W90 · 30H-Z · 36H-0
030	LP0115020389	27ED*30H-H	对丝	JOINT, PIPE	2		
040	LP0115021797	19*2*1950	油管	OIL PIPE	1		Z-W90 · 30H-0
050	LP0115020905	30H-H	对丝	JOINT, PIPE	1		
060	LP0115021539	1/2*ED*30H-H	对丝	JOINT, PIPE	1		
070	LP0110020095-001		油散	OIL RADIATOR	1		
080	LP0110020095-002		水散	WATER COOLER	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

G004 液压系统 (动臂)


HYDRAULIC SYSTEM (BOOM)

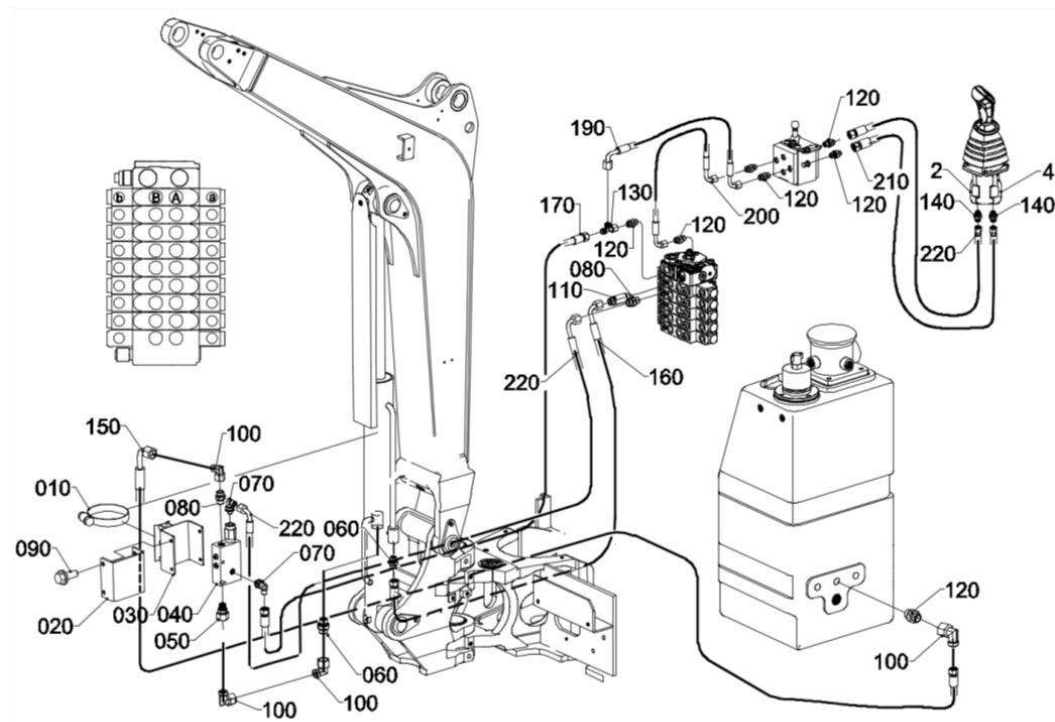

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I. C.	备注 REMARKS
010	LP0116012822		卡箍	CLAMP	1		
020	LP0112014665		盖板	COVER PLATE	1		
030	LP0112014664		支座	SUPPORT	1		
040	LP0115030078		防爆阀	EXPLOSION-PROOF VLV	1		
050	LP0115020917	3/8ED*18	对丝	JOINT, PIPE	1		
060	LP0115020730	16ED*18H	对丝	JOINT, PIPE	2		
070	LP0115020840	1/4ED*14H 90°	对丝	JOINT, PIPE	2		
080	LP0115020218	3/8ED*14H	对丝	JOINT, PIPE	1		
090	LP0116011735	M8*10	法兰螺栓	BOLT	4		
100	LP0115020730	14H	直角活螺母	RIGHT-ANGLE NUT	3		
110	LP0115021544	3/8ED*18H	对丝	JOINT, PIPE	1		
120	LP0115020371	1/4ED*14H	对丝	JOINT, PIPE	6		
130	LP0115021105	14H	边母三通	SIDE FEMALE TEE	1		
140	LP0115021484	1/4*14H	对丝	JOINT, PIPE	2		
150	LP0115021804	6*1*1700	油管	OIL PIPE	1		Z-W90 · 14H-0
160	LP0115021803	10*2*1450	油管	OIL PIPE	1		Z-W90 · 18H-0
170	LP0115021808	6*1*1450	油管	OIL PIPE	1		Z-Z · 14H-T
180	LP0115021805	6*1*1900	油管	OIL PIPE	1		Z-Z · 14H-0
190	LP0115021806	6*1*1260	油管	OIL PIPE	1		W90-W90 · 14H-T
200	LP0115021807	6*1*610	油管	OIL PIPE	1		W90-W90 · 14H-Y
210	LP0115021805	10*2*1900	油管	OIL PIPE	1		Z-Z · 14H-0
220	LP0115021802	10*2*1700	油管	OIL PIPE	1		W90-W90 · 18H-T


↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧换新

G005

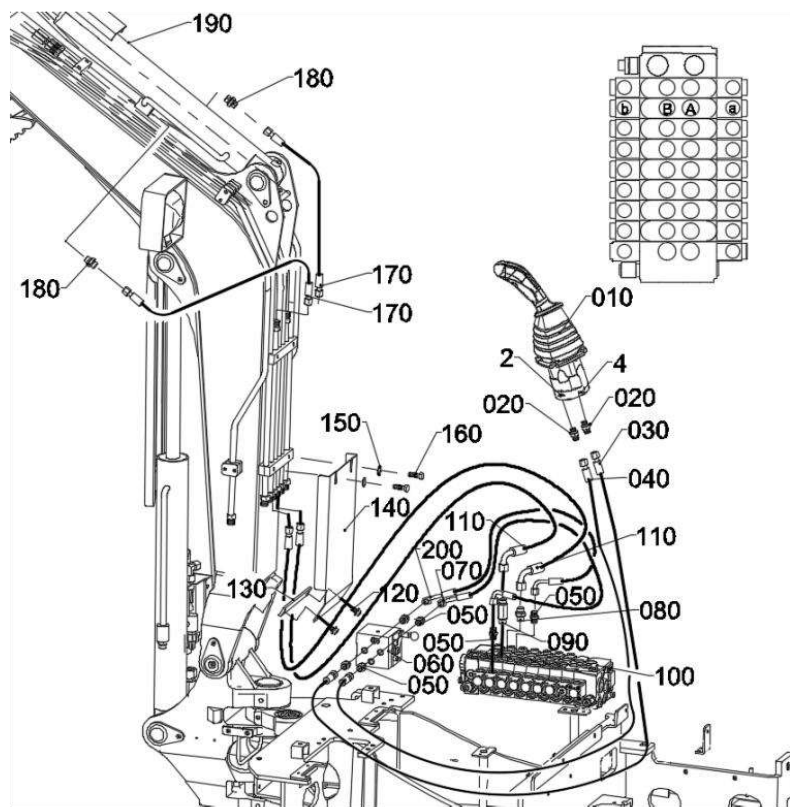 液压系统 (斗杆)
 HYDRAULIC SYSTEM (ARM)


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115030080		左手柄	LEFT HANDLE	1		
020	LP0115021484	1/4*14H	对丝	JOINT PIPE	2		
030	LP0115021693	6*1*1550	油管	OIL PIPE	1		Z-Z · 14H-0
040	LP0115021861	6*1*1520	油管	OIL PIPE	1		Z-Z · 14H-0
050	LP0115020331	1/4ED*14H	对丝	JOINT PIPE	6		
060	LP0115021746	6*1*770	正反手切换阀	F-R SWITCHING VALVE	1		
070	LP0115021806	6*1*1260	油管	OIL PIPE	2		W90-W90 · 14H-T
080	LP0115020230	3/8ED*18H	对丝	JOINT PIPE	1		
090	LP0115021544	3/8ED*18H	对丝	JOINT PIPE	6		HIGH
100	LP0101030066		多路阀	MULTI-WAY VALVE	1		
110	LP0115021862	10*2*1750	油管	OIL PIPE	2		Z-W90 · 18H-0
120	LP0116011662	M8*25	螺栓	BOLT	2		
130	LP0112013861		压板	PRESSURE PLATE	1		
140	LP0112014791		盖板	COVER PLATE	1		
150	LP0116011724	M8	平垫	FLAT WASHER	2		
160	LP0116011662	M8*25	螺栓	BOLT	2		
170	LP0115021863	10*2*690	油管	OIL PIPE	2		Z-Z · 18H-0
180	LP0115020730	16ED*18H	对丝	JOINT PIPE	2		
190	LP0115010146		油缸	HYDRAULIC CYLINDER	1		


G010

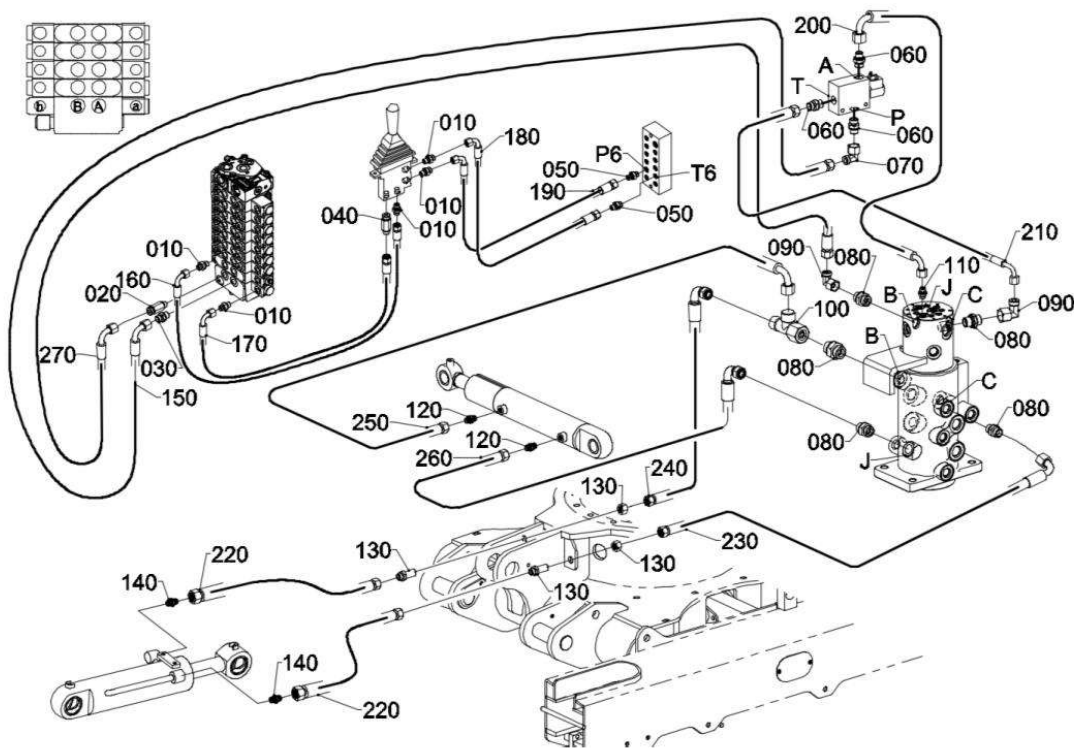 阀体部件(推土)
 SPOOL SECTION (BLADE)


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020371	G1/4ED*14H	对丝	JOINT, PIPE	5		
020	LP0115020846	G3/8ED*18H	对丝	JOINT, PIPE	1		HIGH
030	LP0115020230	G3/8ED*18H	对丝	JOINT, PIPE	1		
040	LP0115021413	G3/8ED*16H	对丝	JOINT, PIPE	1		HIGH
050	LP0115021484	1/4*14H	对丝	JOINT, PIPE	2		
060	LP0115020377	1/4ED*16H	对丝	JOINT, PIPE	3		
070	LP0115021471	16H	直角活螺母	RIGHT-ANGLE NUT	1		
080	LP0115021486	1/4*16H	对丝	JOINT, PIPE	5		
090	LP0115020221	16H	直角活螺母	RIGHT-ANGLE NUT	2		
100	LP0116031373	16H	边母三通	SIDE FEMALE TEE	1		
110	LP0115021911	1/8*16H	对丝	JOINT, PIPE	1		
120	LP0116031808	14ED*16H	对丝	JOINT, PIPE	2		
130	LP0115021471	16H	加长隔壁	EXTENDED NIPPLE	2		
140	LP0115020734	16ED*16H	对丝	JOINT, PIPE	2		
150	LP0115021912	8*2*1100	油管	OIL PIPE	1		Z-W90 · 16H-0
160	LP0115021913	6*1*1330	油管	OIL PIPE	1		W90-W90 · 14H-T
170	LP0115021914	6*1*1030	油管	OIL PIPE	1		W90-W90 · 14H-T
180	LP0116030672	6*1*950	油管	OIL PIPE	1		Z-W90 · 14H-0
190	LP0115021915	6*1*980	油管	OIL PIPE	1		Z-W90 · 14H-0
200	LP0115021916	8*2*600	油管	OIL PIPE	1		W90-W90 · 16H-Y
210	LP0115021917	8*2*300	油管	OIL PIPE	1		Z-W45 · 16H-0
220	LP0115021918	8*2*500	油管	OIL PIPE	1		Z-Z · 16H-0
230	LP0115021919	8*2*350	油管	OIL PIPE	1		Z-W90 · 16H-0
240	LP0115021919	8*2*350	油管	OIL PIPE	1		Z-W90 · 16H-0
250	LP0115021920	8*2*370	油管	OIL PIPE	1		Z-W90 · 16H-0
260	LP0115021921	8*2*530	油管	OIL PIPE	1		W90-W90 · 16H-Y
270	LP0115021847	8*2*570	油管	OIL PIPE	1		Z-W90 · 16H-0

⇄ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

G011 阀体部件(破碎) SPOOL SECTION (CRUSHING)

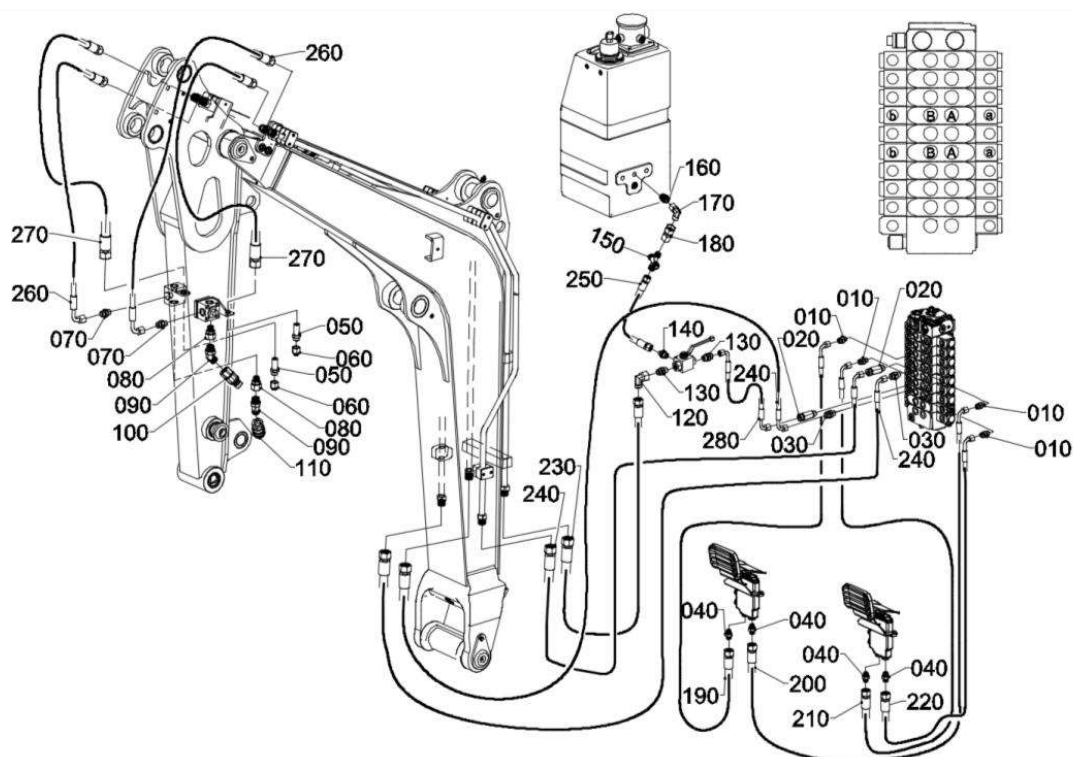


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115020371	G1/4ED*14H	对丝	JOINT, PIPE	4		
020	LP0115020846	G3/8ED*18H-H	对丝	JOINT, PIPE	1		
030	LP0115020230	G3/8ED*18H	对丝	JOINT, PIPE	3		
040	LP0115021484	1/4*14H	对丝	JOINT, PIPE	4		
050	LP0115021155	18H	隔壁对丝	JOINT, PIPE	2		
060	LP0115020231	18H	母堵	FEMALE PLUG	2		
070	LP0115020230	3/8ED*18H	对丝	JOINT, PIPE	2		
080	LP0115020391	3/8ED*22H	对丝	JOINT, PIPE	2		
090	LP0115021421	1/2*22H(45°)	对丝	JOINT, PIPE	2		
100	LP0115021271	1/2	快速接头(公)	JOINT, PIPE	1		
110	LP0115021727	1/2	快速接头(母)	JOINT, PIPE	1		
120	LP0115020844	14H	直角活螺母	RIGHT-ANGLE NUT	1		
130	LP0115020218	3/8ED*14H	对丝	JOINT, PIPE	2		
140	LP0115020230	3/8ED*18H	对丝	JOINT, PIPE	1		
150	LP0115021929	14H	四通	4-WAY JOINT	1		
160	LP0115020371	14ED*14H	对丝	JOINT, PIPE	1		
170	LP0115020844	14H	直角活螺母	RIGHT-ANGLE NUT	1		
180	LP0115021128	14H	双头串母	DBL-END FEM CONN	1		
190	LP0115021837	6*1*1300	油管	OIL PIPE	1		Z-W90 · 14H-0
200	LP0115020919	6*1*850	油管	OIL PIPE	1		Z-W90 · 14H-0
210	LP0116030672	6*1*950	油管	OIL PIPE	1		Z-W90 · 14H-0
220	LP0115021930	6*1*830	油管	OIL PIPE	1		Z-W90 · 14H-0
230	LP0115021660	10*2*1950	油管	OIL PIPE	1		Z-W90 · 18H-0
240	LP0115021931	10*2*1710	油管	OIL PIPE	3		Z-W90 · 18H-0
250	LP0115021932	6*1*1000	油管	OIL PIPE	1		Z-Z · 14H-0
260	LP0115021682	10*2*750	油管	OIL PIPE	2		Z-W90 · 18H-0
270	LP0115021659	10*2*750	油管	OIL PIPE	2		Z-Z · 18H-0
280	LP0115020666	10*2*1000	油管	OIL PIPE	1		Z-W90 · 18H-0

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

J001

先导手柄（左手柄）


CONTROL LEVER (LEVER LH)

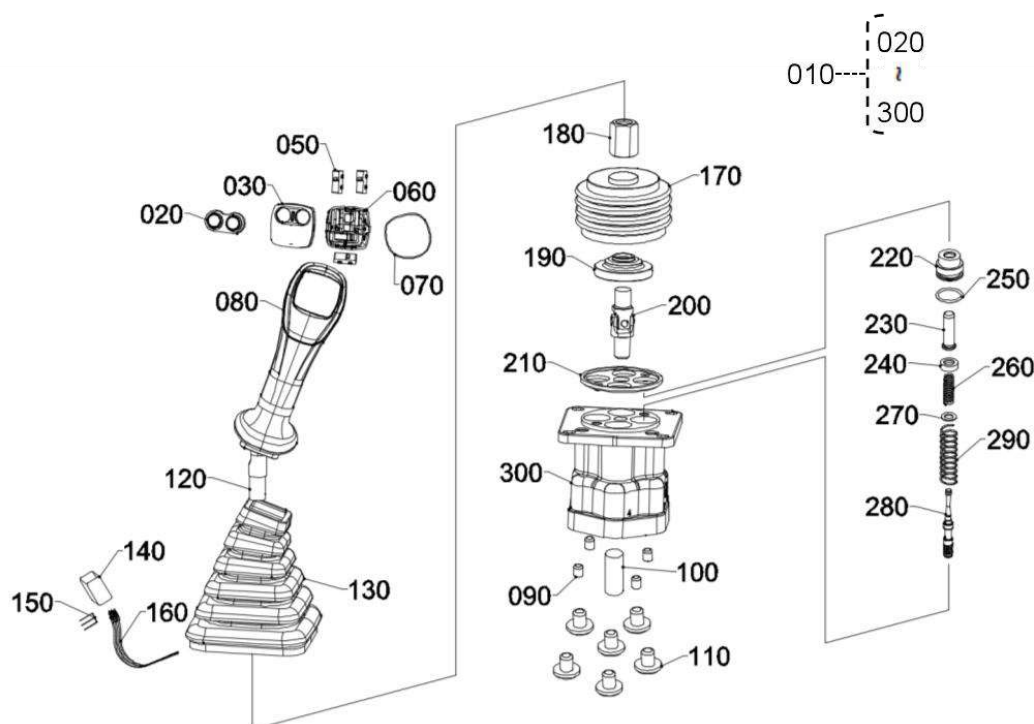

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115030080		先导左手柄	PILOT LEFT HANDLE	1		
020	LP1015030080-001		大按键	LARGE BUTTON	1		
030	LP1015030080-002		固定板	FIXING PLATE	1		
040	----		空白	BLANK			
050	LP1015030080-003		开关	SWITCH	3		
060	LP1015030080-004		开关支架	SWITCH BRACKET	1		
070	LP1015030080-005		密封圈	SEALING RING	1		
080	LP1015030080-006		手柄	HANDLE	1		
090	LP1015030080-007		堵头	PLUG	4		
100	LP1015030080-008		衬套	BUSHING	1		
110	LP1015030080-009		防尘塞	DUST-PROOF PLUG	4		
120	LP1015030080-010		弯杆	BENT ROD	1		
130	LP1015030080-011		大护套	PROTECTIVE SLEEVE	1		
140	LP1015030080-012		端子插头	TERMINAL PLUG	1		
150	LP1015030080-013		卡扣	BUCKLE	1		
160	LP1015030080-014		线束	WIRE HARNESS	1		
170	LP1015030080-015		防尘套	DUST-PROOF SLEEVE	1		
180	LP1015030080-016		连接螺母	CONNECTING NUT	1		
190	LP1015030080-017		斜盘	SWASH PLATE	1		
200	LP1015030080-018		万向节	UNIVERSAL JOINT	1		
210	LP1015030080-019		压盘	PRESSURE PLATE	1		
220	LP1015030080-020		铜套	COPPER SLEEVE	4		
230	LP1015030080-021		柱塞	PLUNGER	4		
240	LP1015030080-022		油封	OIL SEAL	4		
250	LP1015030080-023		密封圈	SEALING RING	4		
260	LP1015030080-024		弹簧	SPRING	4		
270	LP1015030080-025		垫片	GASKET	4		
280	LP1015030080-026		阀芯	VALVE CORE	4		
290	LP1015030080-027		弹簧	SPRING	4		
300	LP1015030080-028		阀体	VALVE BODY	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧


J002 先导手柄（右手柄） CONTROL LEVER (LEVER RH)

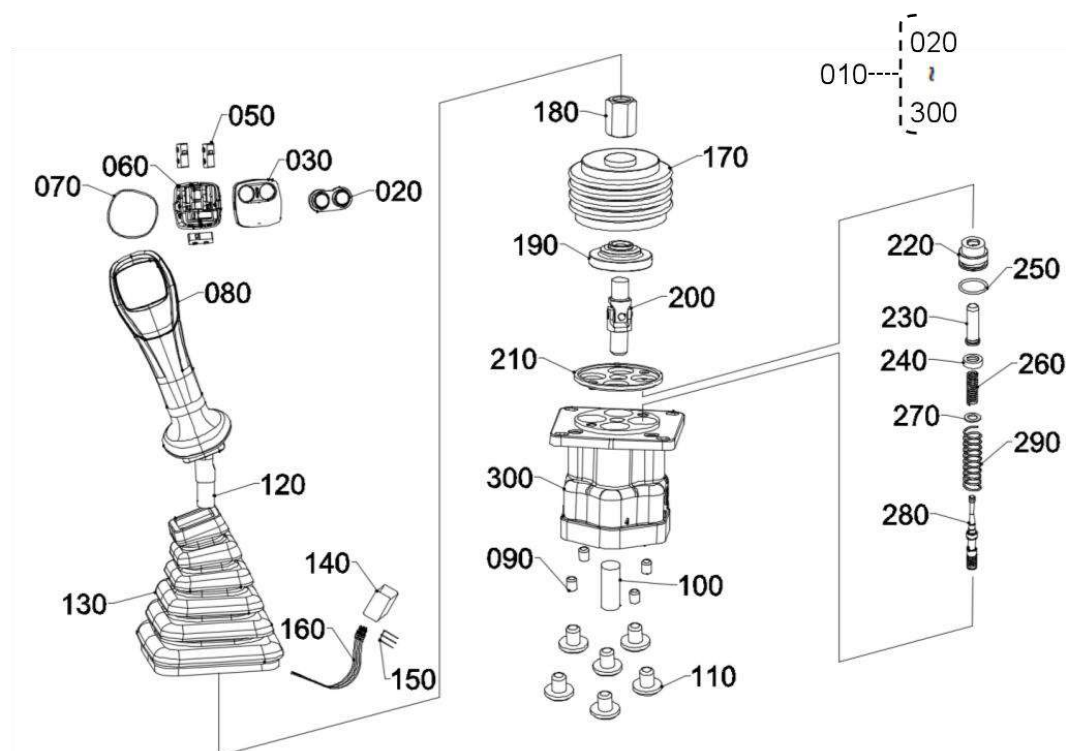

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
010	LP0115030079		先导右手柄	PILOT LEFT HANDLE	1		
020	LP1015030080-001		大按键	LARGE BUTTON	1		
030	LP1015030080-002		固定板	FIXING PLATE	1		
040	----		空白	BLANK			
050	LP1015030080-003		开关	SWITCH	3		
060	LP1015030080-004		开关支架	SWITCH BRACKET	1		
070	LP1015030080-005		密封圈	SEALING RING	1		
080	LP1015030079-001		手柄	HANDLE	1		
090	LP1015030080-007		堵头	PLUG	4		
100	LP1015030080-008		衬套	BUSHING	1		
110	LP1015030080-009		防尘塞	DUST-PROOF PLUG	4		
120	LP1015030079-002		弯杆	BENT ROD	1		
130	LP1015030079-003		大护套	PROTECTIVE SLEEVE	1		
140	LP1015030080-012		端子插头	TERMINAL PLUG	1		
150	LP1015030080-013		卡扣	BUCKLE	1		
160	LP1015030080-014		线束	WIRE HARNESS	1		
170	LP1015030080-015		防尘套	DUST-PROOF SLEEVE	1		
180	LP1015030080-016		连接螺母	CONNECTING NUT	1		
190	LP1015030080-017		斜盘	SWASH PLATE	1		
200	LP1015030080-018		万向节	UNIVERSAL JOINT	1		
210	LP1015030080-019		压盘	PRESSURE PLATE	1		
220	LP1015030080-020		铜套	COPPER SLEEVE	4		
230	LP1015030080-021		柱塞	PLUNGER	4		
240	LP1015030080-022		油封	OIL SEAL	4		
250	LP1015030080-023		密封圈	SEALING RING	4		
260	LP1015030080-024		弹簧	SPRING	4		
270	LP1015030080-025		垫片	GASKET	4		
280	LP1015030080-026		阀芯	VALVE CORE	4		
290	LP1015030080-027		弹簧	SPRING	4		
300	LP1015030080-028		阀体	VALVE BODY	1		

↔ 可互换；≠ 不可互换；← 以新换旧；→ 以旧


K013 柱塞泵和零件 PLUGER PUMP AND PARTS

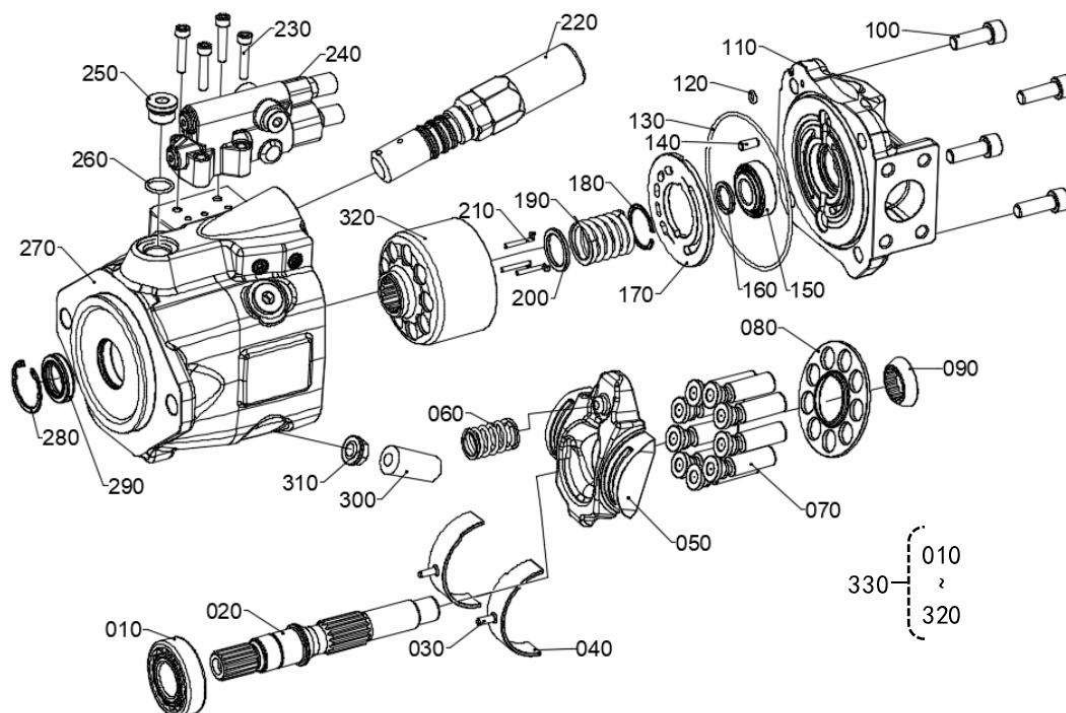

序号 REF.No	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. G.	备注 REMARKS
010	LP1001020017-001	4T-1780	圆锥滚子轴承	TAPERED R BEARING	1		
020	LP1001020017-002		传动轴	TRANSMISSION SHAFT	1		
030	LP1001020017-003	M5*16	螺栓	BOLT	2		
040	LP1001020017-004		轴瓦	BEARING SHELL	2		
050	LP1001020017-005		斜盘组件	SWASH PLATE	1		
060	LP1001020017-006	2.6*19.9*45.6*7	弹簧	SPRING ASSEMBLY	1		
070	LP1001020017-007		柱塞部件	PLUNGER COMPONENT	9		
080	LP1001020017-008		回程盘	RETURN DISC	1		
090	LP1001020017-009		球铰	BALL JOINT	1		
100	LP1001020017-010	M10*30	螺栓	BOLT	4		
110	LP1001020017-011		后盖	REAR COVER	1		
120	LP1001020017-012	5.8*1.9	O型圈	O-RING	1		
130	LP1001020017-013	112*2.5	O型圈	O-RING	1		
140	LP1001020017-014	6*14	销	PIN	1		
150	LP1001020017-015	4T-LM11749	圆锥滚子轴承	TAPERED R BEARING	1		
160	LP1001020017-016	S28	调整垫片	ADJUSTING SHIM	1		
170	LP1001020017-017		配油盘	VALVE PLATE	1		
180	LP1001020017-018		V型孔用挡圈	V-TYPE HOLE CIRCLIP	1		
190	LP1001020017-019	3.8*28.2*59.5*7	弹簧	SPRING	1		
200	LP1001020017-020	24*31.4*2.5	支承垫圈	SUPPORT WASHER	1		
210	LP1001020017-021		支承销	SUPPORT PIN	3		
220	LP1001020017-022		功率阀组件	POWER VALVE ASSEMBLY	1		
230	LP1001020017-023	M6*30	螺栓	BOLT	4		
240	LP1001020017-024		压力流量阀组件	PRESSURE FLOW VALVE	1		
250	LP1001020017-025	3/4-16UNF-2A	堵头	PLUG	2		
260	LP1001020017-026	16.36*2.21	O型圈	O-RING	2		
270	LP1001020017-027		壳体	HOUSING	1		
280	LP1001020017-028	DIN984-36*1.5	孔用挡圈	HOLE RETAINING RING	1		
290	LP1001020017-029	25*35*6	油封	OIL SEAL	1		
300	LP1001020017-030	M10*1	调节螺栓	ADJUSTING BOLT	1		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新


K014 回转马达 ROTARY MOTOR

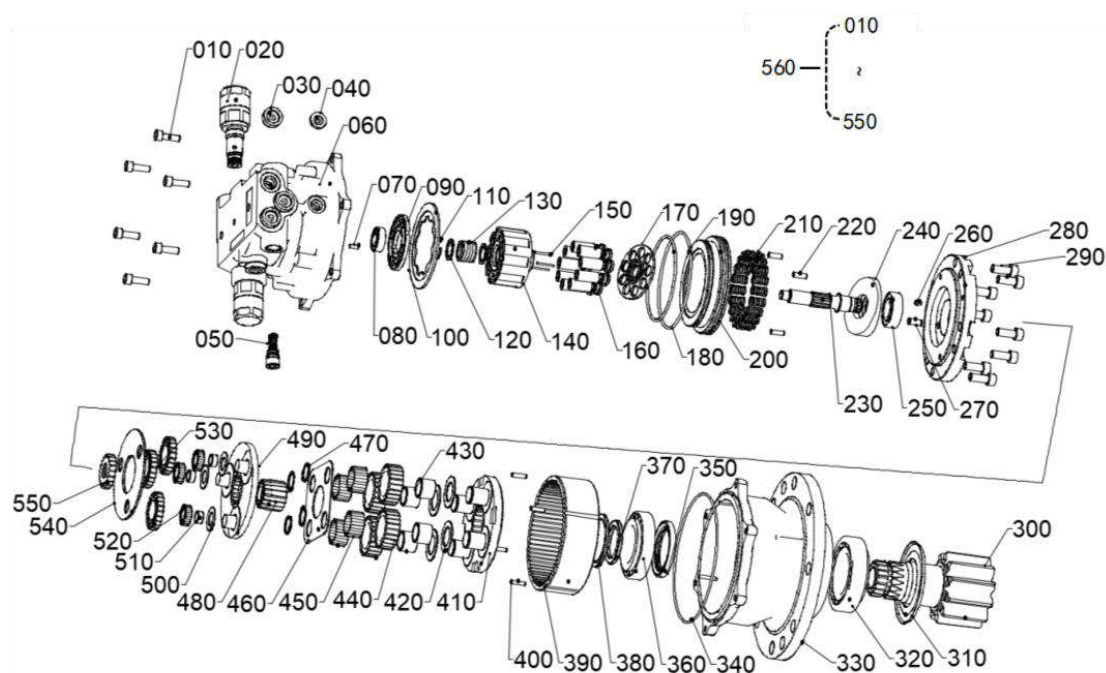

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0116011860	FCA08025-8	螺栓	BOLT	6		
020	LP1002030009-001	22024B-011100-1	溢流阀组合件	OVERFLOW VALVE	2		
030	LP1002030009-002	HKC083-3	内六角黄色螺纹堵	THREADED PLUG	4		
040	LP1002030009-003	HKC041-3	内六角黄色螺纹堵	THREADED PLUG	1		
050	LP1002030009-004	22034-011300	单向阀组合件	CHECK VALVE	1		
060	LP1002030009-005	22024-011001	阀体	VALVE BODY	1		
070	LP1002030009-006	FHB050012-1	圆柱销	CYLINDRICAL PIN	1		
080	LP1002030009-007	EA6201-3	深沟球轴承	BEARING	1		
090	LP1002030009-008	10104-010003	配油盘	OIL PAN	1		
100	LP1002030009-009	22024-010005	制动片-胶片	PRAKE PAD	1		
110	LP1002030009-010	FGB028-1	孔用弹性挡圈	RETAINING RING	1		
120	LP1002030009-011	10104-012005	垫圈	WASHER	2		
130	LP1002030009-012	10104-012003	弹簧	SPRIGN	1		
140	LP1002030009-013	22010-012001A	油缸	HYDRAULIC CYLINDER	1		
150	LP1002030009-014	10103-012007	顶针	THIMBLE	3		
160	LP1002030009-015	10103-012100	柱塞部件	PLUNGER	9		
170	LP1002030009-016	10104-012200A	卡盘组合件	CHUCK	1		
180	LP1002030009-017	HDA10940-2	O型密封圈	O-RING SDAL	1		
190	LP1002030009-018	HDA12440-1	O型密封圈	O-RING SDAL	1		
200	LP1002030009-019	22016-014001	制动环	BRAKE RING	1		
210	LP1002030009-020	22024-014101	制动弹簧	BRAKING SPRING	20		
220	LP1002030009-021	FHB060018-1	圆柱销	CYLINDRICAL PIN	3		
230	LP1002030009-022	22024-010002A	主轴	MAIN SHAFT	1		
240	LP1002030009-023	22024B-013001	斜盘	SWASH PLATE	1		
250	LP1002030009-024	EA6204-3	深沟球轴承	BEARING	1		
260	LP1002030009-025	22016-010010	碗状滤网	FILTER SCREEN	1		
270	LP1002030009-026	FHB080018-1	圆柱销	CYLINDRICAL PIN	1		
280	LP1002030009-027	22024-010009	斜盘座	SWASH PLATE SEAT	1		
290	LP1002030009-028	FCA10025-8	紧固螺钉	SCREW	8		
300	LP1002030009-029	22024B-023001	立轴	VERTICAL SHAFT	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


K014 回转马达 ROTARY MOTOR

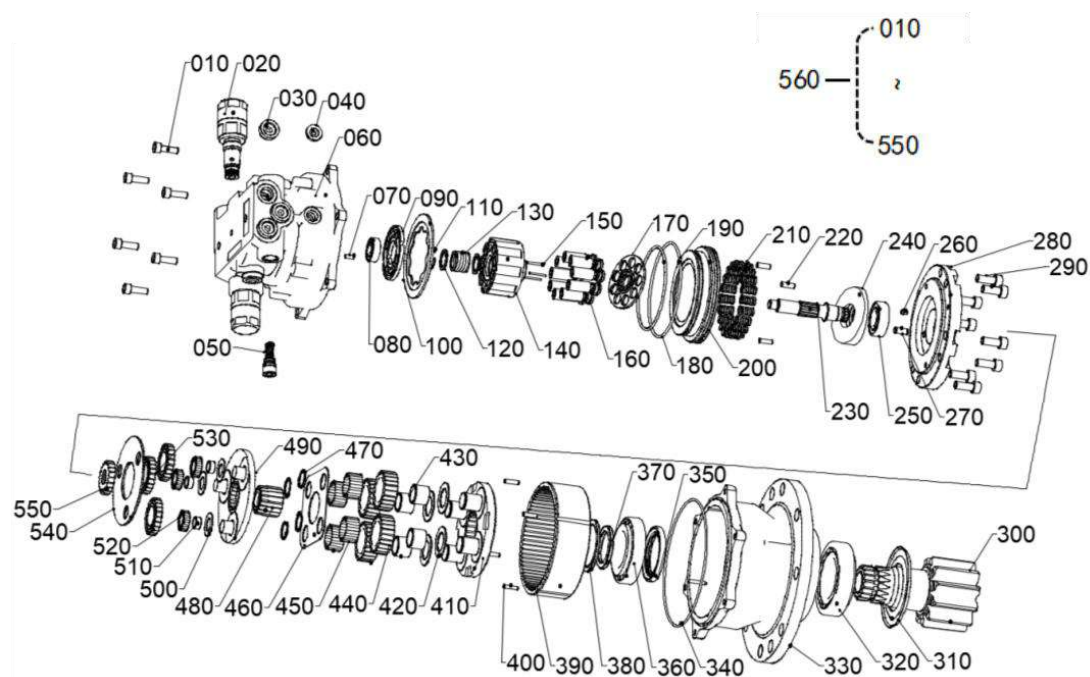

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互 换 性 I. C.	备注 REMARKS
310	LP1002030009-030	22024-023002	油封盘	OIL SEAL DISC	1		
320	LP1002030009-031	EI32211-1	圆锥滚子轴承	BEARING	1		
330	LP1002030009-032	22024-020001	回转架	SWING FRAME	1		
340	LP1002030009-033	HDA17000-5	O型密封圈	O-RING SEAL	1		
350	LP1002030009-034	HDE055-7	骨架油封	SKELETON OIL SEAL	1		
360	LP1002030009-035	EI30210-1	圆锥滚子轴承	BEARING	1		
370	LP1002030009-036	22024-023003	调整垫片	ADJUSTING GASKET	2		
380	LP1002030009-037	22024-023004	限位环	LIMITING RING	1		
390	LP1002030009-038	22024-020002	齿圈	RING GEAR	1		
400	LP1002030009-039	FHB050020-1	圆柱销	CYLINDRICAL PIN	4		
410	LP1002030009-040	22024-022003	四星架	FOUR-STAR CARRIER	1		
420	LP1002030009-041	22024-022004	二级下垫片	GASKET Two	4		
430	LP1002030009-042	22024-022006	二级轴承套	BEARING SLEEVE Two	4		
440	LP1002030009-043	22024-022002	二级行星轮	PLANETARY GEAR Two	4		
450	LP1002030009-044	EZ408-1	平头液针	LIQUID NEEDLE	92		
460	LP1002030009-045	22024-022005	二级压片	TABLET Two	1		
470	LP1002030009-046	FGA022-2	轴用弹性挡圈	RETAINING RING	4		
480	LP1002030009-047	22024-022001	二级太阳轮	SOLAR WHEEL Two	1		
490	LP1002030009-048	22024-021003	三星架	TRIPOD	1		
500	LP1002030009-049	22024-021004	一级下垫片	GASKET ONE	3		
510	LP1002030009-050	22024-021006	一级轴承套	BEARING SLEEVE ONE	3		
520	LP1002030009-051	EZ314-1	平头液针	LIQUID NEEDLE	72		
530	LP1002030009-052	22024-021002	一级行星轮	PLANETARY GEAR ONE	3		
540	LP1002030009-053	22024-021005	一级压片	TABLET ONE	1		
550	LP1002030009-054	22024-021001	一级太阳轮	SOLAR WHEEL ONE	1		
560	LP0102030009		回转马达	SWING MOTOR	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新


K015 行走马达 TRAVELING MOTOR

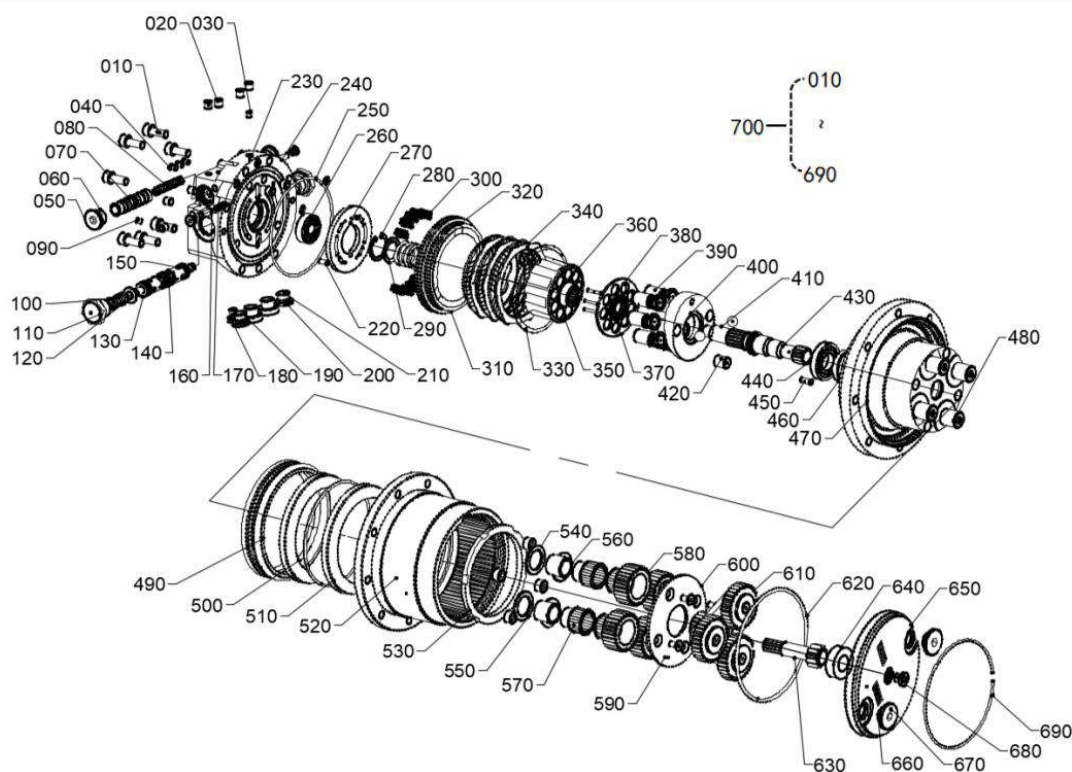

序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP1002020018-001	PCB0820-2	螺钉	SCREW	7		
020	LP1002020018-002	FKB161-3	螺塞	PLUG	9		
030	LP1002020018-003	10102-011003	节流油嘴	THROTTLING NOZZLE	2		
040	LP1002020018-004	10102-011004	双头螺堵	DOUBLE-ENDED	1.5		
050	LP1002020018-005	10104-011066	螺堵	PLUG	2		
060	LP1002020018-006	HDA01380-1	O型密封圈	O-RING	4		
070	LP1002020018-007	10102-011002	液压阀芯	HYDRAULIC VALVE CORE	1		
080	LP1002020018-008	10104-011004	弹簧	SPRING	1		
090	LP1002020018-009	FKG0604	节流油咀	THROTTLING NOZZLE	2		
100	LP1002020018-010	101002-011201	换向阀座	Valve seat	2		
110	LP1002020018-011	HDA01712-1	O型密封圈	O-RING	1		
120	LP1002020018-012	10102-011202	弹簧	SPRING	2		
130	LP1002020018-013	10102-011105	垫圈	WASHE	2		
140	LP1002020018-014	10102-011003	梭阀组合件	SHUTTLE VALVE	1		
150	LP1002020018-015	FKE165-1	外螺纹内六角螺堵	PLUG	2		
160	LP1002020018-016	10102-011005	限位销	LIMIT PIN	2		
170	LP1002020018-017	10104-011003	变量液控阀	HYDRAULIC VALVE	1		
180	LP1002020018-018	HKC081-2	内六角头螺纹堵	PLUG	1		
190	LP1002020018-019	HKC083-3	内六角头螺纹堵	PLUG	2		
200	LP1002020018-020	10112-011003	螺堵	PLUG	2		
210	LP1002020018-021	HDA01080-2	O型密封圈	O-RING	2		
220	LP1002020018-022	FHB050012-1	圆柱销	CYLINDRICAL PIN	1		
230	LP1002020018-023	10102C-011001	阀体	VALVE BODY	1		
240	LP1002020018-024	FKB081-1	螺塞	PLUG	2		
250	LP1002020018-025	HDA10600-1	O型密封圈	O-RING	1		
260	LP1002020018-026	HDA00530-1	O型密封圈	O-RING	2		
270	LP1002020018-027	BA6201-1	深沟球轴承	BEARING	1		
280	LP1002020018-028	10104-010003	配油盘	OIL PAN	1		
290	LP1002020018-029	FGB028-1	孔用弹性挡圈	RETAINING RING	1		
300	LP1002020018-030	10104-012005	垫圈	WASHE	2		

↔ 可互换 : ↗ 不可互换 : ↖ 以新换旧 : → 以旧换新

K015 行走马达 TRAVELING MOTOR

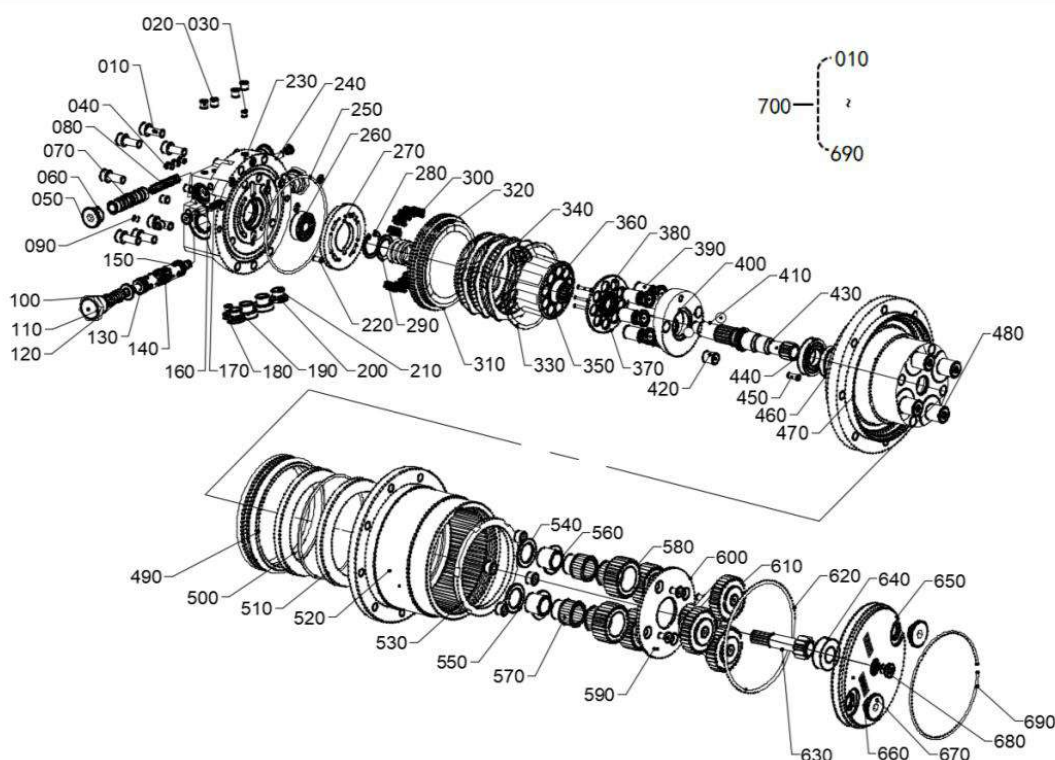


序号 REF.No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. N o.	互 换 性 I. C.	备注 REMARKS
310	LP1002020018-031	10103B-010004	弹簧	SPRING	10		
320	LP1002020018-032	10104-012003	弹簧	SPRING	1		
330	LP1002020018-033	10103B-014000	制动环组件	BRAKE RING	1		
340	LP1002020018-034	10102F-010005	制动片 (胶片)	BRAKE PAD	3		
350	LP1002020018-035	10103B-010006	制动片 (钢片)	BRAKE PAD	3		
360	LP1002020018-036	10103CD-010007	隔圈	CIRCLE	1		
370	LP1002020018-037	10104-012001	油缸	HYDRAULIC CYLINDER	1		
380	LP1002020018-038	10108-012007	顶针	THIMBLE	3		
390	LP1002020018-039	10104-012200	卡盘组合件	CHUCK	1		
400	LP1002020018-040	10103-012100	柱塞部件	PLUNGER COMPONTONG	9		
410	LP1002020018-041	10103-013001	斜盘	INCLINED DISK	1		
420	LP1002020018-042	EU0805-1	钢球	STEEL BALL	2		
430	LP1002020018-043	10103-015001	变量活塞	VARIABLE PISTON	1		
440	LP1002020018-044	10103-010002	主轴	SPINDLE	1		
450	LP1002020018-045	BA6004-1	深沟球轴承	BEARING	1		
460	LP1002020018-046	FHB060014-1	圆柱销	CYLINDRICAL PIN	2		
470	LP1002020018-047	HDE020-1	骨架油封	OIL SEAL	1		
480	LP1002020018-048	10103CC-010001	壳体	SHELL	1		
490	LP1002020018-049	10103-020004	浮动油封1240	OIL SEAL 1240	1		
500	LP1002020018-050	EF110-1	角接触轴承	OIL BEARING	2		
510	LP1002020018-051	FCB140-1	孔用弹性挡圈	RETAINING RING	1		
520	LP1002020018-052	10103CD-020001	齿圈	SPROCKET	1		
530	LP1002020018-053	10103-020006	螺母	NUT	1		
540	LP1002020018-054	PKB041-1	螺塞	PLUG	4		
550	LP1002020018-055	10103-022003	垫片	GASKET	4		
560	LP1002020018-056	10103-022004	二级轴承套	BEARING SLEEVE	4		
570	LP1002020018-057	EP283520-1	滚针轴承	BEARING	4		
580	LP1002020018-058	10103022002	四星齿轮	GEAR	4		
590	LP1002020018-059	10103-022005	四星压片	TABLET	1		
600	LP1002020018-060	FCB0612-1	内六角沉头螺钉	SCREW	4		

↔ 可互换 : ≠ 不可互换 : ← 以新换旧 : → 以旧换新

M001

标签
LABEL

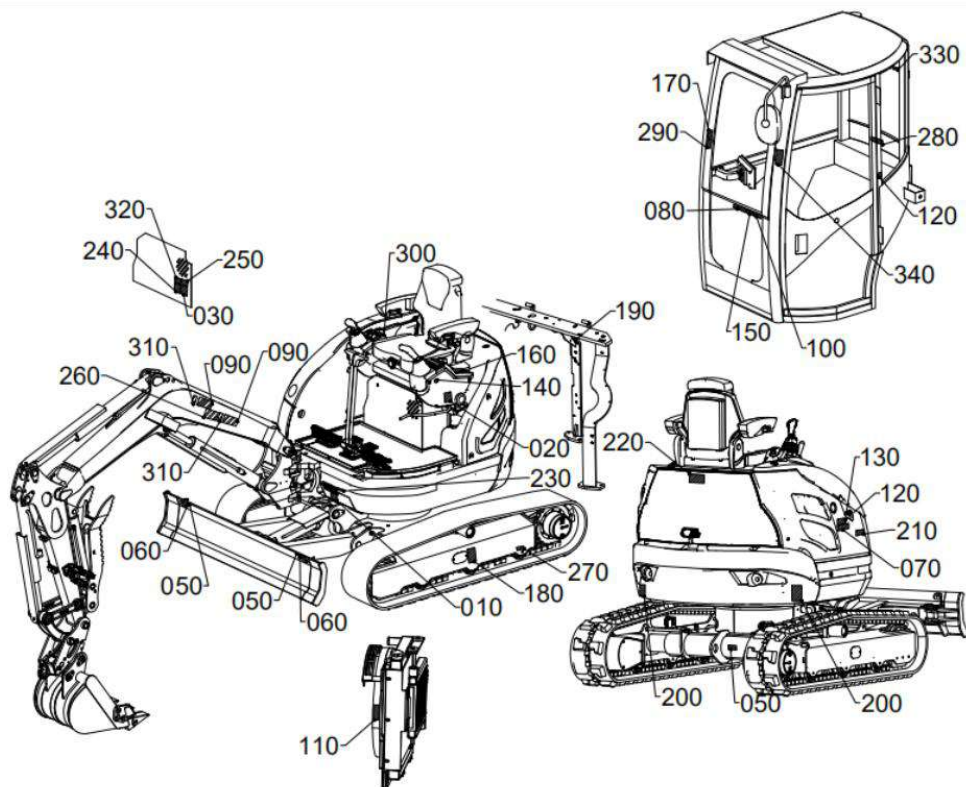


序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S. No.	互换性 I. C.	备注 REMARKS
010	LP0116011957		标签	LABEL	1		
020	LP0116011958		安全锁标签	SAFETY LOCK LABELS	1		
030	LP0116011993		计算标签	LABEL	1		
040	LP0116011987		注意标签	LABEL, CAUTION	1		
050	LP0116011962		标签	LABEL	3		
060	LP0116011963		标签	LABEL	4		
070	LP0116011970		注意标签	LABEL, CAUTION	1		
080	LP0116011965		警告标签	WARNING LABELS	1		
090	LP0116011960		注意标签	LABEL, CAUTION	2		
100	LP0116011973		操作标签	OPERATION LABELS	1		
110	LP0116011988		风扇警告标签	LABEL, FAN WARNING	1		
120	LP0116011989		警告标签	WARNING LABELS	1		
130	LP0116011972		标签	LABEL	1		
140	LP0116011971		标签	LABEL	1		
150	LP0116011966		警告标签	WARNING LABELS	1		
160	LP0116011994		标签	LABEL	1		
170	LP0116011975		“小心触电”标签	LABEL	1		
180	LP0116011977		标签	LABEL	1		
190	LP0116011975		标签	LABEL	1		
200	LP0116011979		注意标签	LABEL, CAUTION	2		
210	LP0116011974		标签	LABEL	1		
220	LP0116011981		注意标签	LABEL, CAUTION	1		
230	LP0116011983		标签	LABEL	1		
240	LP0116011995		标签	LABEL	1		
250	LP0116011980		注意标签	LABEL, CAUTION	1		
260	LP0116011996		标签	LABEL	1		
270	LP0116011982		注意标签	LABEL, CAUTION	1		
280	LP0116011984		注意标签	LABEL, CAUTION	1		
290	LP0116011969		警告标签	WARNING LABELS	1		
300	LP0116011997		操作标签	OPERATION LABELS	1		

↔ 可互换 ; ≠ 不可互换 ; ← 以新换旧 ; → 以旧换新

M002

标签
LABEL

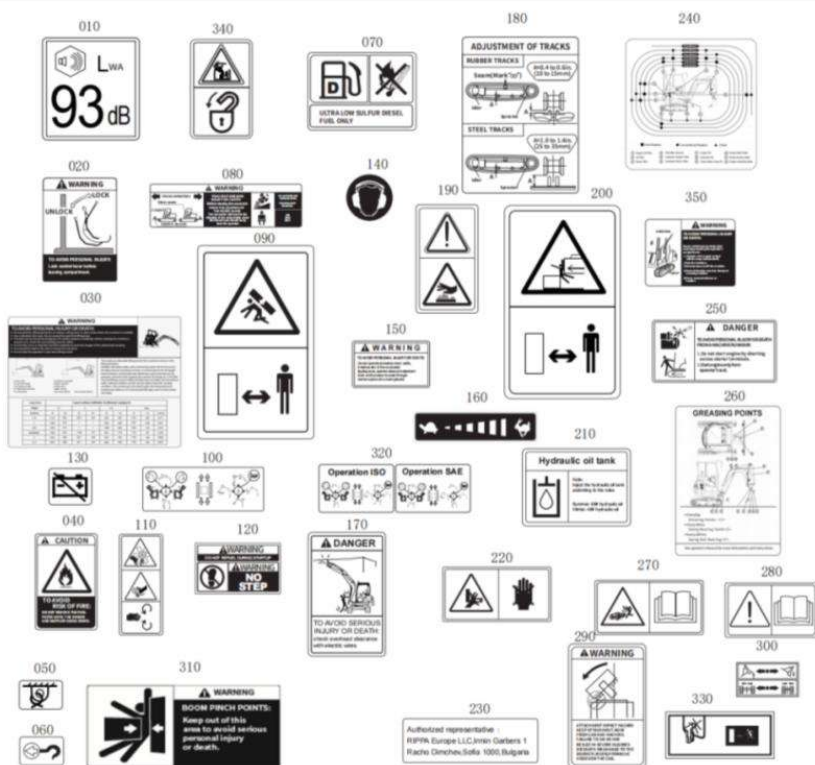

序号 REF. No.	存货编码 INV. No.	零件号 PART No.	零件名称	PART NAME	数量 Q'TY/S.N o.	互 换 性 I. C.	备注 REMARKS
010	LP0116011957		标签	LABEL	1		
020	LP0116011958		安全锁标签	SAFETY LOCK LABELS	1		
030	LP0116011993		计算标签	LABEL	1		
040	LP0116011987		注意标签	LABEL, CAUTION	1		
050	LP0116011962		标签	LABEL	3		
060	LP0116011963		标签	LABEL	4		
070	LP0116011970		注意标签	LABEL, CAUTION	1		
080	LP0116011965		警告标签	WARNING LABELS	1		
090	LP0116011960		注意标签	LABEL, CAUTION	2		
100	LP0116011973		操作标签	OPERATION LABELS	1		
110	LP0116011988		风扇警告标签	LABEL, FAN WARNING	1		
120	LP0116011989		警告标签	WARNING LABELS	1		
130	LP0116011972		标签	LABEL	1		
140	LP0116011971		标签	LABEL	1		
150	LP0116011966		警告标签	WARNING LABELS	1		
160	LP0116011994		标签	LABEL	1		
170	LP0116011975		“小心触电”标签	LABEL	1		
180	LP0116011977		标签	LABEL	1		
190	LP0116011975		标签	LABEL	1		
200	LP0116011979		注意标签	LABEL, CAUTION	1		
210	LP0116011974		标签	LABEL	1		
220	LP0116011981		注意标签	LABEL, CAUTION	1		
230	LP0116011983		标签	LABEL	1		
240	LP0116011995		标签	LABEL	1		
250	LP0116011980		注意标签	LABEL, CAUTION	1		
260	LP0116011996		标签	LABEL	1		
270	LP0116011982		注意标签	LABEL, CAUTION	1		
280	LP0116011984		注意标签	LABEL, CAUTION	1		
290	LP0116011969		警告标签	WARNING LABELS	1		
300	LP0116011997		操作标签	OPERATION LABELS	1		

↔ 可互换 ; ✖ 不可互换 ; ← 以新换旧 ; → 以旧换新

